GEHL®

service parts manual

FORM NO. 2132G

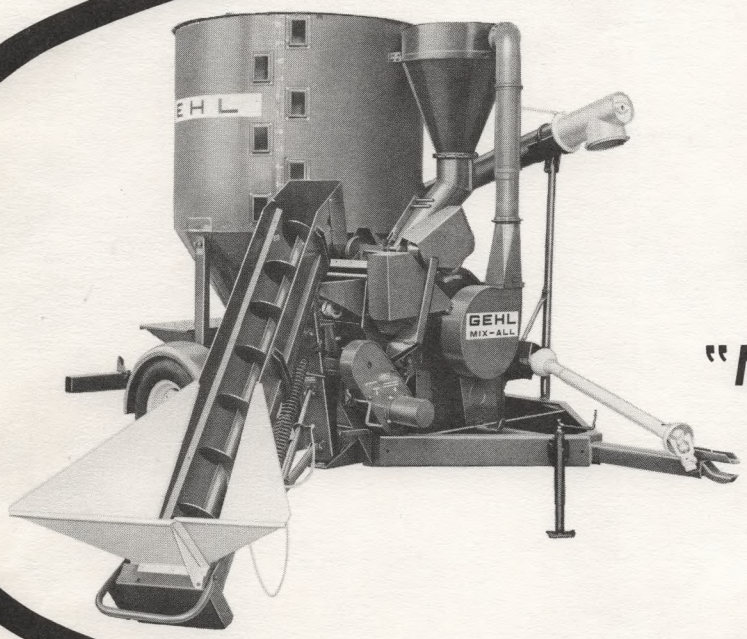

65 MX

"Mix-All" Feedmaker
With Attachments

GEHL COMPANY
WEST BEND, WISCONSIN 53095 U.S.A.

NUMBER 120
DATE Nov. 14, 1969
MACHINE 65MX
MANUAL NO. 2132G

service parts bulletin

SUBJECT: "Write-In" corrections for 65MX Service Parts Manual

REVISION	PAGE	REF. NO.	PART NO.	PART NAME	NO. REQ.
Change	14	18		(Next to reference number 15) To Read 12	
Change	26	42		042259 To Read 044259	
Change	28	5		9H186 To Read 9H186A	

Mr. Dealer:

Give complete information when ordering service parts. Always give complete part number and also complete part description. The model number and serial number should always be given. Numbers for the Mixer are stamped on a plate located where the Drawbar Hitch joins the Frame. Hammer Mill numbers are located on the Rear Frame Sheet. Crusher numbers are located on the Roller Cover. Swinging Auger Feeder numbers are located on the right side of the Pivot Frame and Traveling Feeder numbers are located on the left Hopper side.

"Right" and "Left" are determined when standing at the front (Drawbar end) of the Mixer. The Mill Feeder is on the Left side and the Mixer Unloading Conveyor on the Right side.

Note: You will find common hardware such as nuts, bolts, etc. listed but not illustrated in parts lists in this manual. Hardware listed with the particular parts is for mounting purposes and is not included when the part is ordered for replacement.

Gehl Company reserves the right to make changes or improvements in the design or construction of any part without incurring the obligation to install such changes on any unit previously delivered.

TABLE OF CONTENTS

Introduction	3
Frame	4-5
Tank and Hopper	6-8
Transmission	9-10
Mixer Drive	11-12
Unloading Conveyor	13
Conveyor Drive	14-16
Mill Drive (Used after Serial #82828)	17-18
Mill Drive (Used before Serial #82829)	19
Mill Frame	20-21
Mill Conveyor and Blower	22-23
Mill Cylinder	24
Feeder Drive	25-27
Feeder Trough (Used after Serial #15000)	28-29
Feeder Trough (Used before Serial #15001)	30-31
Crusher	32-33
Fiberglass Tank	34-35
Support and Drive	36-37
Discharge Pipe	38
Molasses Pump	39
#200 DFA Traveling Feeder	40-42
#200 DF Traveling Feeder	43
Hopper	44
Mixer Direct Drive	45
Roller Mill Mounting (600)	46
Roller Mill Mounting (F20S6)	47
Universal Drives	48-50
Accessories	51
Numerical Index	52-56

SAFETY FIRST

KEEP ALL SHIELDS IN PLACE.
STOP MACHINE TO ADJUST AND OIL.
WHEN MECHANISM BECOMES CLOGGED, DISENGAGE POWER BEFORE CLEANING.
KEEP HANDS, FEET AND CLOTHING AWAY FROM POWER-DRIVEN PARTS.
KEEP OFF IMPLEMENT UNLESS SEAT OR PLATFORM IS PROVIDED.
KEEP OTHERS OFF.

65MX - FRAME

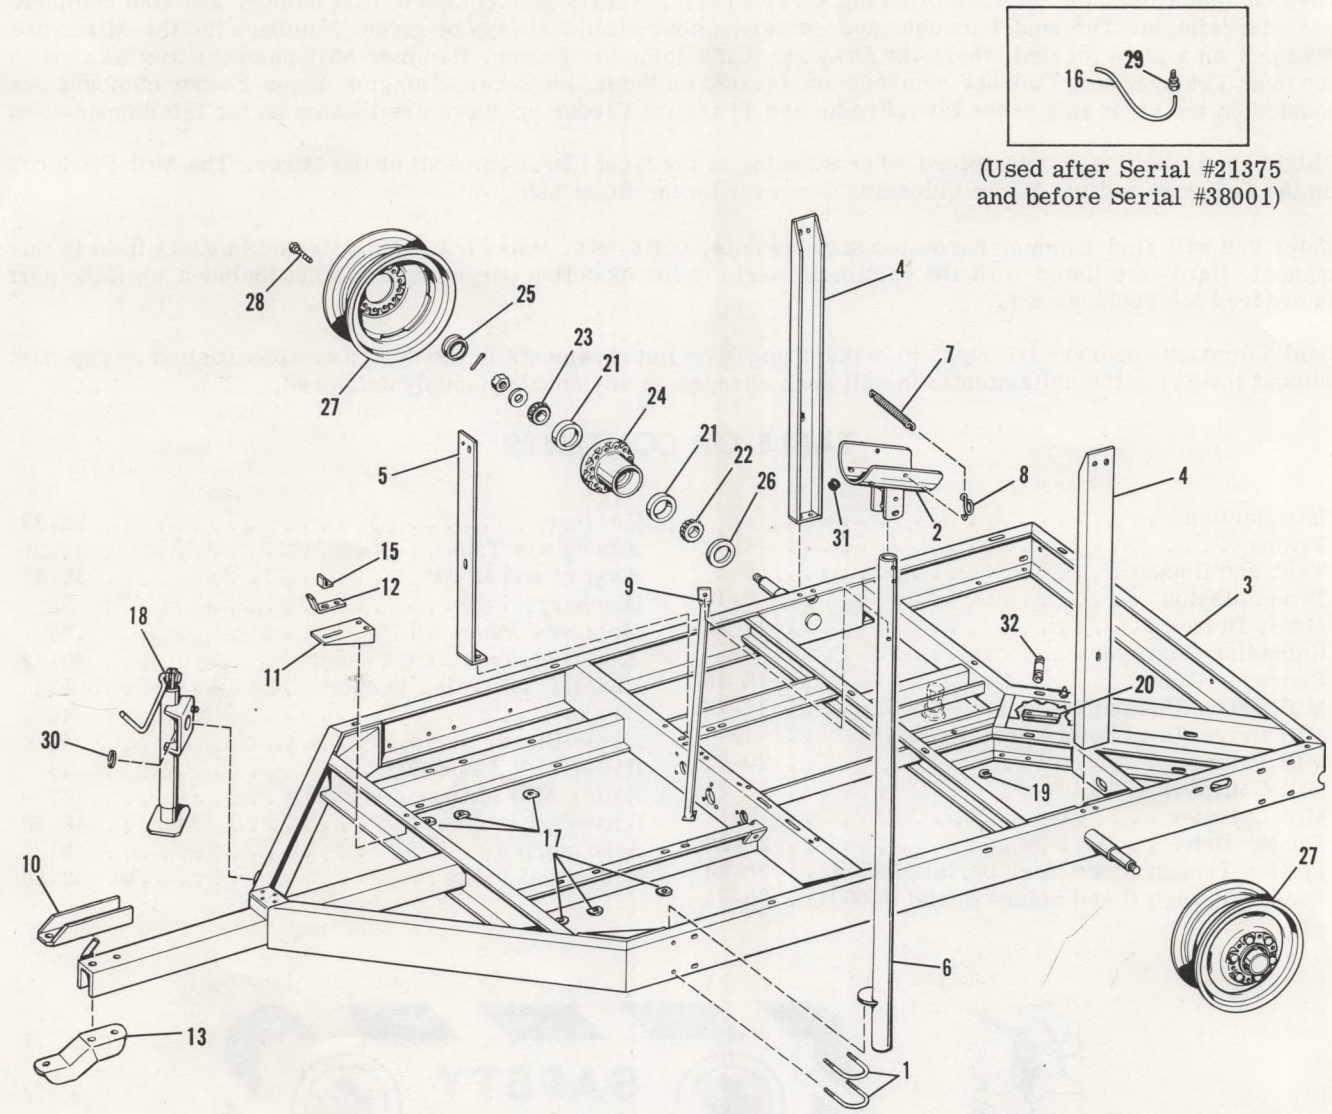

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

Ref. No.	Part No.	Part Name	No. Req.
1	6H46E	U-Bolt	2
	653010	Hexagon Nut - 3/8	4
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	4
2	6H51B[A]	Conveyor Rest (Used before Serial #35001)	1
	042217	Conveyor Rest (Used after Serial #35000)	1
	650122	Hex.Hd.Cap Screw 1/2 x 3-1/4	2
	653077	Hexagon Lock Nut - 1/2	2
	654009	Plain Washer - 1/2	2
3	17H136A	Main Frame	1
	655013	Cotter Pin 1/8 x 2	2
	650060	Hex.Hd.Cap Screw 3/8 x 1	4
	650062	Hex.Hd.Cap Screw 3/8 x 1-1/4	5
	650106	Hex.Hd.Cap Screw 1/2 x 1-1/4	6
	653010	Hexagon Nut - 3/8	9
	653018	Hexagon Nut - 1/2	6
	653090	Castellated Nut - 7/8 N.F.	2
	654006	Plain Washer - 3/8	19
	654015	Plain Washer - 7/8	2
	654026	Lock Washer - 3/8	9
	654030	Lock Washer - 1/2	6
4	17H159A[B]	Mixer Tank Support - Side (Used before Serial #35001)	2
	042066	Mixer Tank Support - Side (Used after Serial #35000)	2
	650031	Hex.Hd.Cap Screw 5/16 x 1-1/2	1
	650060	Hex.Hd.Cap Screw 3/8 x 1	4
	650062	Hex.Hd.Cap Screw 3/8 x 1-1/4	4
	653010	Hexagon Nut - 3/8	10
	653073	Hexagon Lock Nut - 5/16	1
	654004	Plain Washer - 5/16	1
	654006	Plain Washer - 3/8	6
	654026	Lock Washer - 3/8	10
5	17H160A	Mixer Tank Support - Front (Used before Serial #35001)	1
	042064	Mixer Tank Support - Front (Used after Serial #35000)	1
	650060	Hex.Hd.Cap Screw 3/8 x 1	2
	650062	Hex.Hd.Cap Screw 3/8 x 1-1/4	2
	653010	Hexagon Nut - 3/8	2
	654006	Plain Washer - 3/8	3
	654026	Lock Washer - 3/8	2
6	6H173	Conveyor Post (Used before Serial #35001)	1
	042215	Conveyor Post (Used after Serial #35000)	1
7	6H175	Conveyor Hold-Down Spring	1
8	6H176	Hold-Down Spring Hook	1
9	6H179	Conveyor Post Brace (Used before Serial #35001)	1
	042221	Conveyor Post Brace (Used after Serial #35000)	1
	650119	Hex.Hd.Cap Screw 1/2 x 2-3/4	1
	653018	Hexagon Nut - 1/2	1
	654030	Lock Washer - 1/2	1
10	17H275A	Drawbar Hitch - Upper (Used before Serial #20551)	1
	R13139A	Drawbar Hitch - Upper (Used after Serial #20550)	1
	650142	Hex.Hd.Cap Screw 5/8 x 1-1/2	2
	653080	Hexagon Lock Nut - 5/8	2
11	17H331	Screen Bracket	1
	650060	Hex.Hd.Cap Screw 3/8 x 1	3
	650062	Hex.Hd.Cap Screw 3/8 x 1-1/4	1
	653010	Hexagon Nut - 3/8	4
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	4
12	17H332	Screen Clamp	1
13	17H340[C]	Drawbar Hitch - Lower (Used before Serial #16051)	1
	R13140A	Drawbar Hitch - Lower (Used after Serial #16050 and before Serial #20551)	1
	17H340A	Drawbar Hitch - Lower (Used after Serial #20550)	1
14	17H341[D]	Universal Drive Rest (Used before Serial #15301)	1
15	17H362	Screen Retainer	1
16	17H392	Grease Tube (Used after Serial #21375 and before Serial #38001)	1
17	D9117	Washer	6
18	R13033D[E]	Hitch Jack	1
19	042826	Transmission Shim Washer (Used after Serial #38000)	3
20	044413	Grease Fitting Bracket (Used after Serial #38000)	1
	57[illegible]6	Grease Fitting	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
21	520025	Bearing Cup	4
22	520027	Bearing Cone	2
23	520028	Bearing Cone	2
24	550002	Wheel Hub. (Includes two 520025)	2
25	550018	Dust Cap	2
26	550022	Grease Seal	2
27	550033	Drop Center Wheel (For 15" tires)	2
28	550041	Wheel Bolt	12
29	580073	Male Tube Connector (Used after Serial #21375 and before Serial #38001)	1
30	620005	Retaining Ring	1
31	620028	Conveyor Rest Grommet	6
32	660033	Pipe Nipple (Used after Serial #38000)	1

[A] For Replacement, Order 042217.
[B] For Replacement, Order 042066.
[C] For Replacement, Order R13140A.
[D] For Replacement, Order 17H275A.
[E] To Service Jack Latch, Order Latch Service Kit #620009.

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - TANK AND HOPPER

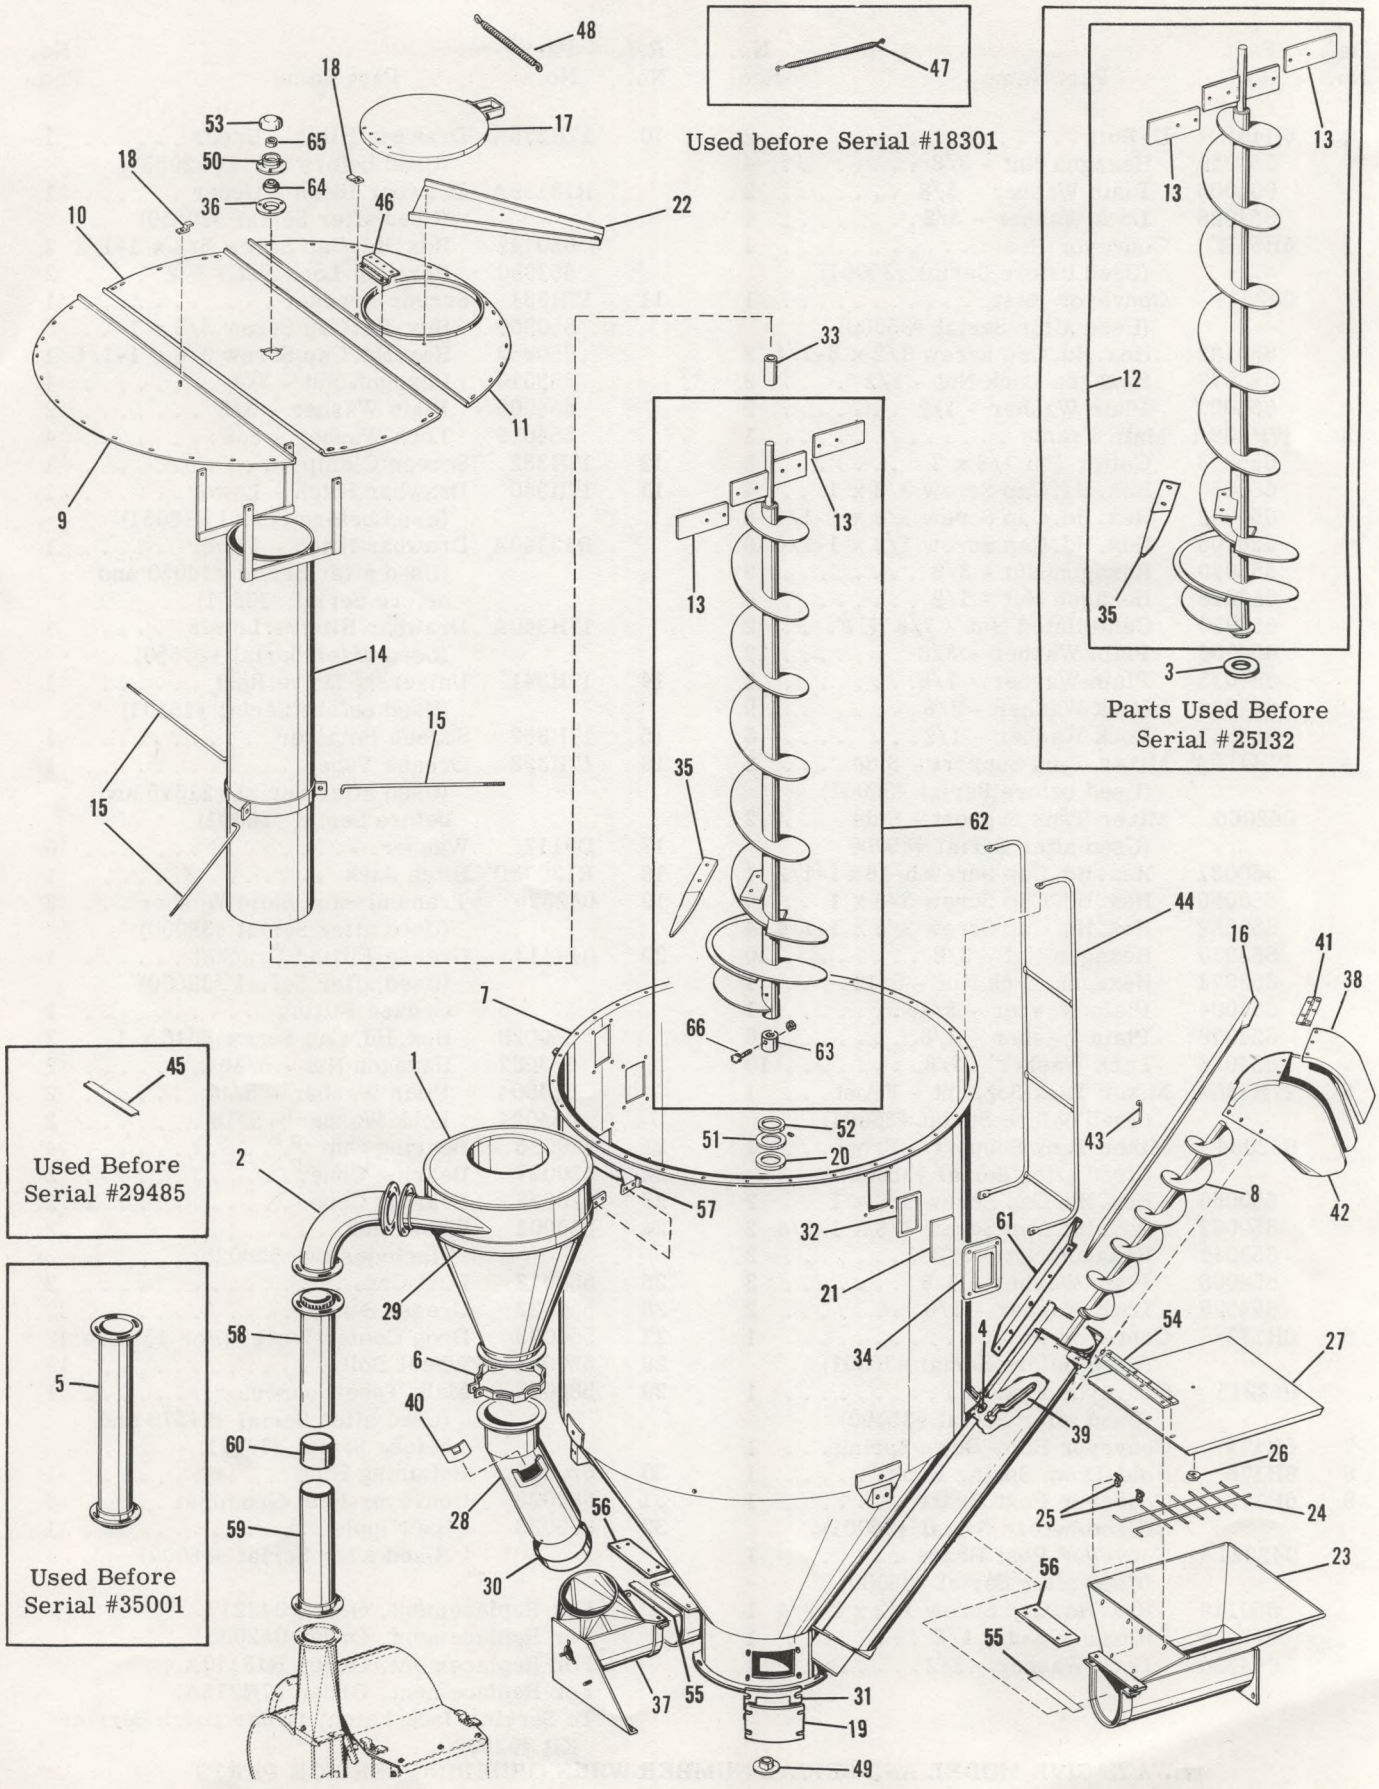

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - TANK AND HOPPER

Ref. No.	Part No.	Part Name	No. Req.
1	6H1L	Dust Collector	1
2	6H14D	Dust Collector Elbow	1
	650005	Hex. Hd. Cap Screw 1/4 x 3/4	8
	653005	Hexagon Nut - 1/4	8
	654002	Plain Washer - 1/4	16
	654022	Lock Washer - 1/4	8
3	3H55A	Mixer Auger Shim (Used before Serial #25132)	5
4	7K73	Washer	4
5	6H90C	Blower Pipe (29") (Used before Serial #35001)	1
6	6H129	Attachment Clamp	1
	650036	Hex. Hd. Cap Screw 5/16 x 2	1
	653007	Hexagon Nut - 5/16	2
7	17H147A[A]	Mixer Tank (Used before Serial #25132)	1
	17H147C	Mixer Tank (Used after Serial #25131 and before Serial #35001)	1
	042233	Mixer Tank (Used after Serial #35000)	1
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	5
	653007	Hexagon Nut - 5/16	2
	653010	Hexagon Nut - 3/8	5
	653094	Wing Nut - 5/16	4
	654004	Plain Washer - 5/16	4
	654006	Plain Washer - 3/8	10
	654026	Lock Washer - 3/8	5
8	17H148B	Discharge Conveyor (Used before Serial #35001)	1
	655507	Woodruff Key 5/16 x 1	1
	655020	Cotter Pin 3/16 x 1-1/2	2
	042218	Discharge Conveyor (Used after Serial #35000 and before Serial #38001)	1
	655507	Woodruff Key 5/16 x 1	1
	655020	Cotter Pin 3/16 x 1-1/2	2
	044508	Discharge Conveyor (Used after Serial #38000)	1
	655507	Woodruff Key 5/16 x 1	1
9	17H150	Mixer Cover - Front	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	12
	653005	Hexagon Nut - 1/4	12
	653007	Hexagon Nut - 5/16	1
	654002	Plain Washer - 1/4	12
	654022	Lock Washer - 1/4	12
	654024	Lock Washer - 5/16	1
10	17H151	Mixer Cover - Center	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	10
	653005	Hexagon Nut - 1/4	10
	654002	Plain Washer - 1/4	10
	654022	Lock Washer - 1/4	10
11	17H152[B]	Mixer Cover - Rear (Used before Serial #18301)	1
	17H152A	Mixer Cover - Rear (Used after Serial #18300)	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	11
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	3
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	650267	Truss Head Screw 5/16 x 5/8	1
	653005	Hexagon Nut - 1/4	11
	653007	Hexagon Nut - 5/16	7
	654002	Plain Washer - 1/4	11
	654004	Plain Washer - 5/16	5
	654022	Lock Washer - 1/4	12
	654024	Lock Washer - 5/16	6
12	17H153B	Mixer Auger (Includes two 17H154A and one 17H274A) (Used before Serial #25132)	1
	17H153C	Mixer Auger (Includes two 17H154A and one 17H274A) (Used after Serial #25131 and before Serial #38001)	1
13	17H154A	Mixer Paddle	2
14	17H155	Mixer Tube	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	4
	653006	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
15	17H156	Mixer Tube Guide	3
	655008	Cotter Pin 1/8 x 1-1/4	3
	653018	Hexagon Nut - 1/2	6
	654030	Lock Washer - 1/2	3
16	17H157B	Shut-Off Slide	1
17	17H158A	Mixer Cover Lid (Used before Serial #18301)	1
	17H158B	Mixer Cover Lid (Used after Serial #18300)	1
18	17H161	Mixer Cover Clip	2
	653007	Hexagon Nut - 5/16	1
	654024	Lock Washer - 5/16	1
19	17H162[C]	Clean-Out Cover (Used before Serial #18301)	1
	17H162A	Clean-Out Cover (Used after Serial #18300 and before Serial #38001)	1
	040316	Clean-Out Cover (Used after Serial #38000)	1
20	17H163A	Auger Seal	1
21	17H164A	Inspection Window	7
22	6H177	Conveyor Hanger Arm (Used before Serial #35001)	1
	042211	Conveyor Hanger Arm (Used after Serial #35000 and before Serial #38001)	1
	044397	Conveyor Hanger Arm (Used after Serial #38000)	1
23	17H177A	Concentrate Hopper	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	4
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	3
	653007	Hexagon Nut - 5/16	4
	653010	Hexagon Nut - 3/8	3
	654004	Plain Washer - 5/16	2
	654006	Plain Washer - 3/8	9
	654024	Lock Washer - 5/16	4
	654026	Lock Washer - 3/8	3
24	17H178A	Hopper Guard (Used before Serial #17551)	1
	17H178B	Hopper Guard (Used after Serial #17550)	1
25	17H179A	Hopper Guard Clip	2
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
26	17H180A	Hopper Guard Catch	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	1
	653073	Hexagon Lock Nut - 5/16	1
27	17H181A	Concentrate Hopper Cover	1

PARTS LIST CONTINUED ON NEXT PAGE

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - TANK AND HOPPER

Ref. No.	Part No.	Part Name	No. Req.
28	17H187A[D]	Inlet Pipe . . . . . (Used before Serial #16801)	1
	17H187B	Inlet Pipe . . . . . (Used after Serial #16800)	1
29	17H188	Dust Collector Clamp	1
	650029	Hex. Hd. Cap Screw 5/16 x 1-1/4	4
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	4
30	17H189[E]	Pipe Sealer Tape . . . . . (Used before Serial #17582)	1
	17H189A	Pipe Seal . . . . . (Used after Serial #17581)	1
31	17H190	Clean-Out Cover Gasket . . . . . (Used before Serial #18301)	1
	17H190A	Clean-Out Cover Gasket . . . . . (Used after Serial #18300)	1
32	17H191A	Window Gasket	7
33	17H244A	Cover Spacer. . . . . (Used before Serial #25132)	1
	17H244B	Cover Spacer. . . . . (Used after Serial #25131)	1
34	17H245	Inspection Window Frame	7
35	17H274	Agitator Paddle . . . . . (Used before Serial #16051)	1
	17H274A	Agitator Paddle . . . . . (Used after Serial #16050)	1
36	H275	Bearing Retainer . . . . . (Two required before Serial #25132)	1
	652026	Carriage Bolt 5/16 x 3/4	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
37	17H323	Intake Trough	1
	650028	Hex. Hd. Cap Screw 5/16 x 1 . .	6
	653007	Hexagon Nut - 5/16.	6
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	6
38	17H327	Outlet Cover	1
39	17H328	Slide Lock	1
	650056	Hex. Hd. Cap Screw 3/8 x 3/4 .	1
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	1
40	17H329	Inspection Door . . . . . (Used before Serial #16801)	1
	17H329A	Inspection Door . . . . . (Used after Serial #16800)	1
41	17H333	Outlet Cover Hinge	1
	650267	Truss Head Screw 5/16 x 5/8 .	5
	653007	Hexagon Nut - 5/16	5
	654024	Lock Washer - 5/16	5
42	17H337	Auxiliary Conveyor Outlet . . . . (Used before Serial #35001)	1
	042225	Auxiliary Conveyor Outlet . . . . (Used after Serial #35000)	1
	650267	Truss Head Screw 5/16 x 5/8 .	6
	653007	Hexagon Nut - 5/16	10
	654004	Plain Washer - 5/16	6
	654024	Lock Washer - 5/16	6
43	17H338	Hopper Cover Catch	1
44	17H342	Ladder	1
	650028	Hex. Hd. Cap Screw 5/16 x 1 . .	1
	650032	Hex. Hd. Cap Screw 5/16 x 1-1/2	1
	653007	Hexagon Nut - 5/16	2
	653073	Hexagon Lock Nut - 5/16	1
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
45	17H348	Sealer Tape 1-1/4 x 7-1/2 . . . . (Used before Serial #29485)	2
46	17H367	Cover Lid Hinge . . . . . (Used after Serial #18300)	1
	650261	Truss Head Screw 1/4 x 1/2 .	6
	653005	Hexagon Nut - 1/4	6
	654002	Plain Washer - 1/4	2
	654022	Lock Washer - 1/4	6
47	H474	Cover Hold-Down Spring . . . . . (Used before Serial #18301)	1
48	17H390	Cover Hold-Down Spring . . . . . (Used after Serial #21375)	1
49	17H416	Transmission Bearing Shield . . (Used after Serial #25131)	1
50	17H417	Bearing Retainer . . . . . (Used after Serial #25131)	1
51	17H418	Washer . . . . . (Used after Serial #25131)	1
52	17H419	Set Collar . . . . . (Used after Serial #25131)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
53	17H421	Bearing Shield Cap . . . . . (Used after Serial #25131)	1
54	Y15075	Hopper Cover Hinge . . . . . (Used before Serial #25132)	1
	17H394	Hopper Cover Hinge . . . . . (Used after Serial #25131)	1
	650269	Truss Head Screw 5/16 x 3/4	8
	653007	Hexagon Nut - 5/16	8
	654004	Plain Washer - 5/16	8
	654024	Lock Washer - 5/16	8
55	040886	Trough Seal. . . . . (Used after Serial #29484)	2
56	040887	Sealer Plate . . . . . (Used after Serial #29484)	2
57	041207[F]	Dust Collector Support . . . . . (Used after Serial #32625 and before Serial #36501)	1
	042451	Dust Collector Support . . . . . (Used after Serial #36500)	1
58	042068	Blower Pipe - Upper. . . . . (Used after Serial #35000)	1
59	042070	Blower Pipe - Lower . . . . . (Used after Serial #35000)	1
60	042072	Pipe Sealer . . . . . (Used after Serial #35000)	1
61	042223	Auxiliary Trough Cover . . . . . (Used after Serial #35000)	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	8
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	8
62	044673	Mixer Auger (Includes Two 17H154A and One 17H274A) (Used after Serial #38000) . . .	1
	650060	Hex. Hd. Cap Screw 3/8 x 1 . .	4
	650104	Hex. Hd. Cap Screw 1/2 x 1 . .	2
	653010	Hexagon Nut - 3/8	4
	653018	Hexagon Nut - 1/2	2
	654026	Lock Washer - 3/8	4
	654030	Lock Washer - 1/2	2
63	044674	Spline Coupling . . . . . (Used after Serial #38000)	1
64	520063	Ball Bearing	1
65	520084	Bearing Collar.	1
66	650340	Spline Coupling Bolt 1/2 x 4 . . .	1
	653017	Hexagon Nut - 1/2	1
	654029	Lock Washer - 1/2	1

[A] For Replacement, Order 17H147C w/One 17H418, One 17H419 and One 17H163A.
[B] For Replacement, Order 17H152A.
[C] For Replacement, Order 040316.
[D] For Replacement, Order 17H187B.
[E] For Replacement, Order 17H189A.
[F] For Replacement, Order 042451.

NOTE: To order complete set of decals for #65 MX with Steel Tank, specify decal kit #610017 for machines before serial #25856. Specify decal kit #610259 for machines after serial #25855.

NOTE: See page 34 for fiberglass tank and component parts.

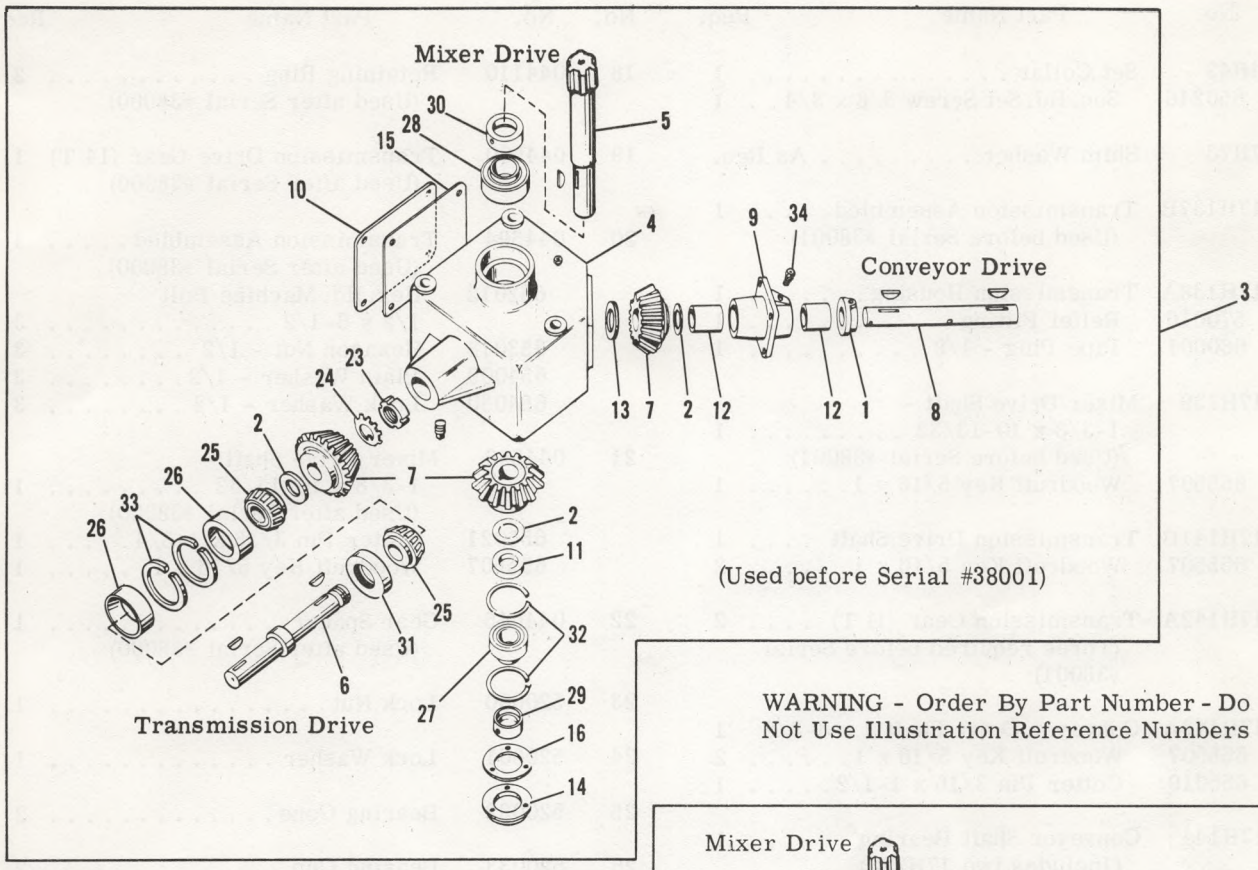

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

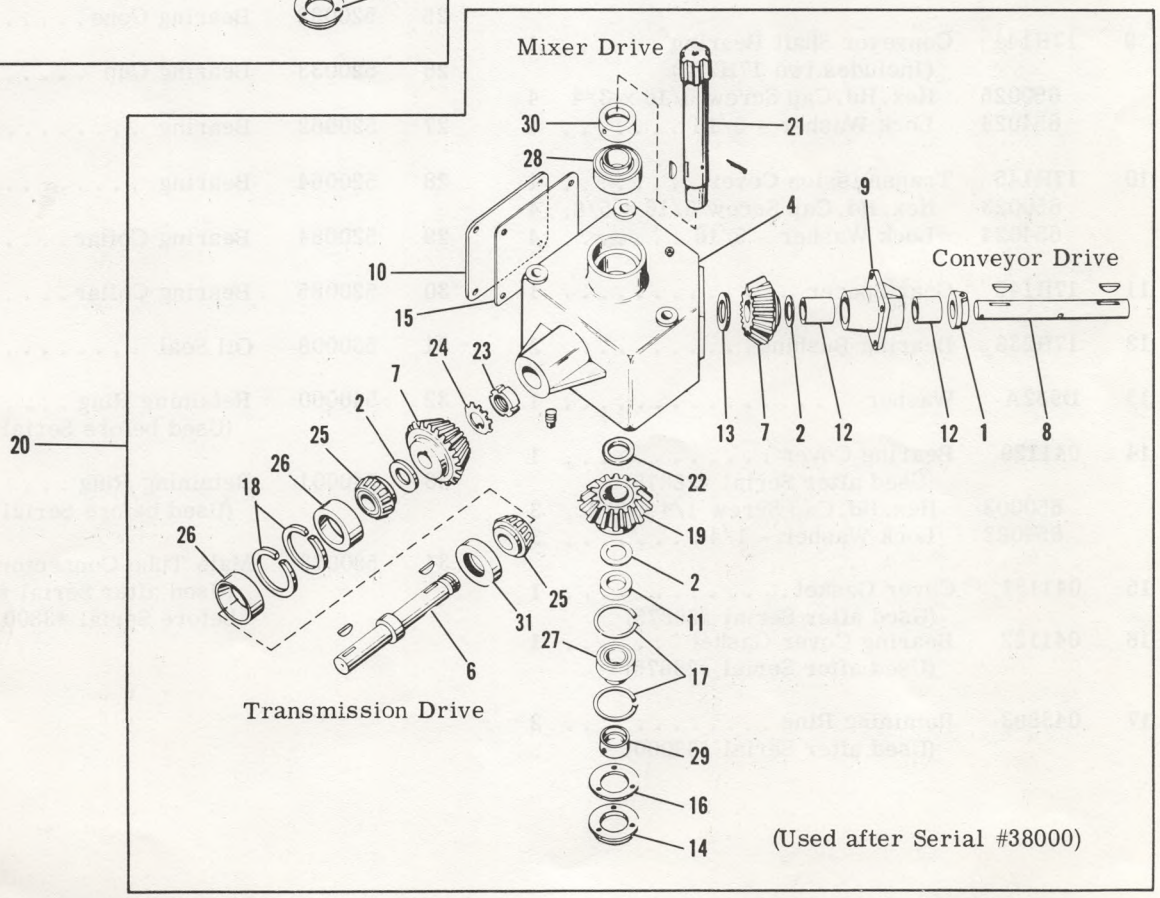

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - TRANSMISSION

Ref. No.	Part No.	Part Name	No. Req.
1	4H42	Set Collar	1
	650216	Soc. Hd. Set Screw 3/8 x 3/4	1
2	7H73	Shim Washer	As Req.
3	17H137B	Transmission Assembled (Used before Serial #38001)	1
4	17H138A	Transmission Housing	1
	570016	Relief Fitting	1
	660001	Pipe Plug - 1/8	1
5	17H139	Mixer Drive Shaft - 1-3/8 x 10-13/32 (Used before Serial #38001)	1
	655507	Woodruff Key 5/16 x 1	1
6	17H141B	Transmission Drive Shaft	1
	655507	Woodruff Key 5/16 x 1	2
7	17H142A	Transmission Gear (14 T) (Three required before Serial #38001)	2
8	17H143A	Conveyor Drive Shaft 1 x 8-3/8	1
	655507	Woodruff Key 5/16 x 1	2
	655019	Cotter Pin 3/16 x 1-1/2	1
9	17H144	Conveyor Shaft Bearing (Includes two 17H238)	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	654024	Lock Washer - 5/16	4
10	17H145	Transmission Cover	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8.	4
	654024	Lock Washer - 5/16	4
11	17H146	Gear Spacer	1
12	17H238	Bearing Bushing	2
13	D932A	Washer	1
14	041129	Bearing Cover (Used after Serial #28875)	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	3
	654022	Lock Washer - 1/4	3
15	041131	Cover Gasket (Used after Serial #28875)	1
16	041132	Bearing Cover Gasket (Used after Serial #28875)	1
17	043883	Retaining Ring (Used after Serial #38000)	2
18	044110	Retaining Ring (Used after Serial #38000)	2
19	044500	Transmission Drive Gear (14 T) (Used after Serial #38000)	1
20	044594	Transmission Assembled (Used after Serial #38000)	1
	652012	Hex. Hd. Machine Bolt 1/2 x 6-1/2	3
	653018	Hexagon Nut - 1/2	3
	654009	Plain Washer - 1/2	3
	654030	Lock Washer - 1/2	3
21	044596	Mixer Drive Shaft - 1-3/8 x 10-13/32 (Used after Serial #38000)	1
	655021	Cotter Pin 3/16 x 1-3/4	1
	655507	Woodruff Key 5/16 x 1	1
22	044645	Gear Spacer (Used after Serial #38000)	1
23	520000	Lock Nut	1
24	520001	Lock Washer	1
25	520032	Bearing Cone	2
26	520033	Bearing Cup	2
27	520062	Bearing	1
28	520064	Bearing	1
29	520084	Bearing Collar	1
30	520085	Bearing Collar	1
31	530008	Oil Seal	1
32	540000	Retaining Ring (Used before Serial #38001)	2
33	540001	Retaining Ring (Used before Serial #38001)	2
34	580073	Male Tube Connector. (Used after Serial #21375 and before Serial #38001)	1

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

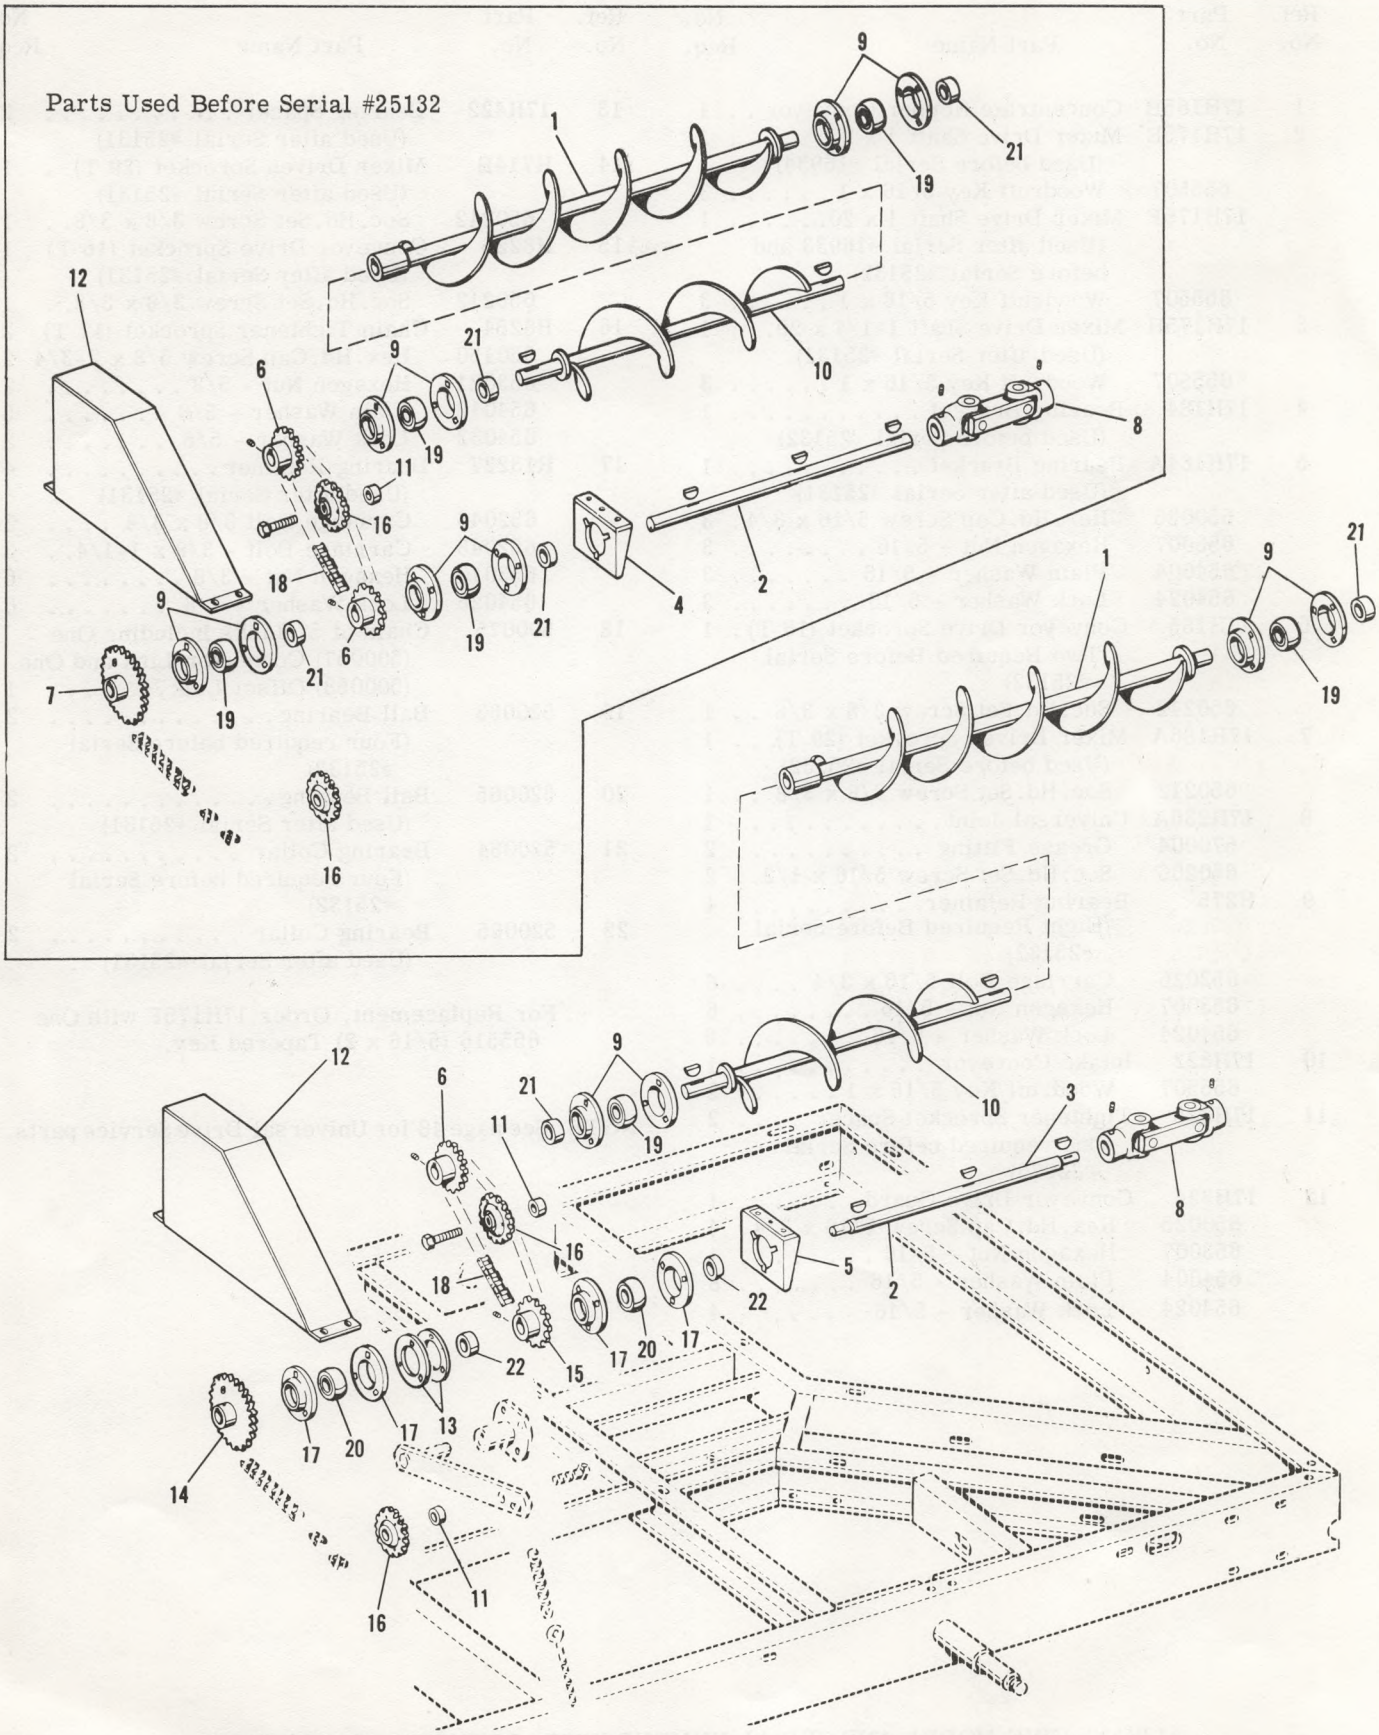

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - MIXER DRIVE

Ref. No.	Part No.	Part Name	No. Req.
1	17H165B	Concentrate Hopper Conveyor	1
2	17H175E^	Mixer Drive Shaft 1 x 20. (Used before Serial #16934)	1
	655507	Woodruff Key 5/16 x 1	3
	17H175F	Mixer Drive Shaft 1 x 20. (Used after Serial #16933 and before Serial #25132)	1
	655507	Woodruff Key 5/16 x 1	3
3	17H175H	Mixer Drive Shaft 1-1/4 x 20. (Used after Serial #25131)	1
	655507	Woodruff Key 5/16 x 1	3
4	17H184	Bearing Bracket (Used before Serial #25132)	1
5	17H184A	Bearing Bracket (Used after Serial #25131)	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4.	3
	653007	Hexagon Nut - 5/16	3
	654004	Plain Washer - 5/16	3
	654024	Lock Washer - 5/16	3
6	17H185	Conveyor Drive Sprocket (16 T). (Two Required Before Serial #25132)	1
	650212	Soc.Hd.Set Screw 3/8 x 3/8	1
7	17H186A	Mixer Driven Sprocket (29 T). (Used before Serial #25132)	1
	650212	Soc.Hd.Set Screw 3/8 x 3/8	1
8	17H236A	Universal Joint	1
	570004	Grease Fitting	2
	650206	Soc.Hd.Set Screw 5/16 x 1/2.	2
9	H275	Bearing Retainer. (Eight Required Before Serial #25132)	4
	652026	Carriage Bolt 5/16 x 3/4	6
	653007	Hexagon Nut - 5/16	6
	654024	Lock Washer - 5/16	6
10	17H322	Intake Conveyor	1
	655507	Woodruff Key 5/16 x 1	2
11	17H325	Tightener Sprocket Spacer (One required before Serial #22876)	2
12	17H334	Conveyor Drive Guard	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4.	4
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16	8
	654024	Lock Washer - 5/16	4
13	17H422	Bearing Spacer (Used after Serial #25131)	2
14	H714B	Mixer Driven Sprocket (29 T). (Used after Serial #25131)	1
	650212	Soc.Hd.Set Screw 3/8 x 3/8.	1
15	H8225	Conveyor Drive Sprocket (16 T) (Used after Serial #25131)	1
	650212	Soc.Hd.Set Screw 3/8 x 3/8.	1
16	H8254	Chain Tightener Sprocket (17 T)	2
	650150	Hex.Hd.Cap Screw 5/8 x 2-3/4	2
	653021	Hexagon Nut - 5/8	2
	654012	Plain Washer - 5/8	5
	654032	Lock Washer - 5/8	2
17	R13227	Bearing Retainer (Used after Serial #25131)	4
	652046	Carriage Bolt 3/8 x 3/4	3
	652048	Carriage Bolt - 3/8 x 1-1/4.	3
	653010	Hexagon Nut - 3/8	6
	654026	Lock Washer - 3/8	6
18	500075	Chain of 57 Links Including One (500057) Connector Link and One (500058) Offset Link	1
19	520063	Ball Bearing (Four required before Serial #25132)	2
20	520065	Ball Bearing (Used after Serial #25131)	2
21	520084	Bearing Collar (Four required before Serial #25132)	2
22	520085	Bearing Collar (Used after Serial #25131)	2

^For Replacement, Order 17H175F with One 655516 (5/16 x 2) Tapered Key.

NOTE: See page 48 for Universal Drive Service parts.

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - UNLOADING CONVEYOR

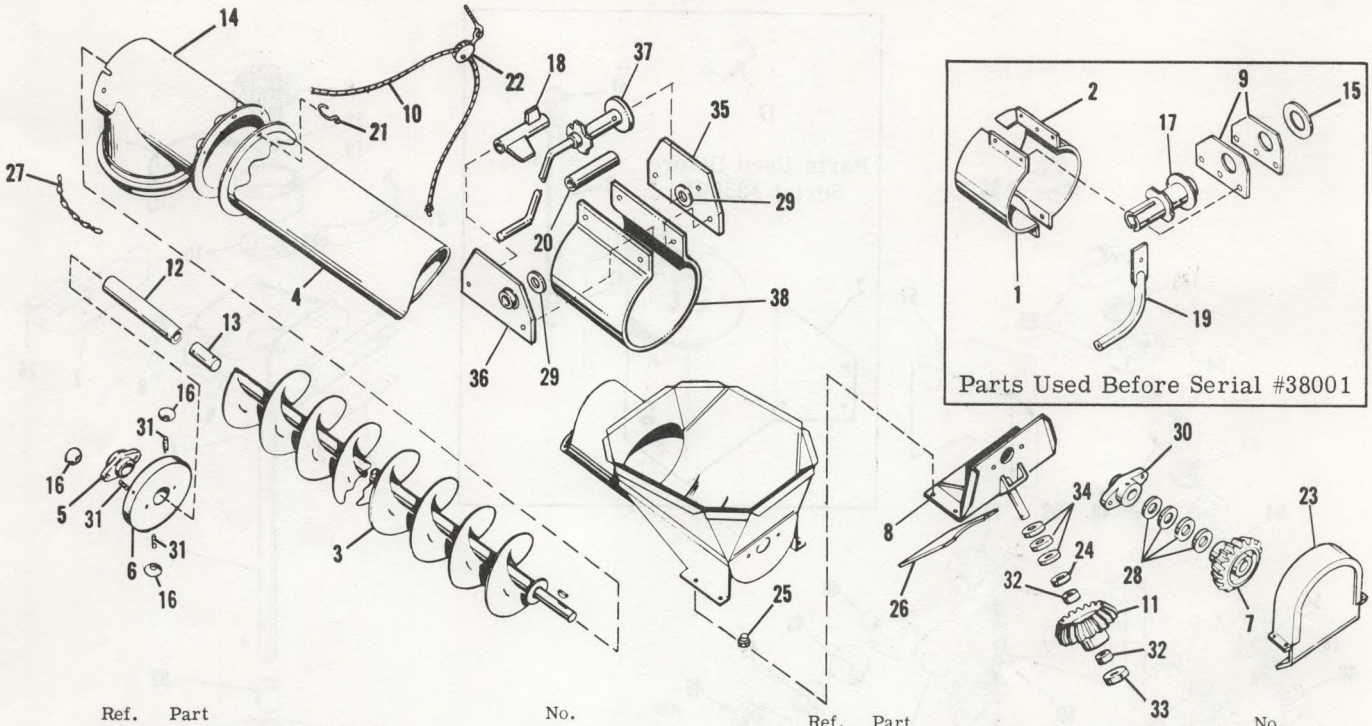

Parts Used Before Serial #38001

Ref. No.	Part No.	Part Name	No. Req.
1	6H87D	Conveyor Collar - Right (Used before Serial #38001)	1
2	6H87E	Conveyor Collar - Left (Used before Serial #38001)	1
3	6H109C	Conveyor	1
	655507	Woodruff Key 5/16 x 1	1
4	6H110C	Conveyor Housing	1
5	6H112	Conveyor Bearing	1
	570004	Grease Fitting	1
	650062	Hex.Hd.Cap Screw 3/8 x 1-1/4	2
	653010	Hexagon Nut - 3/8	2
	654026	Lock Washer - 3/8	2
6	6H113A	Conveyor Bearing Bracket	1
	650060	Hex.Hd.Cap Screw 1/4 x 1-1/4	3
	653071	Hexagon Lock Nut - 1/4	3
7	6H115A	Conveyor Driven Gear (17 T)	1
	650204	Self-Locking Soc.Hd.Set Screw 5/16 x 3/8	2
8	6H132C[A]	Conveyor Housing Base (Used before Serial #25132)	1
	6H132D	Conveyor Housing Base (Used after Serial #25131)	1
9	6H137B	Conveyor Ratchet Bracket (Used before Serial #38001)	2
10	6H142A	Conveyor Hanger Cord (15-1/2 ft.)	1
11	6H144B	Idler Gear (17 T) (Includes two U10102)	1
	570002	Grease Fitting	1
12	6H147	Conveyor Tube Extension	1
13	6H148	Conveyor Coupling	1
	650032	Hex.Hd.Cap Screw 5/16 x 1-1/2	2
	653073	Hexagon Lock Nut - 5/16	2
14	6H149	Conveyor Housing End	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	1
	650060	Hex.Hd.Cap Screw 3/8 x 1	3
	653007	Hexagon Nut - 5/16	1
	653010	Hexagon Nut - 3/8	3
	654004	Plain Washer - 5/16	1
	654024	Lock Washer - 5/16	1
	654026	Lock Washer - 3/8	3
15	6H154A	Shim Washer (Used before Serial #38001)	1
16	6H155	Bearing Bracket Washer	3
17	6H157	Ratchet (Used before Serial #38001)	1
18	6H158	Stop Dog	1
19	6H159	Ratchet Handle (Used before Serial #38001)	1
20	6H160	Conveyor Collar Spacer	3
21	6H164	Hanger Cord Hook	1

Ref. No.	Part No.	Part Name	No. Req.
22	6H165A	Conveyor Lift Pulley	1
	653018	Hexagon Nut - 1/2	2
23	6H174	Conveyor Gear Guard (Used before Serial #35001)	1
	042083	Conveyor Gear Guard (Used after Serial #35000)	1
	650024	Hex.Hd.Cap Screw 5/16 x 3/4	4
	653007	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
24	6H178	Idler Gear Spacer	1
25	6H183	Drain Plug (Used after Serial #18300)	1
26	6H186	Conveyor Gear Shield (Used after Serial #25131)	1
	650005	Hex.Hd.Cap Screw 1/4 x 3/4	3
	653071	Hexagon Lock Nut - 1/4	3
	654002	Plain Washer - 1/4	3
27	17H202	Safety Chain	1
28	D932A	Washer (Five required before Serial #23626)	4
29	H7163	Washer (Used after Serial #38000)	1
30	D9048	Conveyor Bearing	1
	570006	Grease Fitting	1
	660031	Pipe Nipple 1/8 x 3	1
	570015	90° Elbow	1
	650064	Hex.Hd.Cap Screw 3/8 x 1-1/2	2
	653010	Hexagon Nut - 3/8	2
	654026	Lock Washer - 3/8	2
31	U10023	Spring	3
32	U10102	Idler Gear Bushing	2
33	U10104	Set Collar	1
	650196	Soc.Hd.Set Screw 1/4 x 5/16	1
34	B11162	Shim Washer	3
35	040245	Conveyor Hanger Bracket - Right (Used after Serial #38000)	1
36	040246	Conveyor Hanger Bracket - Left (Used after Serial #38000)	1
37	040278	Ratchet (Used after Serial #38000)	1
38	044396	Conveyor Collar (Used after Serial #38000)	1
	650047	Hex.Hd.Cap Screw 5/16 x 4	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2

[A] For Replacement, Order 6H132D.

Note: See page 51 for Bagger and Wagon Box Spout Accessories.

65MX - CONVEYOR DRIVE

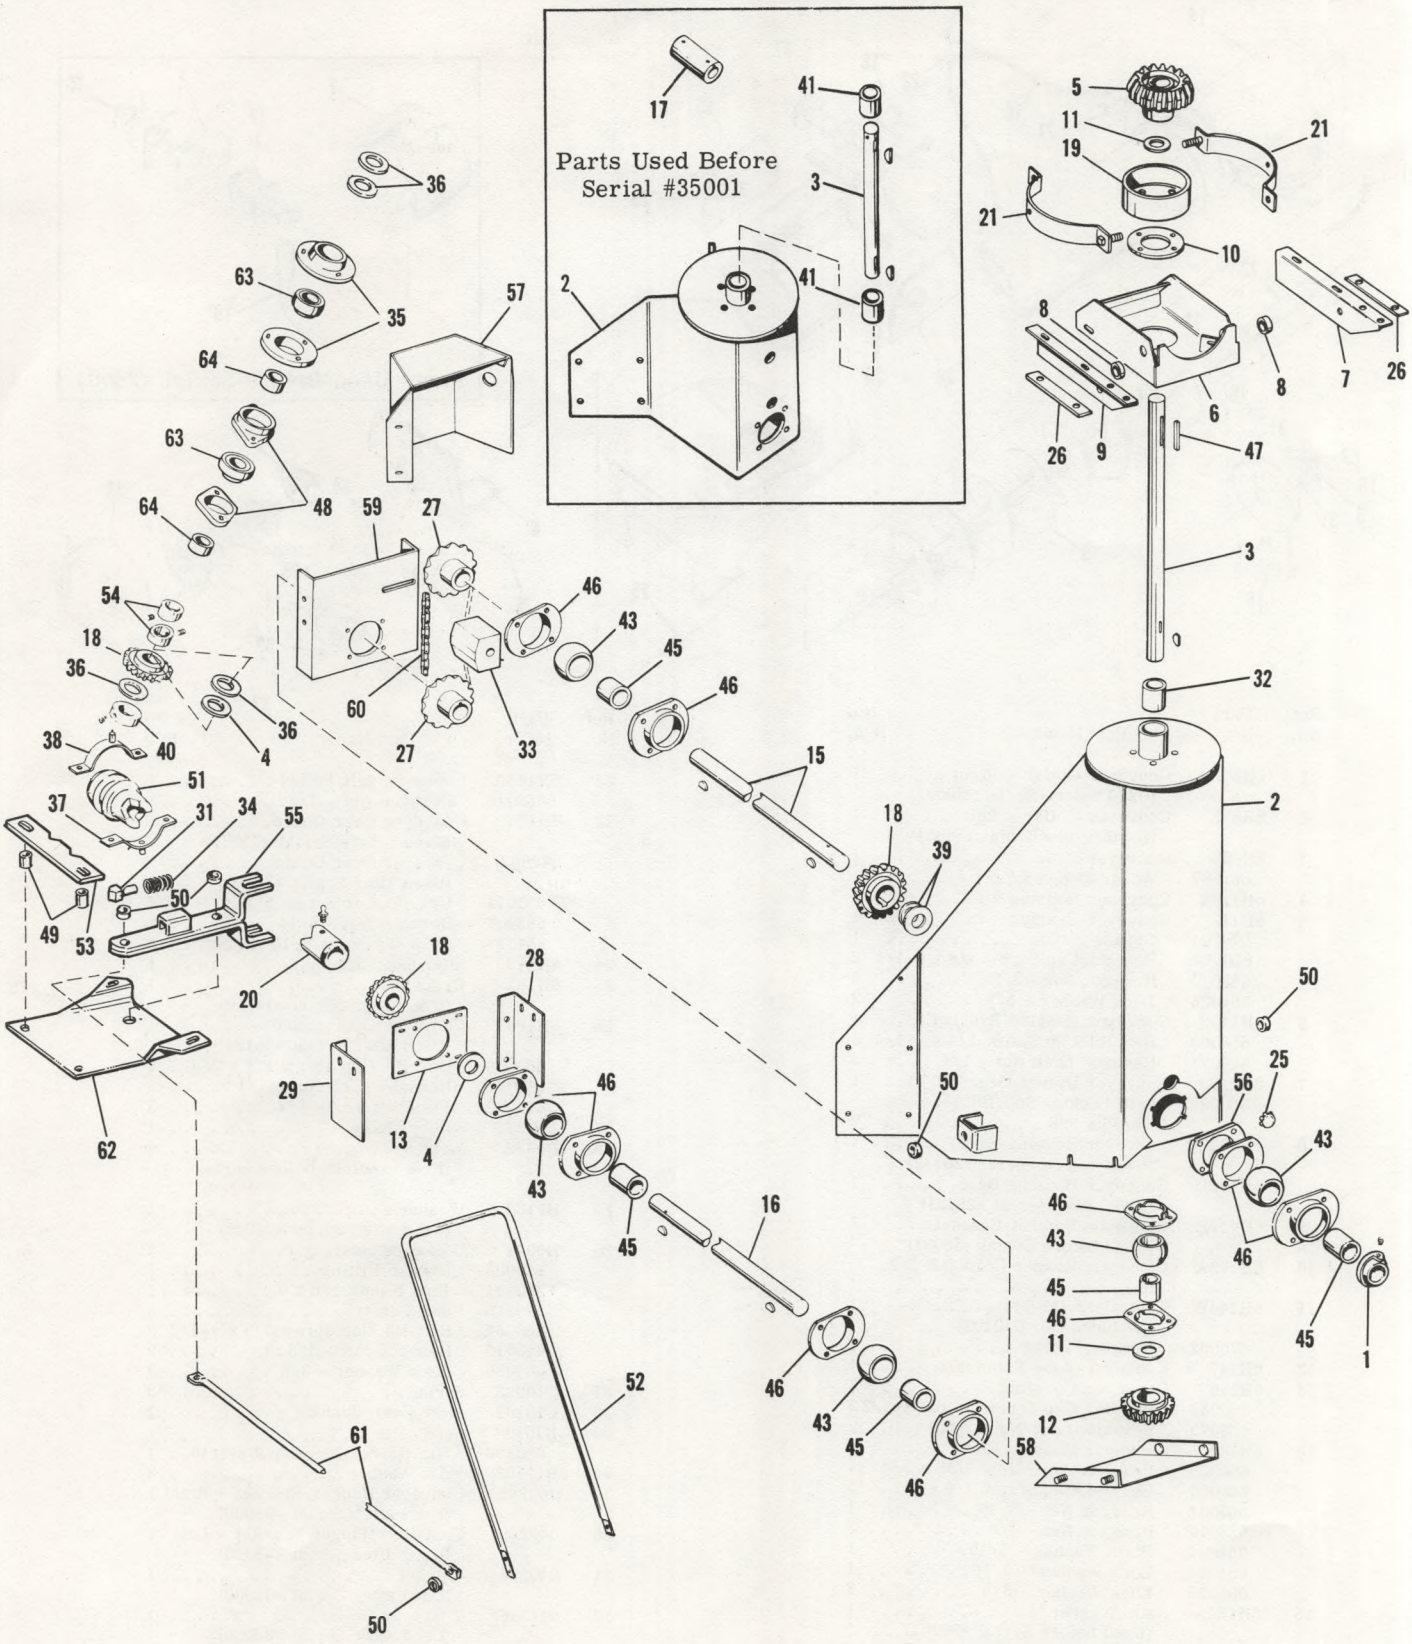

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

Ref. No.	Part No.	Part Name	No. Req.
1	4H42	Set Collar	1
	650214	Soc. Hd. Set Screw 3/8 x 1/2	1
2	6H55E	Conveyor Support (Includes Two H8352A) (Used before Serial #35001)	1
	042226	Conveyor Support (Includes One 9H247) (Used after Serial #35000)	1
	650060	Hex. Hd. Cap Screw 3/8 x 1	12
	653007	Hexagon Nut - 5/16	8
	653010	Hexagon Nut - 3/8	12
	654006	Plain Washer - 3/8	16
	654024	Lock Washer - 5/16	8
	654026	Lock Washer - 3/8	12
3	6H72E	Conveyor Drive Shaft 1 x 14-9/16 (Used before Serial #35001)	1
	655507	Woodruff Key 5/16 x 1	2
	655019	Cotter Pin 3/16 x 1-1/2	1
	042123	Conveyor Drive Shaft 1 x 23-1/2 (Used after Serial #35000)	1
	570004	Grease Fitting	1
	655507	Woodruff Key 5/16 x 1	1
	655019	Cotter Pin 3/16 x 1-1/2	1
4	7H73	Drive Gear Shim	2
5	6H114D	Conveyor Drive Gear (17 T)	1
	650202	Self-Locking Soc. Hd. Set Screw 5/16 x 5/16	1
6	6H120D[A]	Conveyor Pivot. (Used before Serial #25132)	1
	6H120E	Conveyor Pivot. (Used after Serial #25131)	1
7	6H121D[B]	Conveyor Pivot Bracket - Right. (Used before Serial #25132)	1
	6H121E	Conveyor Pivot Bracket - Right. (Used after Serial #25131)	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	650106	Hex. Hd. Cap Screw 1/2 x 1-1/4	1
	653007	Hexagon Nut - 5/16	2
	653018	Hexagon Nut - 1/2.	1
	654009	Plain Washer - 1/2	2
	654024	Lock Washer - 5/16	2
	654030	Lock Washer - 1/2	1
8	6H130	Conveyor Pivot Bearing	2
9	6H135A[C]	Conveyor Pivot Bracket - Left (Used before Serial #25132)	1
	6H135B	Conveyor Pivot Bracket - Left (Used after Serial #25131)	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	650106	Hex. Hd. Cap Screw 1/2 x 1-1/4	1
	653007	Hexagon Nut - 5/16	2
	653018	Hexagon Nut - 1/2	1
	654009	Plain Washer - 1/2	2
	654024	Lock Washer - 5/16	2
	654030	Lock Washer - 1/2	1
10	6H136A	Pivot Retainer Spacer	1
11	17H140	Shim Washer	5
12	6H145A	Transfer Gear (14 T). (Used before Serial #35001)	2
	042239	Transfer Gear (14 T) (Used after Serial #35000)	2
13	17H166	Conveyor Bearing Bracket	1
14	17H168A	Clutch Shifter. (Used before Serial #38001)	1
15	6H169	Conveyor Drive Shaft - Rear 1 x 23-5/8 (Used before Serial #35001)	1
	655507	Woodruff Key 5/16 x 1	2
	655019	Cotter Pin 3/16 x 1-1/2	1
	042213	Conveyor Drive Shaft - Rear 1 x 22-1/2 (Used after Serial #35000)	1
	655507	Woodruff Key 5/16 x 1	2
	655019	Cotter Pin 3/16 x 1-1/2	1
16	17H169C	Conveyor Drive Shaft 1 x 16-1/4 (Used before Serial #35001)	1
	655507	Woodruff Key 5/16 x 1	2
	655512	Tapered Key 5/16 x 1	1
	042212	Conveyor Drive Shaft 1 x 29 (Used after Serial #35000)	1
	655507	Woodruff Key 5/16 x 1	2
	655512	Tapered Key 5/16 x 1	1
17	6H170	Drive Shaft Coupling (Used before Serial #35001)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16.	2
18	17H170B	Discharge Conveyor Gear (20 T)	2
19	6H171	Brake Drum	2
	650060	Hex. Hd. Cap Screw 3/8 x 1	4
	654026	Lock Washer - 3/8	4
20	17H171	Clutch (Used before Serial #36502)	1
	570011	Grease Fitting	1
	042630	Clutch (Used after Serial #36501)	1
	570011	Grease Fitting	1
21	6H172	Brake Band	2
	653073	Hexagon Lock Nut - 5/16.	2
22	17H172	Sliding Clutch (Used before Serial #38001)	1
23	17H173	Shifter Bracket (Used before Serial #38001)	1
24	17H174	Shifter Lock (Used before Serial #38001)	1
25	6H181	Snap-In Plug (Used before Serial #36502)	1
26	6H182	Pivot Bracket Spacer	2
27	17H185	Conveyor Drive Sprocket (16 T) (Used after Serial #35000)	2
	650210	Soc. Hd. Set Screw 3/8 x 5/16	2
28	17H195	Bearing Bracket - Right	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	4
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16.	6
	654024	Lock Washer - 5/16	4
29	17H196	Bearing Bracket - Left	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	4
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16.	6
	654024	Lock Washer - 5/16	4
30	17H203A	Shifter Extension (Used before Serial #38001)	1
31	H217	Shifter Lever Dog	1
32	9H247	Bearing Bushing (Used after Serial #35000)	1
33	9H251	Chain Tightener Block (Used after Serial #35000)	1
	650124	Hex. Hd. Cap Screw 1/2 x 3-1/2	1
	653018	Hexagon Nut - 1/2	1
	654009	Plain Washer - 1/2	3
34	A262	Shifter Spring	1
35	H275	Bearing Retainer	2
	652026	Carriage Bolt 5/16 x 3/4	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
36	D932A	Washer	4
37	D936	Shifter Clamp - Right (Used after Serial #38000)	1
	570002	Grease Fitting.	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
38	D937	Shifter Clamp - Left (Used after Serial #38000)	1
39	H7126	Transfer Gear Shim (Used after Serial #23625)	2
40	H8315	Set Collar (Used after Serial #38000)	1
	650196	Soc. Hd. Set Screw 1/4 x 5/16	1
41	H8352A	Bearing Bushing (Used before Serial #35001)	2
42	D9048A[D]	Bearing (Includes D9139) (Used before Serial #25132)	2
	570002	Grease Fitting	1
	570004	Grease Fitting	1
43	D9048C	Bearing (Includes D9139A) (Two required after Serial #25131 and before Serial #35001)	5
	570002	Grease Fitting	1
	570004	Grease Fitting	2
	570012	Grease Fitting	2
44	D9139	Bearing Bushing (Used before Serial #25132)	2
45	D9139A	Bearing Bushing (Two required after Serial #25131 and before Serial #35001)	5

PARTS LIST CONTINUED ON NEXT PAGE

65MX - CONVEYOR DRIVE

Ref. No.	Part No.	Part Name	No. Req.
46	B11029A	Bearing Retainer	10
		(Two required before Serial #35001)	
	650028	Hex. Hd. Cap Screw 5/16 x 1	4
	652029	Carriage Bolt 5/16 x 1	4
	653007	Hexagon Nut - 5/16	8
	654024	Lock Washer - 5/16	8
47	B11156	Drive Sprocket Key 5/16 x 5/16 x 1-1/4	1
		(Used after Serial #35000)	
48	B11335	Bearing Retainer	2
	652026	Carriage Bolt 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
49	M12074	Shifter Lock Spacer	2
		(Used after Serial #38000)	
50	R13027	Shifter Bracket Spacer	2
		(Used before Serial #38001)	
	H6053	Shifter Pivot Bushing	5
		(Used after Serial #38000)	
51	040016	Sliding Clutch	1
		(Used after Serial #38000)	
52	040212	Shifter Handle	1
		(Used after Serial #38000)	
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
53	040214	Shifter Lock	1
		(Used after Serial #38000)	
	650066	Hex. Hd. Cap Screw 3/8 x 1-3/4	2
	653010	Hexagon Nut - 3/8	2
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	2
54	040273	Set Collar	2
		(Used after Serial #38000)	
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
55	040431	Clutch Shifter	1
		(Used after Serial #38000)	
	650029	Hex. Hd. Cap Screw 5/16 x 1-1/4	1
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	1
	654024	Lock Washer - 5/16	1
56	040603	Bearing Spacer	1
		(Used after Serial #35000)	
57	042118	Conveyor Drive Guard	1
		(Used after Serial #35000)	
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	4
58	042121	Gear Cover	1
		(Used after Serial #35000)	
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	4
59	042214	Bearing Support	1
		(Used after Serial #35000)	
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	653007	Hexagon Nut - 5/16	4
	653010	Hexagon Nut - 3/8	2
	654024	Lock Washer - 5/16	4
60	042222	Chain of 39 Links Including One (500057) Connector Link and One (500058) Offset Link	1
		(Used after Serial #35000)	
61	044651	Shifter Extension	1
		(Used after Serial #38000)	
	650028	Hex. Hd. Cap Screw 5/16 x 1	1
	650029	Hex. Hd. Cap Screw 5/16 x 1-1/4	1
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
62	044652	Shifter Bracket	1
		(Used after Serial #38000)	
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	2
	653010	Hexagon Nut - 3/8	2
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	2
63	520063	Ball Bearing	2
64	520084	Bearing Collar	2

A For Replacement, Order 6H120E.
B For Replacement, Order 6H121E.
C For Replacement, Order 6H135B.
D For Replacement, Order D9048C.

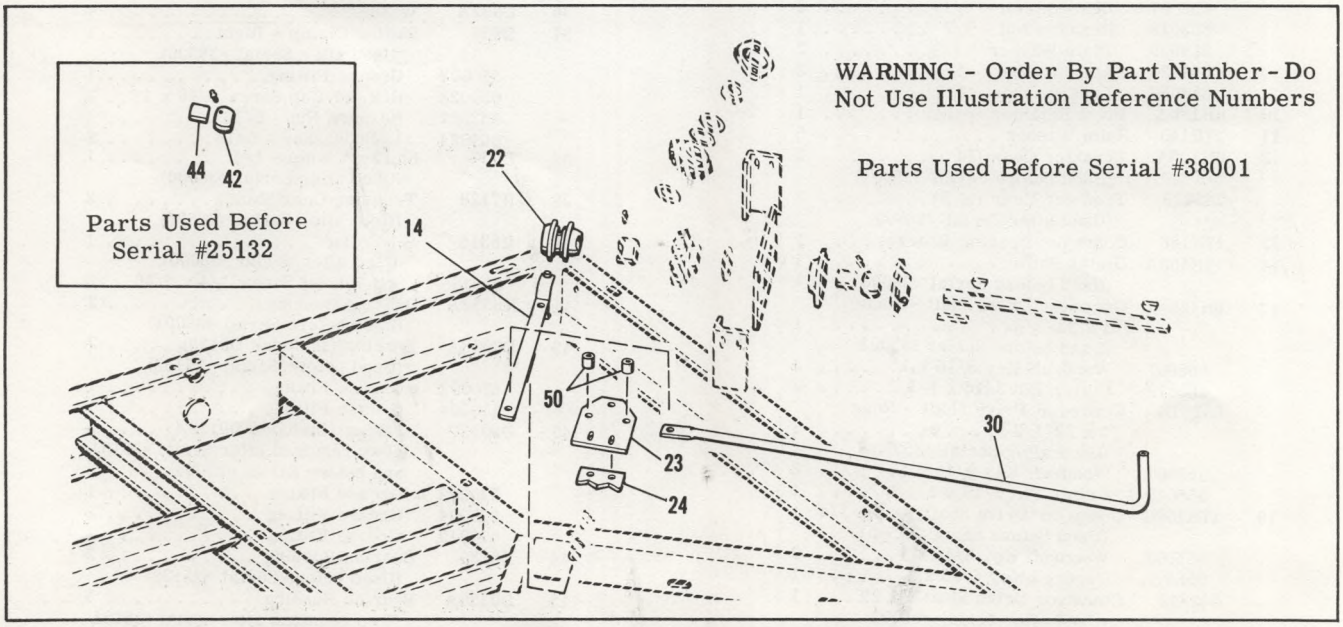

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65XD - MILL DRIVE

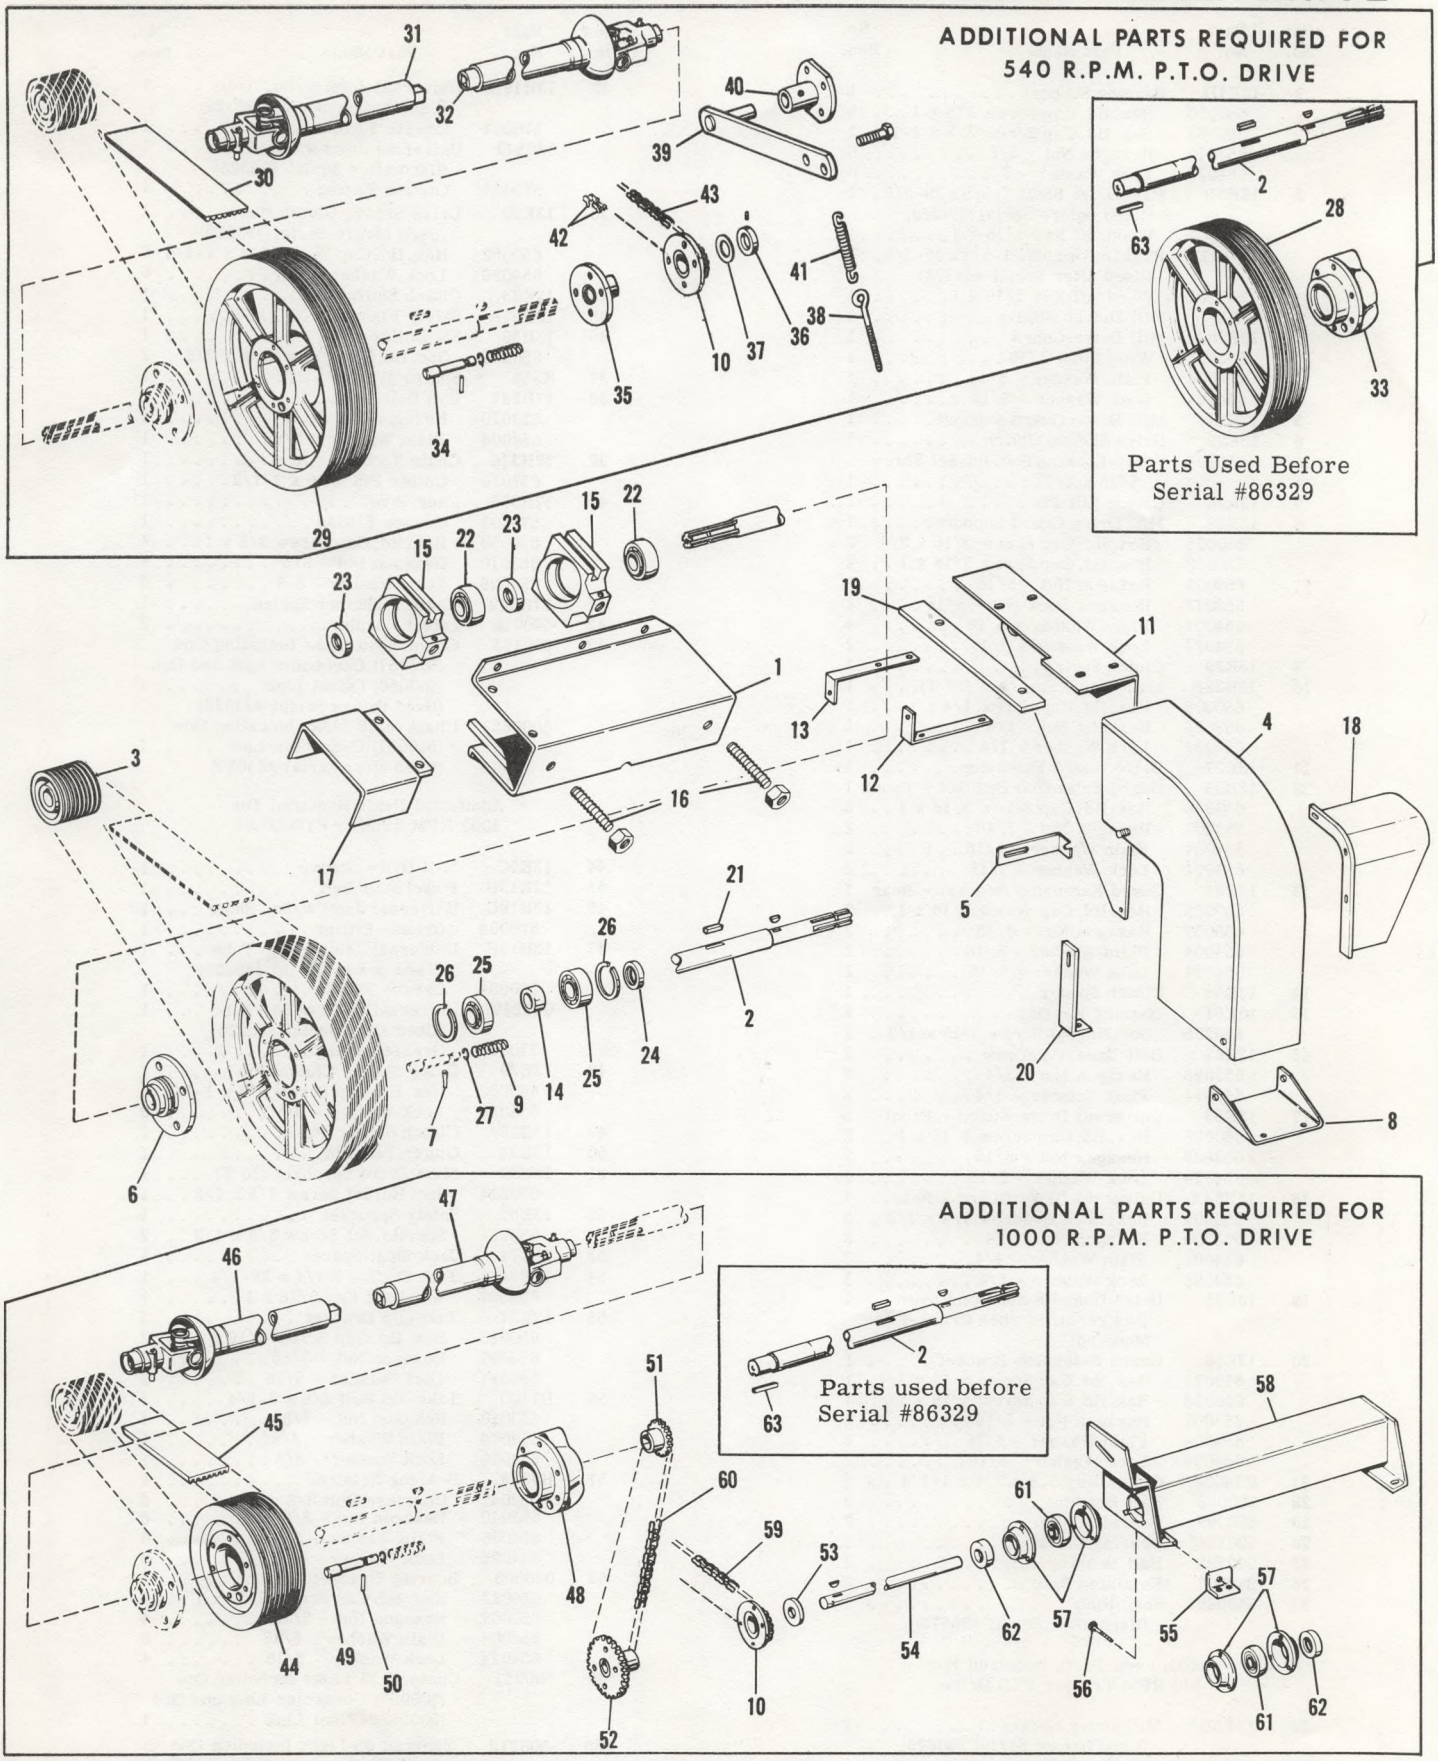

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65XD - MILL DRIVE

Ref. No.	Part No.	Part Name	No. Req.
1	13E1D	Bearing Support	1
	650060	Hex.Hd.Cap Screw 3/8 x 1	5
	650062	Hex.Hd.Cap Screw 3/8 x 1-1/4	1
	653010	Hexagon Nut - 3/8	6
	654026	Lock Washer - 3/8	6
2	13E3B	PTO Drive Shaft 1-5/8x35-5/8. (Used before Serial #86329)	1
	655507	Woodruff Key 5/16 x 1	1
	040547	PTO Drive Shaft 1-5/8x35-5/8. (Used after Serial #86328)	1
	655507	Woodruff Key 5/16 x 1	1
3	13E8	Mill Driven Sheave	1
4	13E10A	Mill Drive Guard	1
	653093	Wing Nut - 5/16	1
	654004	Plain Washer - 5/16	1
	654024	Lock Washer - 5/16	1
5	13E11	Mill Drive Guard Support	1
6	13E22	Drive Sheave Clutch	1
	650207	Self-Locking Soc.Hd.Set Screw 5/16 x 1/2	1
7	13H24	Clutch Lift Pin	1
8	13E28	Mill Drive Guard Support	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	2
	650028	Hex.Hd.Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	653073	Hexagon Lock Nut - 5/16	2
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	2
9	13E29	Clutch Spring	1
10	13H32B	Main Drive Sprocket (16 T)	1
	650008	Hex.Hd.Cap Screw 1/4 x 1	1
	653005	Hexagon Nut - 1/4	1
	654022	Lock Washer - 1/4	1
11	13E37	Drive Guard Extension	1
12	13H38	Guard Extension Bracket - Front	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
13	13E39	Guard Extension Bracket - Rear	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
14	13E56	Clutch Spacer	1
15	13E61	Bearing Housing	2
	650206	Soc.Hd.Set Screw 5/16 x 1/2	2
16	13E62	Belt Take-Up Screw	2
	653026	Hexagon Nut - 3/4	3
	654014	Plain Washer - 3/4	2
17	13E63	Universal Drive Guard - Front	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
18	13E64A	Universal Drive Guard - Rear	1
	650001	Hex.Hd.Cap Screw 1/4 x 1/2	3
	653005	Hexagon Nut - 1/4	3
	654002	Plain Washer - 1/4	3
	654022	Lock Washer - 1/4	3
19	13E65	Drive Guard Extension Cover (Not required when Crusher is Mounted)	1
20	13E66	Guard Extension Bracket	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4.	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	1
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
21	C14036	Clutch Key 3/8 x 3/8 x 1-1/4	1
22	520098	Ball Bearing	2
23	520099	Bearing Collar	2
24	520184[A]	Bearing Collar	1
25	520188	Ball Bearing	2
26	540007	Retaining Ring	2
27	540035	Snap Ring (Used after Serial #88579)	1
		Additional Parts Required For 540 RPM Tractor PTO Drive	
28	13E5B[B]	Mill Drive Sheave (Used before Serial #83829)	1
29	13E5D	Mill Drive Sheave (Used after Serial #83828)	1
30	13E13A	Powerband Belt	1
31	13H18B	Universal Joint w/Sq. Shaft	1
	570004	Grease Fitting	1
32	13H19B	Universal Joint w/Sq. Tube (Used before Serial #86329)	1
	570004	Grease Fitting	1
	040549	Universal Joint w/Sq. Tube (Used after Serial #86328)	1
	570004	Grease Fitting	1
33	13E20	Drive Sheave Clutch Hub (Used before Serial #83829)	1
	650062	Hex.Hd.Cap Screw 3/8 x 1-1/4	6
	654026	Lock Washer - 3/8	6
34	13E23	Clutch Shifter Pin	1
35	13H57A	Safety Flange	1
36	13H59	Set Collar	1
	650203	Soc.Hd.Set Screw 5/16 x 3/8	2
37	K354	Spacer Washer	1
38	17H281	Eye Bolt	1
	653010	Hexagon Nut - 3/8	2
	654006	Plain Washer - 3/8	1
39	17H324	Chain Tightener Arm	1
	655019	Cotter Pin 3/16 x 1-1/2	1
40	17H335	Idler Pivot	1
	570003	Grease Fitting	1
	650060	Hex.Hd.Cap Screw 3/8 x 1	4
	653010	Hexagon Nut - 3/8	4
	654026	Lock Washer - 3/8	4
41	17H349	Chain Tightener Spring	1
42	500058	Offset Coupler	2
43	500153	Chain of 85 Links Including One (500057) Connector Link and One (500058) Offset Link (Used before Serial #23626)	1
	500085	Chain of 86 Links Including One (500057) Connector Link (Used after Serial #23625)	1
		Additional Parts Required For 1000 RPM Tractor PTO Drive	
44	13E5C	Mill Drive Sheave	1
45	13E13B	Powerband Belt	1
46	13H18C	Universal Joint w/Sq. Shaft	1
	570004	Grease Fitting	1
47	13H19B	Universal Joint w/Sq. Tube (Used before Serial #86329)	1
	570004	Grease Fitting	1
	040549	Universal Joint w/Sq. Tube (Used after Serial #86328)	1
	570004	Grease Fitting	1
48	13E20	Drive Sheave Clutch Hub	1
	650062	Hex.Hd.Cap Screw 3/8 x 1-1/4	6
	654026	Lock Washer - 3/8	6
49	13E23A	Clutch Shifter Pin	1
50	13E24	Clutch Lift Pin	1
51	13H32	Main Drive Sprocket (16 T)	1
	650214	Soc.Hd.Set Screw 3/8 x 1/2	1
52	13E57	Safety Sprocket	1
	650214	Soc.Hd.Set Screw 3/8 x 1/2	2
53	13E71	Jack Shaft Spacer	1
54	13E74	Jack Shaft - 1-1/4 x 28-1/4	1
	655507	Woodruff Key 5/16 x 1	1
55	13E77	Take-Up Bracket	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
56	H7100	Take-Up Bolt 3/8 x 3-1/4	1
	653010	Hexagon Nut - 3/8	1
	654006	Plain Washer - 3/8	1
	654026	Lock Washer - 3/8	1
57	H7838	Bearing Retainer	4
	652047	Carriage Bolt 3/8 x 1	6
	653010	Hexagon Nut - 3/8	6
	654006	Plain Washer - 3/8	6
	654026	Lock Washer - 3/8	6
58	040003	Bearing Bracket -Front	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	4
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16	6
	654024	Lock Washer - 5/16	4
59	500211	Chain of 53 Links Including One (500057) Connector Link and One (500058) Offset Link	1
60	500212	Chain of 65 Links Including One (500057) Connector Link and One (500058) Offset Link	1
61	520065	Ball Bearing	2
62	520085	Bearing Collar	2

[A] For Replacement, Order 520099.
[B] For Replacement, Order 13E5D.

See page 48 for Universal Drive Service Parts.

PARTS ON THIS PAGE ARE USED BEFORE SERIAL NO. 82829

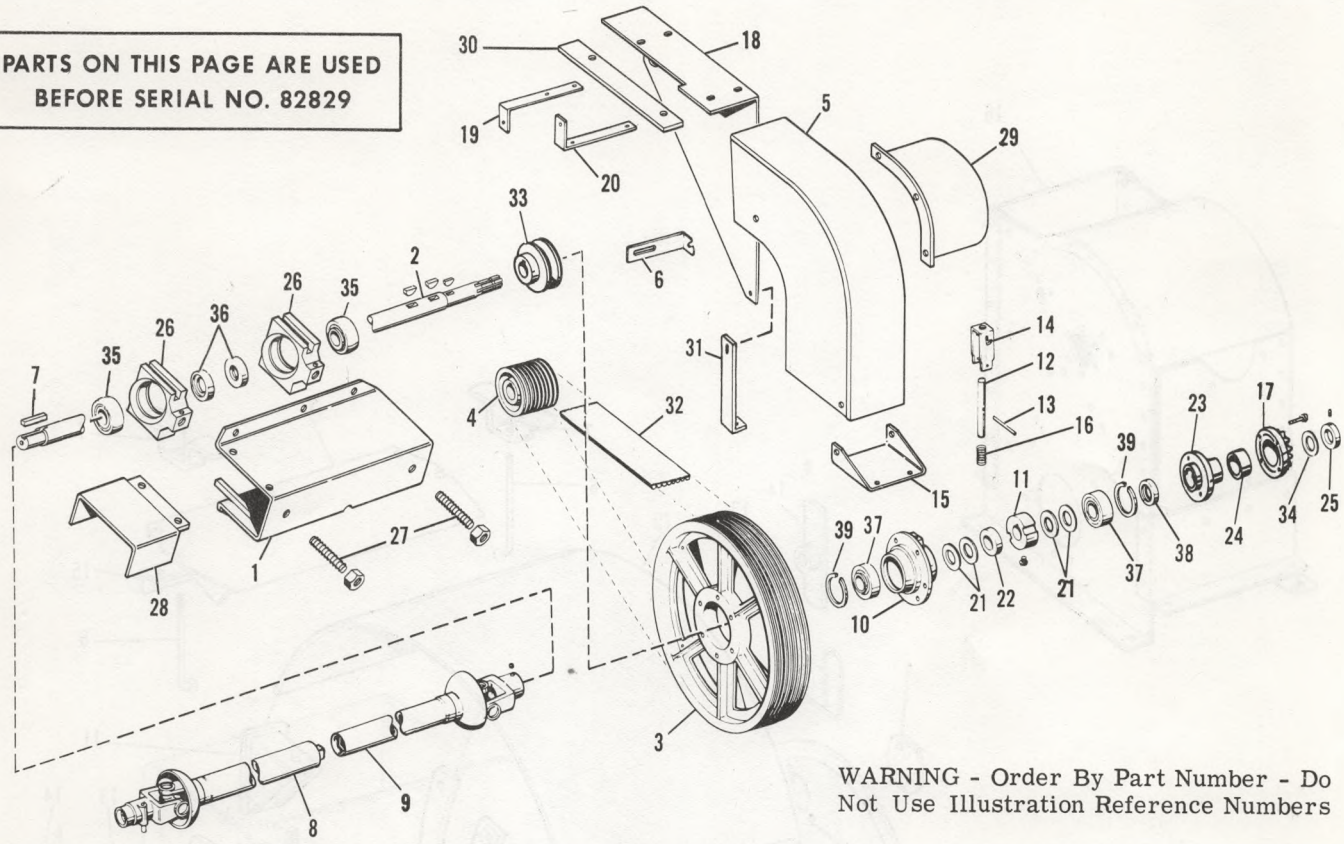

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

Ref. No.	Part No.	Part Name	No. Req.
1	13E1D	Bearing Support	1
2	13E3A	PTO Drive Shaft 1-5/8 x 35-5/8	1
	655507	Woodruff Key 5/16 x 1	2
	655510	Woodruff Key 3/8 x 1-1/4	1
3	13E5	Mill Drive Sheave	1
4	13E8	Mill Driven Sheave	1
5	13E10	Mill Drive Guard	1
6	13E11	Mill Drive Guard Support	1
7	13H16	Drive Joint Key 3/8 x 3/8 x 2	1
8	13H18B[A]	Universal Joint w/Sq. Shaft	1
9	13H19B[A]	Universal Joint w/Sq. Tube	1
10	13H20B	Drive Sheave Clutch Hub	1
11	13H22A	Drive Sheave Clutch	1
	650217	Self-Locking Soc. Hd. Set Screw 3/8 x 3/4	1
12	13H23	Clutch Shifter Pin	1
13	13H24	Clutch Lift Pin	1
14	13H25	Clutch Spring Retainer	1
15	13E28	Mill Drive Guard Support	1
16	13H29	Clutch Spring	1
17	13H32B	Main Drive Sprocket (16T)	1
	650007	Hex. Hd. Cap Screw 1/4 x 1	1
18	13E37	Drive Guard Extension	1
19	13H38	Guard Extension Bracket - Front	1
20	13E39	Guard Extension Bracket - Rear	1
21	13H55	Shim Washer	4
22	13H56	Clutch Spacer	1
23	13H57A	Safety Flange	1
24	13H58[B]	Main Drive Sprocket Bushing	1
25	13H59	Set Collar	1
	650203	Soc. Hd. Set Screw 5/16 x 3/8	2
26	13E61	Bearing Housing	2
	650206	Soc. Hd. Set Screw 5/16 x 1/2	2
27	13E62	Belt Take-Up Screw	2
	653025	Hexagon Nut - 3/4	2
28	13E63	Universal Drive Guard - Front	1
29	13E64	Universal Drive Guard - Rear	1
30	13E65	Drive Guard Extension Cover (Not required when Crusher is Mounted)	1
31	13E66	Guard Extension Bracket	1
32	13E67A[C]	Drive Belt Set (Matched set of eight 13E13) (Used before Serial #81317)	1 Set
	13E13A	Powerband Belt (Used after Serial #81316)	1
33	17H282	Crusher Drive Sheave	1
	650203	Soc. Hd. Set Screw 5/16 x 3/8	1
34	K354	Spacer Washer	1
35	520098	Bearing	2
36	520099	Bearing Collar	2
37	520111	Bearing	2
38	520184[D]	Bearing Collar	1
39	540007	Retaining Ring	2

[A] See page 48 for Universal Drive Service Parts.
[B] For Replacement, Order 13H32B.
[C] For Replacement, Order 13E13A.
[D] For Replacement, Order 520099.

65XD - MILL FRAME

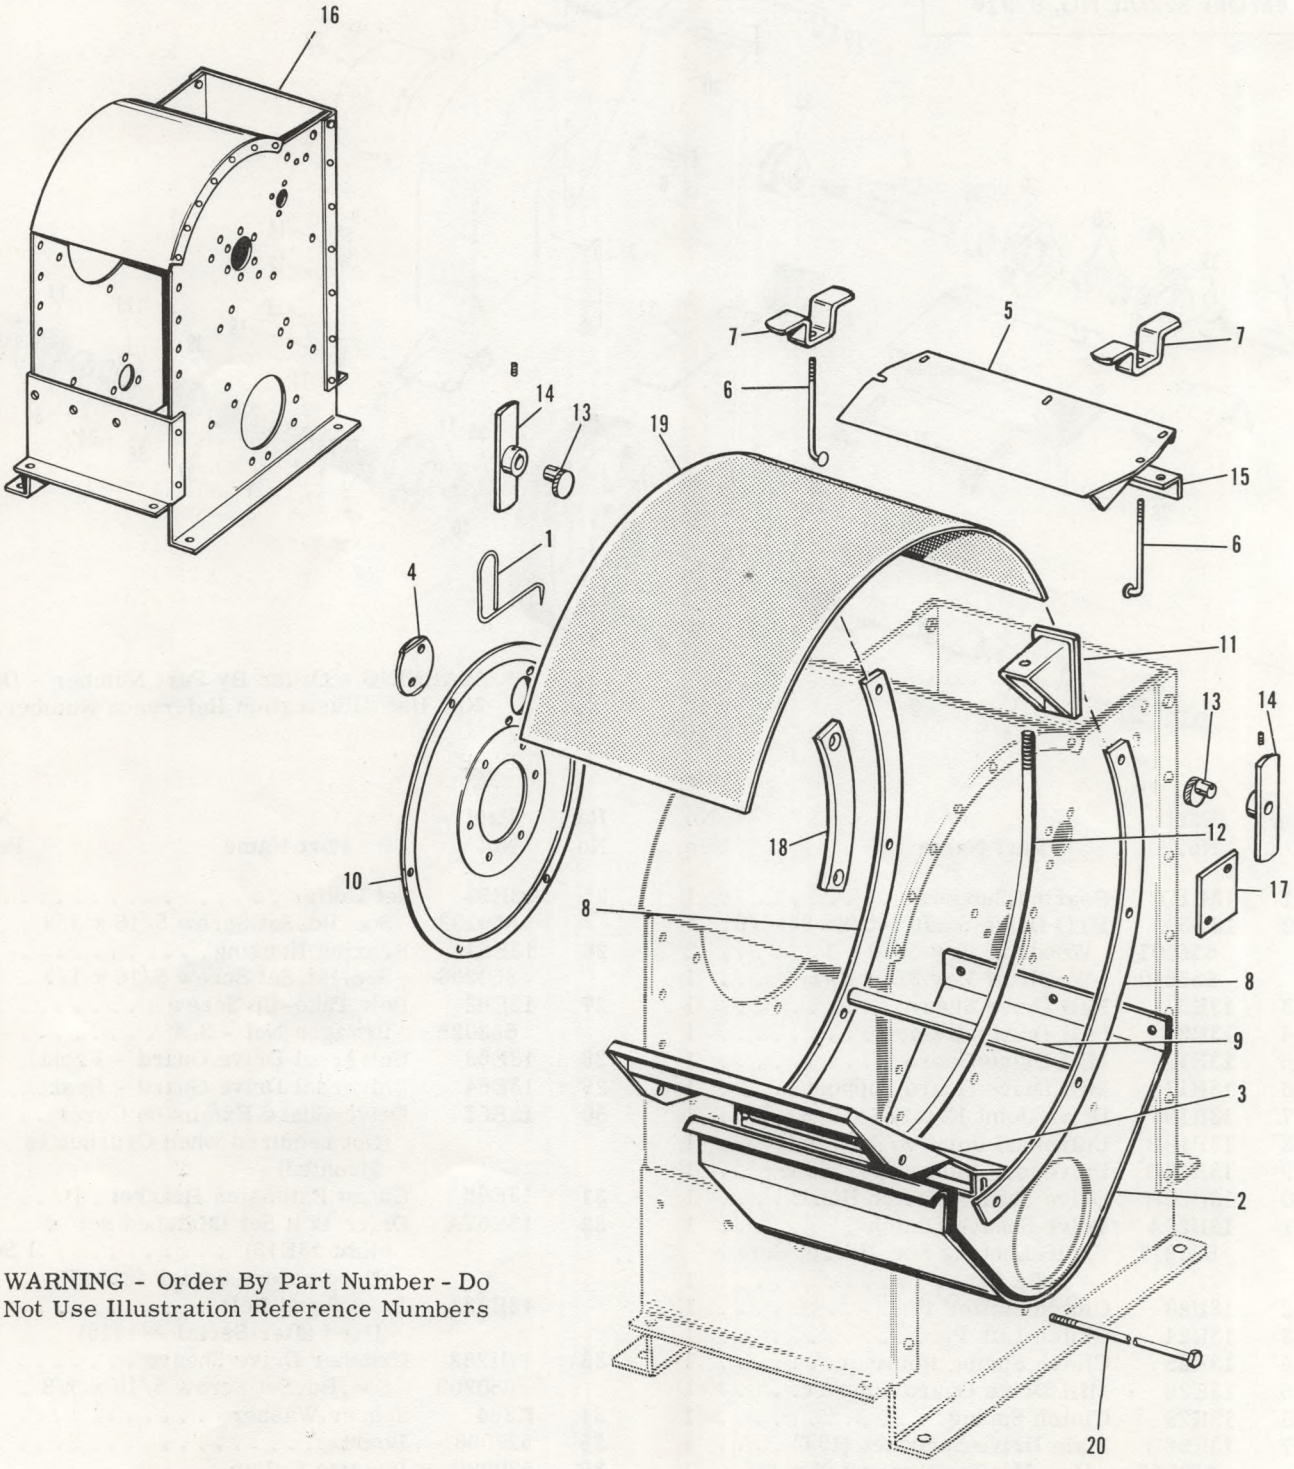

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65XD - MILL FRAME

Ref. No.	Part No.	Part Name	No. Req.
1	12E1A	Screen Hook	1
2	5E6E	Conveyor Spout	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
3	1E27J	Throat Plate	1
	650060	Hex.Hd.Cap Screw 3/8 x 1	4
	653010	Hexagon Nut - 3/8	4
	654006	Plain Washer - 3/8	2
4	1H52A	Cylinder Inspection Cover	1
	650003	Hex.Hd.Cap Screw 1/4 x 5/8	2
	653005	Hexagon Nut - 1/4	2
	654022	Lock Washer - 1/4	2
5	1E53D	Screen Cover	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	3
	654004	Plain Washer - 5/16	3
6	1H58D	Cover Lock Bolt	2
7	1H59B	Cover Lock	2
8	1H60B	Screen Guide - Lower	2
	650028	Hex.Hd.Cap Screw 5/16 x 1	6
	650029	Hex.Hd.Cap Screw 5/16 x 1-1/4	2
	653007	Hexagon Nut - 5/16	8
	654024	Lock Washer - 5/16	8
9	1E73B	Main Frame Spacer	1
10	1H77	Cylinder Cover	1
	650056	Hex.Hd.Cap Screw 3/8 x 3/4	4
	650190	Flat Hd.Mach.Screw 3/8 x 1-1/4	2
	653010	Hexagon Nut - 3/8	6
	654026	Lock Washer - 3/8	6
11	1E85	Screen Support Rod Bracket	1
	650060	Hex.Hd.Cap Screw 3/8 x 1	2
	653010	Hexagon Nut - 3/8	2
	654026	Lock Washer - 3/8	2
12	1E86	Screen Support Rod	1
	653018	Hexagon Nut - 1/2	2
	653044	Hexagon Jam Nut - 1/2	2
13	1E87	Screen Lift Cam	2
	655504	Woodruff Key 3/16 x 1	2
14	1E88	Screen Lift Cam Lever	2
	650212	Soc.Hd.Set Screw 3/8 x 3/8	2
15	1E89	Screen Cover Stop	1
		(Used before Serial #78629)	
	1E89A	Screen Cover Stop	1
		(Used after Serial #78628)	
	650030	Hex.Hd.Cap Screw 5/16 x 1-1/4	2
16	1E90A	Main Frame Assembled	1
	650021	Hex.Hd.Cap Screw 5/16 x 1/2	6
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	3
	650056	Hex.Hd.Cap Screw 3/8 x 3/4	3
	650301	Truss Hd.Screw 5/16 x 1/2	5
	650267	Truss Hd.Screw 5/16 x 5/8	2
	650314	Truss Hd.Screw 3/8 x 1	6
	653007	Hexagon Nut - 5/16	17
	653010	Plain Washer - 5/16	9
	654004	Plain Washer - 5/16	2
	654006	Plain Washer - 3/8	2
	654024	Lock Washer - 5/16	11
	654026	Lock Washer - 3/8	6
17	1E91	Hammer Change Cover	1
		(Used before Serial #77879)	
	1E91A	Hammer Change Cover	1
		(Used after Serial #77878)	
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
18	1E92	Screen Guide - Upper	1
		(Used after Serial #73678)	
19	1E95	Screen - 1/32	
	1E95A	Screen - 1/16	
	1E95B	Screen - 3/32	
	1E95C	Screen - 1/8	
	1E95D	Screen - 5/32	
	1E95E	Screen - 3/16	
	1E95F	Screen - 1/4	
	1E95G	Screen - 5/16	
	1E95H	Screen - 3/8	
	1E95J	Screen - 1/2	
	1E95K	Screen - 5/8	
	1E95L	Screen - 3/4	
	1E95M	Screen - 1	
	1E95N	Screen - 1-1/4	
	1E95P	Screen - 1-1/2	
	1E95R	Screen - 2	
20	040148	Main Frame Spacer Bolt - 5/16 x 15-1/2	7
	653007	Hexagon Nut - 5/16	7
	654024	Lock Washer - 5/16	7

NOTE: See page 44 for Mill Hoppers.

65XD - MILL CONVEYOR AND BLOWER

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

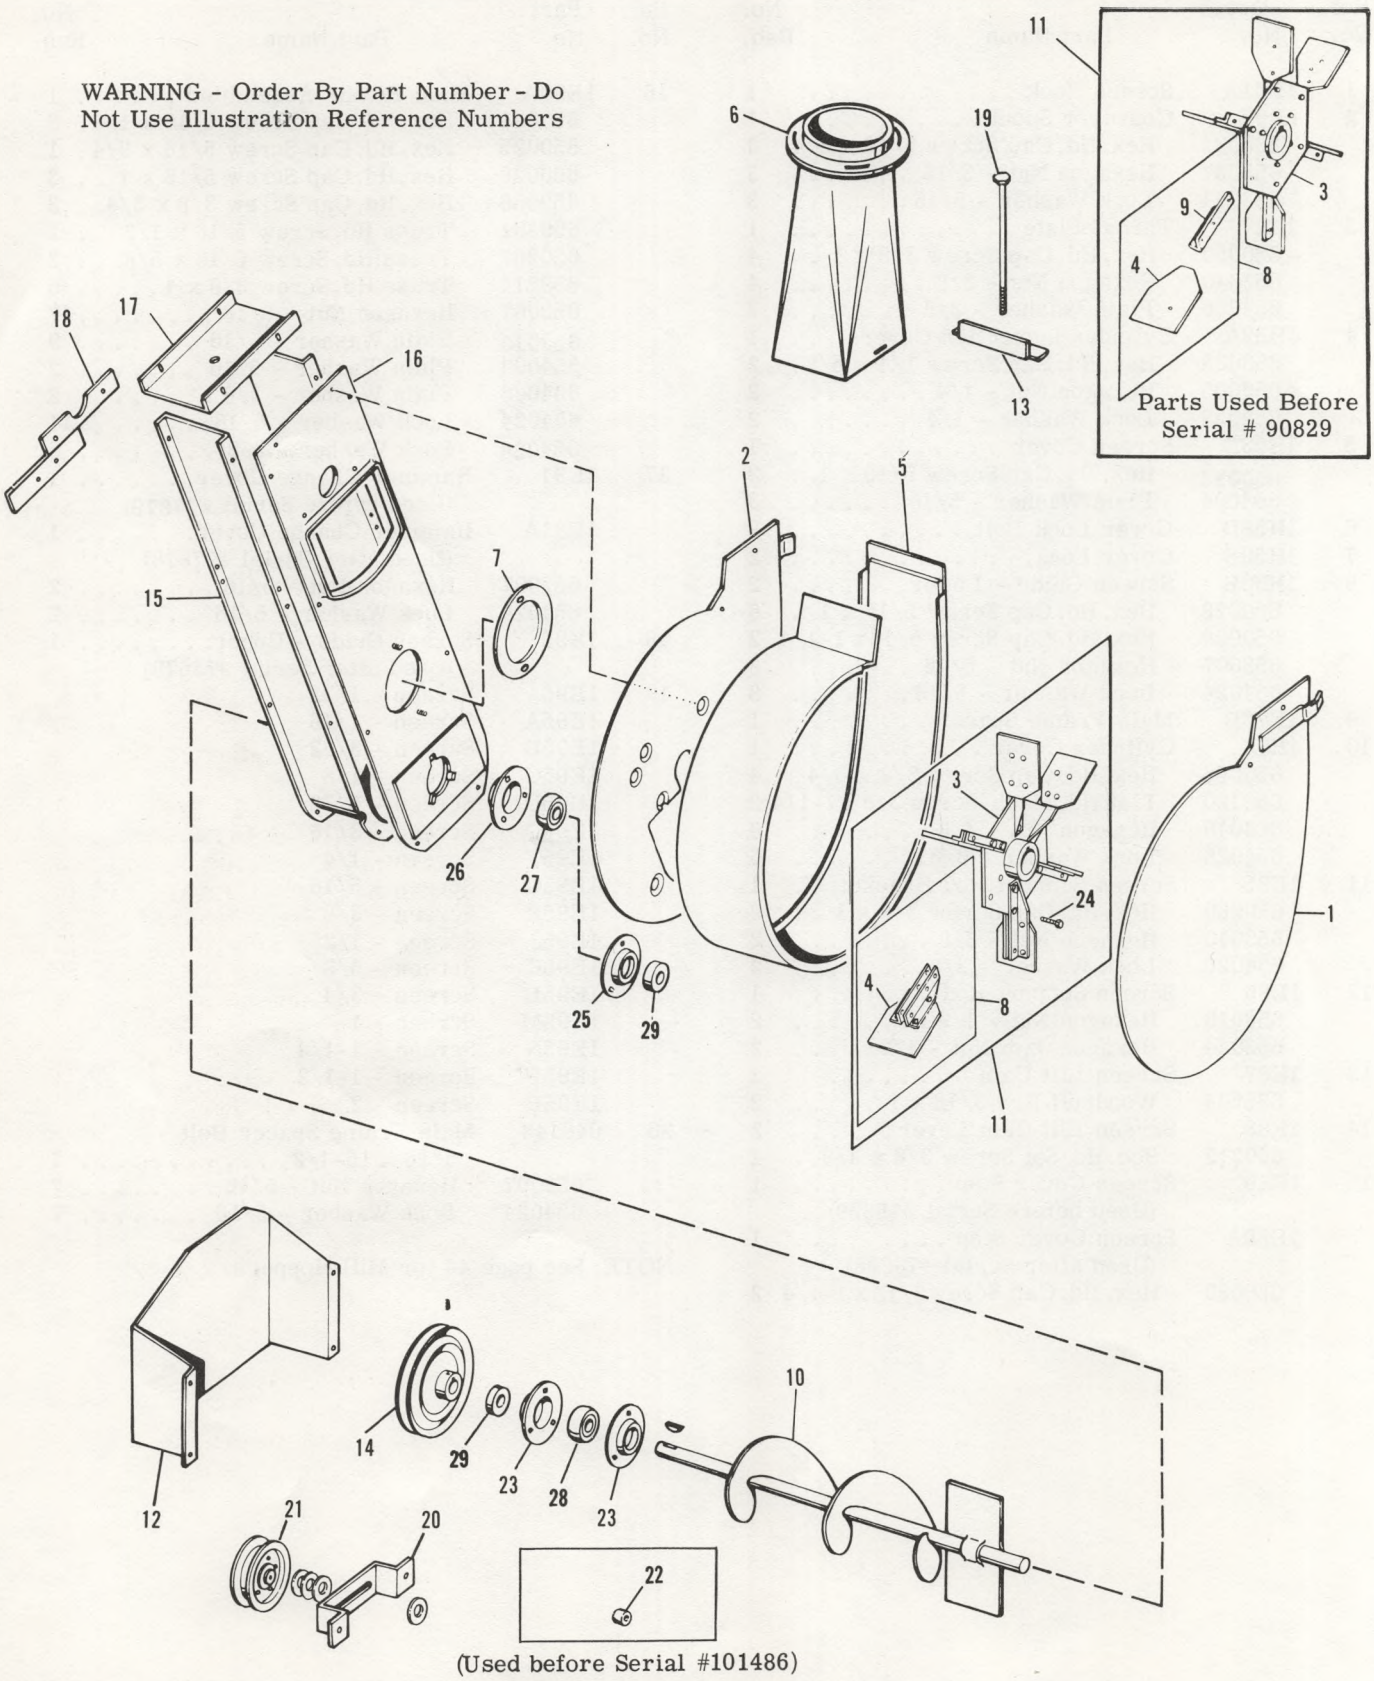

(Used before Serial #101486)

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65XD - MILL CONVEYOR AND BLOWER

Ref. No.	Part No.	Part Name	No. Req.
1	5H1E[A]	Blower Side - Right	1
		(Used before Serial #100001)	
	040026	Blower Side - Right	1
		(Used after Serial # 100000)	
	650051	Hex.Hd.Cap Screw 5/16 x 5-1/4	1
	653007	Hexagon Nut - 5/16	1
	654024	Lock Washer - 5/16	1
2	5H2H	Blower Side - Left	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	8
	653007	Hexagon Nut - 5/16	8
	654024	Lock Washer - 5/16	8
3	5H3G	Blower Spider	1
		(Used before Serial #90829)	
	042185	Blower Spider	1
		(Used after Serial #90828)	
4	5H10E[B]	Fan Plate	6
		(Used before Serial #90829)	
	654519	Round Head Rivet 5/16 x 1/2	18
5	5H11B	Blower Rim	1
6	5H12E	Blower Outlet	1
	650005	Hex.Hd.Cap Screw 1/4 x 3/4	6
	653005	Hexagon Nut - 1/4	6
	654002	Plain Washer - 1/4	10
	654022	Lock Washer - 1/4	6
7	5H20A	Inspection Hole Cover	1
8	5H23C	Blower Arm Assembled	6
		(Used before Serial #90829)	
	042129	Blower Arm Assembled	6
		(Used after Serial #90828)	
9	5H43B[B]	Blower Arm	6
		(Used before Serial #90829)	
10	5E52A	Conveyor	1
	655505	Woodruff Key 1/4 x 1	1
11	5H56G[C]	Blower Fan Assembled	1
		(Used before Serial #90829)	
	650240	Sq.Hd.Set Screw 1/2 x 3/4	1
	042172	Blower Fan Assembled	1
		(Used after Serial #90828)	
12	5E62	Conveyor Drive Guard	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
13	5H63	Blower Rim Tightener	1
14	5E68	Conveyor Sheave (7" Dia.)	1
	650201	Soc.Hd.Set Screw 5/16 x 5/16	1
15	5H70	Blower Inlet Rim	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	11
	650269	Truss Hd.Screw 5/16 x 3/4	1
	653007	Hexagon Nut - 5/16	12
	654024	Lock Washer - 5/16	12
16	5H71B	Blower Inlet Cover	1
	653005	Hexagon Nut - 1/4	2
	654022	Lock Washer - 1/4	2
17	5H72	Blower Inlet End Cover	1
	650269	Truss Hd.Screw 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
18	5H73	Blower Inlet Deflector	1
	652024	Carriage Bolt 5/16 x 1/2	2
	653073	Hexagon Lock Nut - 5/16	2
19	5H74	Rim Tightener	1
	653010	Hexagon Nut - 3/8	1
	654026	Lock Washer - 3/8	1
20	5E76	Belt Tightener Bracket	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
21	5E77	Belt Tightener Pulley	1
	650117	Hex.Hd.Cap Screw 1/2 x 2-1/2	1
	653018	Hexagon Nut - 1/2	1
	654009	Plain Washer - 1/2	4
	654030	Lock Washer - 1/2	1
22	6H130	Tightener Pulley Spacer	1
		(Used before Serial #101486)	
23	H275	Bearing Retainer	2
		(Four required before Serial #101486)	
	652026	Carriage Bolt 5/16 x 3/4	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
24	042171	Blower Arm Bolt 3/8 x 1	12
		(Used after Serial #90828)	
	653010	Hexagon Nut - 3/8	12
	654026	Lock Washer - 3/8	12
25	042901	Bearing Retainer	1
		(Used after Serial #101485)	
	652026	Carriage Bolt 5/16 x 3/4	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
26	042902	Bearing Retainer	1
		(Used after Serial #101485)	
27	042903	Ball Bearing	1
		(Used after Serial #101485)	
28	520063	Ball Bearing	1
		(Two required before Serial #101486)	
29	520084	Bearing Collar	2

[A]For Replacement, Order 040026.
[B]For Replacement, Order 5H23C.
[C]For Replacement, Order 042172.

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

HAMMER ARRANGEMENT

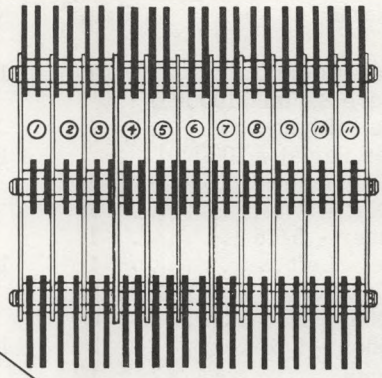

Row No. 1
22 - Spacers 23/64" Wide
22 - 2E4D Hammers

Row No. 2
22 - Spacers 23/64" Wide
22 - 2E4D Hammers

Row No. 3
11 - Spacers 23/64" Wide
22 - Spacers 3/16" Wide
22 - 2E4D Hammers

Note - Hammers in spaces marked 1-2-3-4-5 are assembled in opposite position to 6-7-8-9-10-11.

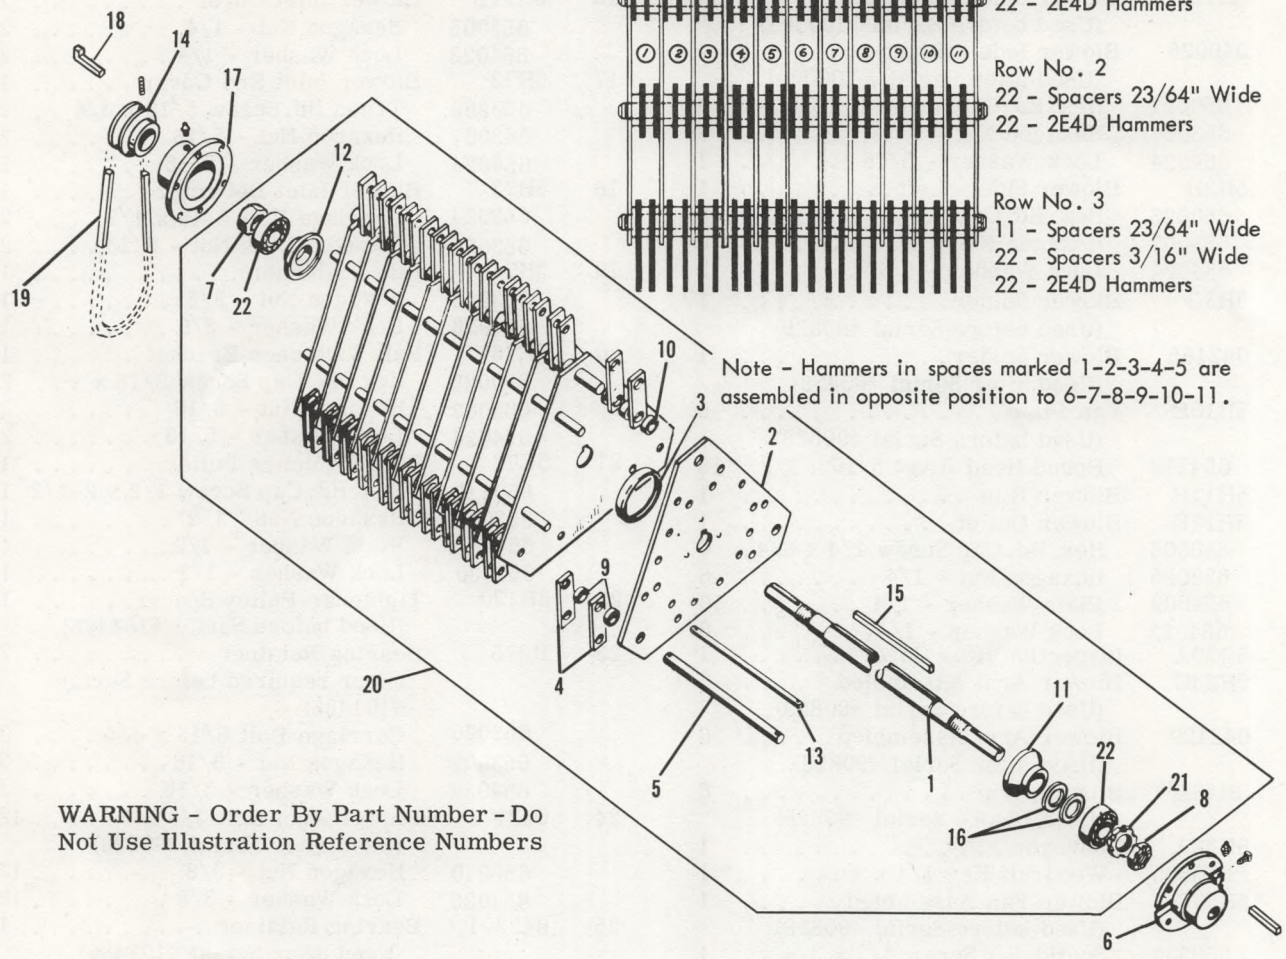

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

Ref. No.	Part No.	Part Name	No. Req.
1	2E1J	Cylinder Shaft 2 x 32-9/16 . . .	1
	655522	Tapered Key 3/8 x 2-1/2 . . .	1
2	2H2B	Cylinder Plate	12
3	2H3B	Cylinder Plate Spacer	11
4	2E4D[A]	Hammer	66
5	2E5	Hammer Shaft 5/8 x 14-1/16 . .	3
	655017	Cotter Pin 3/16 x 1-1/4 . . .	6
6	1H5D	Cylinder Bearing Housing - Right	1
	570012	Grease Fitting	1
	650227	Sq. Hd. Set Screw 5/16 x 1-1/4	2
	650060	Hex. Hd. Cap Screw 3/8 x 1 . .	6
	653034	Hexagon Jam Nut - 5/16 . . .	2
	653075	Hexagon Lock Nut - 3/8. . . .	6
7	2H6D	Cylinder Shaft Nut - Left	1
	650197	Soc. Hd. Set Screw 1/4 x 3/8. .	1
8	2H6E	Cylinder Shaft Nut - Right. . . .	1
9	2E12A	Hammer Spacer - 11/64 wide .	22
10	2E13A	Hammer Spacer - 11/32 wide .	55
11	2E18B	Cylinder Collar - Right	1
12	2E19C	Cylinder Collar - Left.	1
13	2E20	Hammer Stop 5/16 x 13-7/8 . .	6
	655004	Cotter Pin 1/8 x 3/4.	12
14	2H22S	Conveyor Drive Sheave	1
	650207	Self-Locking Soc. Hd. Set Screw 5/16 x 1/2	1
15	2E31A	Cylinder Key 1/4 x 3/8 x 11-1/2	1
16	2E33	Shim Washer	2
17	1H48J	Cylinder Bearing Housing - Left	1
	570002	Grease Fitting	1
	650060	Hex. Hd. Cap Screw 3/8 x 1 . .	3
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	3
	653075	Hexagon Lock Nut - 3/8 . . .	6
18	13E60	Main Shaft Key	1
19	5H75	Conveyor Drive Belt	1
20	1E100	Cylinder Assembled	1
21	520002	Lock Washer	1
22	520117	Ball Bearing	2

[A] Hammers are packaged in sets of 66. To order set of 66 - 2E4D Hammers, specify set number 2E34.

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

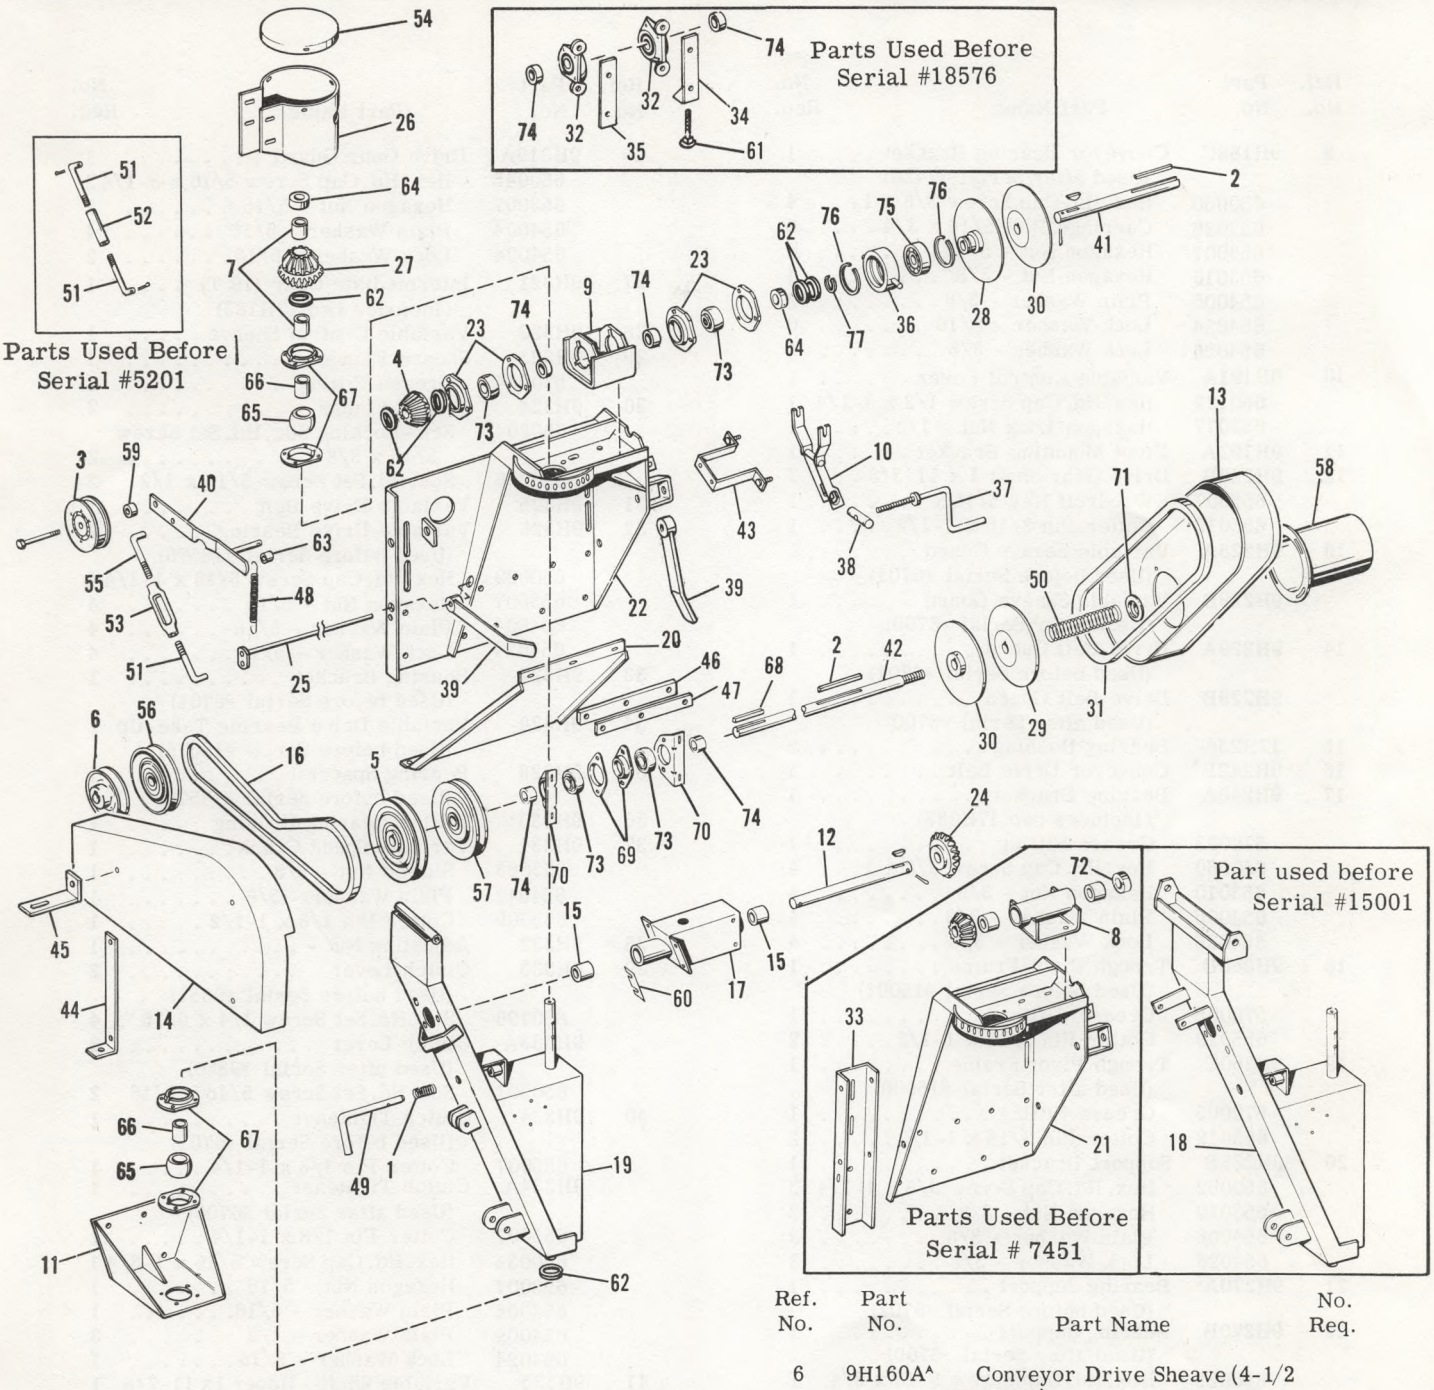

Ref. No.	Part No.	Part Name	No. Req.
1	13H29	Lock Pin Spring	1
2	3E42A	Variable Sheave Key 5/16 x 5/16 x 3	2
3	5E77	Belt Tightener Pulley	1
	650122	Hex. Hd. Cap Screw 1/2 x 3-1/4	1
	653018	Hexagon Nut - 1/2	1
	654009	Plain Washer - 1/2	3
	654030	Lock Washer - 1/2	1
4	6H143C	Conveyor Drive Gear (14 T) . .	1
5	3E146	Conveyor Driven Sheave (8 Dia.)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2

Ref. No.	Part No.	Part Name	No. Req.
6	9H160A*	Conveyor Drive Sheave (4-1/2 Dia.) . . . . . (Used before Serial #18576)	1
	650206	Soc. Hd. Set Screw 5/16 x 1/2.	1
	041189	Conveyor Drive Sheave (4.4 Dia.) (Used after Serial #18575)	1
	650203	Soc. Hd. Set Screw 5/16 x 3/8.	1
7	17H183	Bearing Bushing	2
8	9H188A	Conveyor Bearing . . . . . (Used before Serial #6701) (Includes Two D9139)	1
	570005	Grease Fitting	1
	9H188B	Conveyor Bearing . . . . . (Used after Serial #6700 and before Serial #7451) (Includes Two D9139)	1
	570005	Grease Fitting	1

PARTS LIST CONTINUED ON NEXT PAGE

65SAF - FEEDER DRIVE

Ref. No.	Part No.	Part Name	No. Req.
9	9H188C	Conveyor Bearing Bracket	1
		(Used after Serial #7450)	
	650060	Hex. Hd. Cap Screw 3/8 x 1	4
	652026	Carriage Bolt 5/16 x 3/4	6
	653007	Hexagon Nut - 5/16	6
	653010	Hexagon Nut - 3/8	4
	654006	Plain Washer - 3/8	2
	654024	Lock Washer - 5/16	6
	654026	Lock Washer - 3/8	4
10	9H191A	Variable Control Lever	1
	650122	Hex. Hd. Cap Screw 1/2 x 3-1/4	1
	653077	Hexagon Lock Nut - 1/2	1
11	9H192A	Pivot Mounting Bracket	1
12	9H222B	Drive Gear Shaft 1 x 11-3/8	1
	655507	Woodruff Key 5/16 x 1	1
	655019	Cotter Pin 3/16 x 1-1/2	1
13	9H228A	Variable Sheave Guard	1
		(Used before Serial #6701)	
	9H228B	Variable Sheave Guard	1
		(Used after Serial #6700)	
14	9H229A	Drive Belt Guard	1
		(Used before Serial #6701)	
	9H229B	Drive Belt Guard	1
		(Used after Serial #6700)	
15	17H238	Bearing Bushing	2
16	9H242B[B]	Conveyor Drive Belt	1
17	9H248A	Bearing Bracket	1
		(Includes two 17H238)	
	570023	Grease Fitting	1
	650060	Hex. Hd. Cap Screw 3/8 x 1	4
	653010	Hexagon Nut - 3/8	4
	654006	Plain Washer - 3/8	4
	654026	Lock Washer - 3/8	4
18	9H260B	Trough Pivot Frame	1
		(Used before Serial #15001)	
	570005	Grease Fitting	1
	655019	Cotter Pin 3/16 x 1-1/2	2
19	9H260C	Trough Pivot Frame	1
		(Used after Serial #15000)	
	570005	Grease Fitting	1
	655019	Cotter Pin 3/16 x 1-1/2	2
20	9H265B	Support Bracket	1
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	3
	653010	Hexagon Nut - 3/8	3
	654006	Plain Washer - 3/8	3
	654026	Lock Washer - 3/8	3
21	9H270A[C]	Bearing Support	1
		(Used before Serial #6701)	
22	9H270B	Bearing Support	1
		(Used after Serial #6700)	
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	1
	650060	Hex. Hd. Cap Screw 3/8 x 1	5
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	5
	653007	Hexagon Nut - 5/16	1
	653010	Hexagon Nut - 3/8	10
	654024	Lock Washer - 5/16	1
	654026	Lock Washer - 3/8	10
23	H273	Bearing Retainer	4
		(Used after Serial #7450)	
24	17H284	Driven Gear (19 T)	1
25	9H285A[D]	Shifter Shaft	1
		(Used before Serial #6701)	
	9H285B	Shifter Shaft	1
		(Used after Serial #6700 and before Serial #9851)	
	9H285C	Shifter Shaft	1
		(Used after Serial #9850)	
	654009	Plain Washer - 1/2	3
26	9H319A	Drive Gear Guard	1
	650045	Hex. Hd. Cap Screw 5/16 x 3-1/4	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	2
27	9H321	Intermediate Gear (19 T)	1
		(Includes two 17H183)	
28	9H322	Variable Control Sheave	1
29	9H323	Sheave Flange	1
	570014	Grease Fitting	1
30	9H324	Sheave Flange	2
	650204	Self-Locking Soc. Hd. Set Screw 5/16 x 3/8	2
	650206	Soc. Hd. Set Screw 5/16 x 1/2	2
31	9H325	Variable Drive Belt	1
32	9H326	Variable Drive Bearing	2
		(Used before Serial #18576)	
	650029	Hex. Hd. Cap Screw 5/16 x 1-1/4	4
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	4
33	9H327	Bearing Bracket	1
		(Used before Serial #6701)	
34	9H328	Variable Drive Bearing Take-Up	1
		(Used before Serial #18576)	
35	9H329	Bearing Spacer	1
		(Used before Serial #18576)	
36	9H330	Shifter Bearing Housing	1
37	9H331	Variable Speed Crank	1
	653083	Slotted Nut - 5/8	1
	654012	Plain Washer - 5/8	1
	655009	Cotter Pin 1/8 x 1-1/2	1
38	9H332	Adjusting Nut -	1
39	9H333	Clutch Lever	2
		(Used before Serial #9851)	
	650196	Soc. Hd. Set Screw 1/4 x 5/16	4
	9H333A	Clutch Lever	2
		(Used after Serial #9850)	
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
40	9H334	Clutch Tightener	1
		(Used before Serial #6701)	
	655007	Cotter Pin 1/8 x 1-1/4	1
	9H334A	Clutch Tightener	1
		(Used after Serial #6700)	
	655007	Cotter Pin 1/8 x 1-1/4	1
	650034	Hex. Hd. Cap Screw 5/16 x 1-3/4	1
	653007	Hexagon Nut - 5/16	1
	654004	Plain Washer - 5/16	1
	654009	Plain Washer - 1/2	3
	654024	Lock Washer - 5/16	1
41	9H335	Variable Shaft - Upper 1 x 11-7/8	1
	570002	Grease Fitting	1
	655507	Woodruff Key 5/16 x 1	1
	655019	Cotter Pin 3/16 x 1-1/2	1
42	9H336	Variable Shaft - Lower 1 x 36-9/16	1
		(Used before Serial #6701)	
	655507	Woodruff Key 5/16 x 1	1
	9H336A	Variable Shaft - Lower 1 x 37-9/16	1
		(Used after Serial #6700 and before Serial #21078)	
	042259	Variable Shaft - Lower 1 x 37-9/16	1
		(Used after Serial #21077)	
	653053	Hexagon Jam Nut - 3/4	1
	654014	Plain Washer - 3/4	1

PARTS LIST CONTINUED ON NEXT PAGE

Ref. No.	Part No.	Part Name	No. Req.
43	9H338	Variable Sheave Guard Bracket (Used before Serial #6701)	1
	9H338A	Variable Sheave Guard Bracket. (Used after Serial #6700)	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	2
	653094	Wing Nut - 5/16.	2
	654004	Plain Washer - 5/16.	2
	654024	Lock Washer - 5/16	4
44	9H341	Guard Bracket - Front	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
45	9H342	Guard Bracket - Rear. (Used before Serial #6701)	1
	9H342A	Guard Bracket - Rear. (Used after Serial #6700)	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16.	1
	654024	Lock Washer - 5/16	2
46	9H343	Support Bracket Spacer. (Used before Serial #9851)	1
47	9H344	Support Bracket Spacer. (Used before Serial #9851)	2
48	9H346	Shifter Release Spring	1
49	9H347	Lock Pin	1
	654009	Plain Washer - 1/2	2
	655015	Cotter Pin 3/16 x 1	2
50	9H351	Variable Drive Spring. (Used before Serial #21078)	1
	044257	Variable Drive Spring. (Used after Serial #21077)	1
51	9H352	Shifter Link - Right (Two required before Serial #5201)	1
	655005	Cotter Pin 1/8 x 1	1
	653037	Hexagon Jam Nut - 3/8	1
52	9H353	Shifter Coupling. (Used before Serial #5201)	1
53	9H353A	Shifter Coupling. (Used after Serial #5200)	1
54	9H354	Gear Guard Cover	1
	650267	Truss Hd. Cap Screw 5/16 x 5/8	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
55	9H357	Shifter Link - Left. (Used after Serial #5200)	1
	655005	Cotter Pin 1/8 x 1	1
56	9H358	Conveyor Drive Sheave (5-3/4 dia.) (Used after Serial #6481)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
57	9H359	Conveyor Driven Sheave (7 dia.). (Used after Serial #6481)	1
	650203	Soc. Hd. Set Screw 5/16 x 3/8	2
58	9H360	Drive Sheave Guard (Used after Serial #6700)	1
	650001	Hex. Hd. Cap Screw 1/4 x 1/2	4
	653005	Hexagon Nut - 1/4	4
	654002	Plain Washer - 1/4	4
	654022	Lock Washer - 1/4	4
59	9H363	Bushing (19E16 Used before Serial #6701)	1
60	9H364	Shim (Used after Serial #7450)	1
61	9H365	Bearing Take-Up Bolt (Used after Serial #8961 and before Serial #18576)	1
	653007	Hexagon Nut - 5/16	2
62	D932A	Washer	As req.
63	H8048	Release Spring Bushing	1
64	H8315	Set Collar	2
	650195	Soc. Hd. Set Screw 1/4 x 1/4	1
	650198	Self-Locking Soc. Hd. Set Screw 1/4 x 3/8	1
65	D9048A[E]	Pivot Bearing (Includes D9139) (Used before Serial #15001)	2
	570003	Grease Fitting	1
	570005	Grease Fitting	1
	D9048C	Pivot Bearing (Includes D9139A) (Used after Serial #15000)	2
	570003	Grease Fitting	1
	570005	Grease Fitting	1
66	D9139	Bearing Bushing (Used before Serial #15001 - Four required before Serial #7451)	2
	D9139A	Bearing Bushing (Used after Serial #15000)	2
67	B11029A	Bearing Retainer.	4
	650028	Hex. Hd. Cap Screw 5/16 x 1	8
	653007	Hexagon Nut - 5/16	8
	654024	Lock Washer - 5/16	8
68	B11221	Drive Sheave Key 5/16 x 5/16 x 2 (Used after Serial #6700)	2
69	B11335	Bearing Retainer (Used after Serial #18575)	2
	652027	Carriage Bolt 5/16 x 5/8	4
	653007	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
70	040874	Bearing Bracket (Used after Serial #18575)	2
	652047	Carriage Bolt 3/8 x 1	4
	653010	Hexagon Nut - 3/8	4
	654006	Plain Washer - 3/8	4
	654026	Lock Washer - 3/8 (Used after Serial #19176)	4
71	044258	Spring Retainer (Used after Serial #21077)	1
72	520009	Thrust Bearing. (Used after Serial #6700 and before Serial #7451)	1
73	520063	Ball Bearing (Two required after Serial #7450 and before Serial #18576)	4
74	520084	Bearing Collar (Two required before Serial #7451)	4
75	520146	Ball Bearing	1
76	540023	Retaining Ring	2
77	540024	Retaining Ring	1

[A] For Replacement, Order 041189.

[B] High Speed Drive (Used before Serial #6482)

13H13	Conveyor Drive Belt	1
9H160B	Conveyor Drive Sheave (6 dia.)	1
650206	Soc. Hd. Set Screw 5/16 x 1/2	1

[C] For Replacement, Order 9H270B.

[D] For Replacement, Order 9H285B.

[E] For Replacement, Order D9048C.

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65ASAF - FEEDER TROUGH

PARTS ON THIS PAGE ARE USED AFTER SERIAL NO. 15000

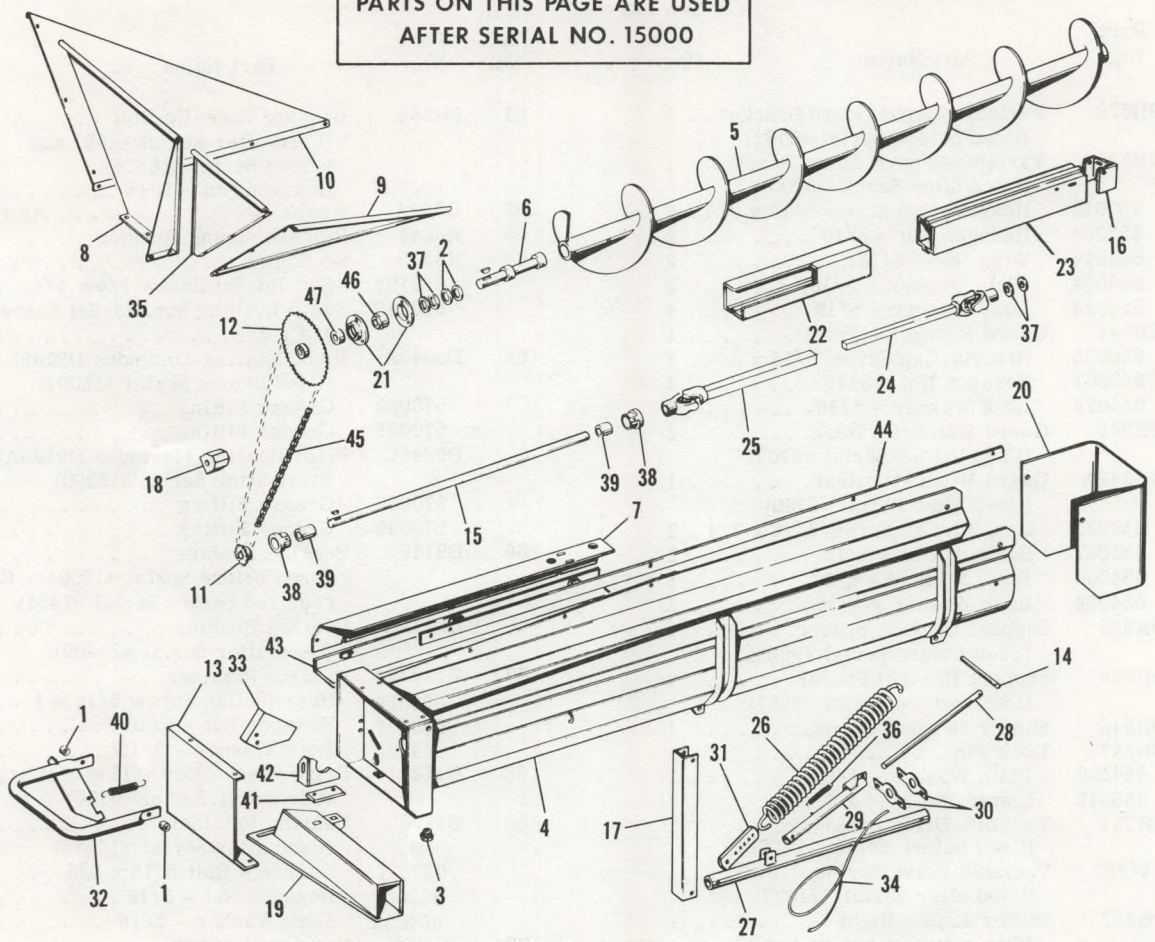

Ref. No.	Part No.	Part Name	No. Req.
1	19E27	Trough Lock Bushing	2
2	17H140	Shim Washer	2
3	6H183	Drain Plug	1
4	9H185E	Conveyor Trough	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	2
	650285	Round Hd. Mach. Screw #1024 x 1/2	2
	653003	Hex. Mach. Screw Nut - #1024	2
	653007	Hexagon Nut - 5/16	2
	654000	Plain Washer - 3/16	2
	654004	Plain Washer - 5/16	2
	654020	Lock Washer - 3/16	2
	654024	Lock Washer - 5/16	2
5	9H186	Conveyor	1
6	9H187A	Conveyor Shaft	1
	655507	Woodruff Key 5/16 x 1	1
	650054	Hex. Hd. Cap Screw 3/8 x 5/8	4
	654026	Lock Washer - 3/8	4
7	9H193C	Drive Shaft Guard (Used before Serial #19177)	1
	041954	Drive Shaft Guard (Used after Serial #19176)	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	2
	650269	Truss Head Screw 5/16 x 3/4	1
	653007	Hexagon Nut - 5/16	3
	654004	Plain Washer - 5/16	6
	654024	Lock Washer - 5/16	3

Ref. No.	Part No.	Part Name	No. Req.
8	9H199C	Conveyor Trough End	1
	650021	Hex. Hd. Cap Screw 5/16 x 1/2	3
	654024	Lock Washer - 5/16	3
9	9H200C	Trough Side - Right	1
	650267	Truss Head Screw 5/16 x 5/8	2
	650269	Truss Head Screw 5/16 x 3/4	1
	653007	Hexagon Nut - 5/16	3
	654004	Plain Washer - 5/16	1
	654024	Lock Washer - 5/16	3
10	9H201C	Trough Side - Left	1
	650267	Truss Head Screw 5/16 x 3/4	7
	653007	Hexagon Nut - 5/16	7
	654024	Lock Washer - 5/16	7
11	9H202A	Conveyor Drive Sprocket (14 T)	1
	650198	Soc. Hd. Set Screw 1/4 x 3/8	1
12	9H203B	Conveyor Driven Sprocket (58 T) (Used before Serial #18576)	1
	650197	Soc. Hd. Set Screw 1/4 x 3/8	1
	650204	Self-Locking Soc. Hd. Set Screw 5/16 x 3/8	1
	040171	Conveyor Driven Sprocket (45 T). (Used after Serial #18575)	1
	650204	Self-Locking Soc. Hd. Set Screw 5/16 x 3/8	2
13	9H207D	Conveyor Drive Guard	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	654024	Lock Washer - 5/16	4

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

Ref. No.	Part No.	Part Name	No. Req.
14	9H217A[A]	Pivot Shaft 1/2 x 7-1/4	1
		(Used before Serial #17376)	
	655015	Cotter Pin 3/16 x 1	2
	040736	Pivot Shaft 1/2 x 7-3/8	1
		(Used after Serial #17375)	
	655015	Cotter Pin 3/16 x 1	1
15	9H223A	Conveyor Drive Shaft 1 x 34-1/4	1
	655502	Woodruff Key 3/16 x 3/4	1
16	9H233A	Drive Guard Bracket	1
		(Used before Serial #19177)	
	041947	Drive Guard Bracket	1
		(Used after Serial #19176)	
	650029	Hex. Hd. Cap Screw 5/16 x 2-1/2	2
	650324	Hex. Hd. Cap Screw 5/16 x 4	1
	653007	Hexagon Nut - 5/16	2
	653073	Hexagon Lock Nut - 5/16	1
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
17	9H246A	Lift Support Segment	1
	650121	Hex. Hd. Cap Screw 1/2 x 3	1
	650124	Hex. Hd. Cap Screw 1/2 x 3-1/2	1
	653077	Hexagon Lock Nut - 1/2	2
18	9H251	Chain Tightener Block	1
	650124	Hex. Hd. Cap Screw 1/2 x 3-1/2	1
	653018	Hexagon Nut - 1/2	1
	654009	Plain Washer - 1/2	2
	654030	Lock Washer - 1/2	1
19	9H261D[B]	Conveyor Rest	1
		(Used before Serial #19177)	
	041957	Conveyor Rest	1
		(Used after Serial #19176)	
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	2
	653010	Hexagon Nut - 3/8	2
	654007	Plain Washer - 3/8	4
	654026	Lock Washer - 3/8	2
20	9H275A	Trough Hood	1
	650021	Hex. Hd. Cap Screw 5/16 x 1/2	2
	653073	Hexagon Lock Nut - 5/16	2
21	H275	Bearing Retainer	2
	650269	Truss Hd. Cap Screw 5/16 x 3/4	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
22	9H339A	Universal Drive Guard - Inside.	1
		(Used before Serial #19177)	
	041951	Universal Drive Guard - Inside.	1
		(Used after Serial #19176)	
	650028	Hex. Hd. Cap Screw 5/16 x 1	1
	653073	Hexagon Lock Nut - 5/16	1
	654004	Plain Washer - 5/16	1
23	9H340A	Universal Drive Guard - Outside	1
		(Used before Serial #19177)	
	041948[C]	Universal Drive Guard - Outside	1
		(Used after Serial #19176 and before Serial #19952)	
	042097	Universal Drive Guard - Outside	1
		(Used after Serial #19951)	
24	9H349	Universal Joint w/Sq. Shaft	1
	570004	Grease Fitting	1
	650034	Hex. Hd. Cap Screw 5/16 x 1-3/4	1
	653073	Hexagon Lock Nut - 5/16	1
25	9H350	Universal Joint w/Sq. Tube	1
	570004	Grease Fitting	1
	650034	Hex. Hd. Cap Screw 5/16 x 1-3/4	1
	653073	Hexagon Lock Nut - 5/16	1
26	9H366	Trough Lift Spring	1
		(Used before Serial #21078)	
	040174	Trough Lift Spring	1
		(Used after Serial #21077)	
27	9H367	Lift Support	1
		(Used before Serial #21078)	
	044255	Lift Support	1
		(Used after Serial #21077)	
	650075	Hex. Hd. Cap Screw 3/8 x 2-3/4	1
	653075	Hexagon Lock Nut - 3/8	1
28	9H368	Lift Support Shaft 1 x 15-1/4	1
	650066	Hex. Hd. Cap Screw 3/8 x 1-3/4	1
	653075	Hexagon Lock Nut - 3/8	1
29	9H369	Lift Support Tube	1
	650070	Hex. Hd. Cap Screw 3/8 x 2-1/4	1
	653073	Hexagon Lock Nut - 5/16	1
	653075	Hexagon Lock Nut - 3/8	1
	654004	Plain Washer - 5/16	1
30	9H370	Lock Segment	2
31	9H371	Spring Segment	1
32	9H372	Lift Handle	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
33	9H373	Handle Stop	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
34	9H374	Lock Segment Cord 3/16 x 90	1
35	9H375	Trough End Extension	1
36	17H387	Lock Segment Spring	1
37	D932A	Washer	4
38	D975B	Drive Shaft Bearing	2
		(Includes H8352A Bushing)	
	570002	Grease Fitting	2
39	H8352A	Bearing Bushing	2
40	U10063	Lift Handle Spring	1
41	040733	Shim	1
42	041912	Trough Lock Bracket	1
		(Used after Serial #19176)	
	652122	Carriage Bolt 3/8 x 1	2
	653010	Hexagon Nut - 3/8	2
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	2
43	041955	Shaft Guard - Lower	1
		(Used after Serial #19176)	
	650021	Hex. Hd. Cap Screw 5/16 x 1/2	3
	650290	Round Hd. Sheet Metal Screw - #14 x 1/2	2
	654004	Plain Washer - 5/16	3
	654024	Lock Washer - 5/16	3
44	041961	Auger Scraper	1
		(Used after Serial #19176)	
	650267	Truss Hd. Cap Screw 5/16 x 5/8	3
	650285	Round Hd. Machine Screw - #1024 x 1/2	2
	653007	Hexagon Nut - 5/16	3
	653003	Hex. Machine Screw Nut #1024	2
	654004	Plain Washer - 5/16	3
	654000	Plain Washer - 3/16	2
	654024	Lock Washer - 5/16	3
	654020	Lock Washer - 3/16	2
45	500049	Chain of 69 Links Including One Plain (500043) and One Offset (500044) Coupler	1
		(Used before Serial #18576)	
	500048	Chain of 61 Links Including One Plain (500043) and One Offset (500044) Coupler	1
		(Used after Serial #18575)	
46	520063	Ball Bearing	1
47	520084	Bearing Collar	1

[A] For Replacement, Order 040736.
[B] For Replacement, Order 041957 w/one 040498.
[C] For Replacement, Order 042097.

NOTE: See page 44 for Swinging Auger Feeder Hoppers.

65SAF - FEEDER TROUGH

PARTS ON THIS PAGE ARE USED BEFORE SERIAL NO. 15001

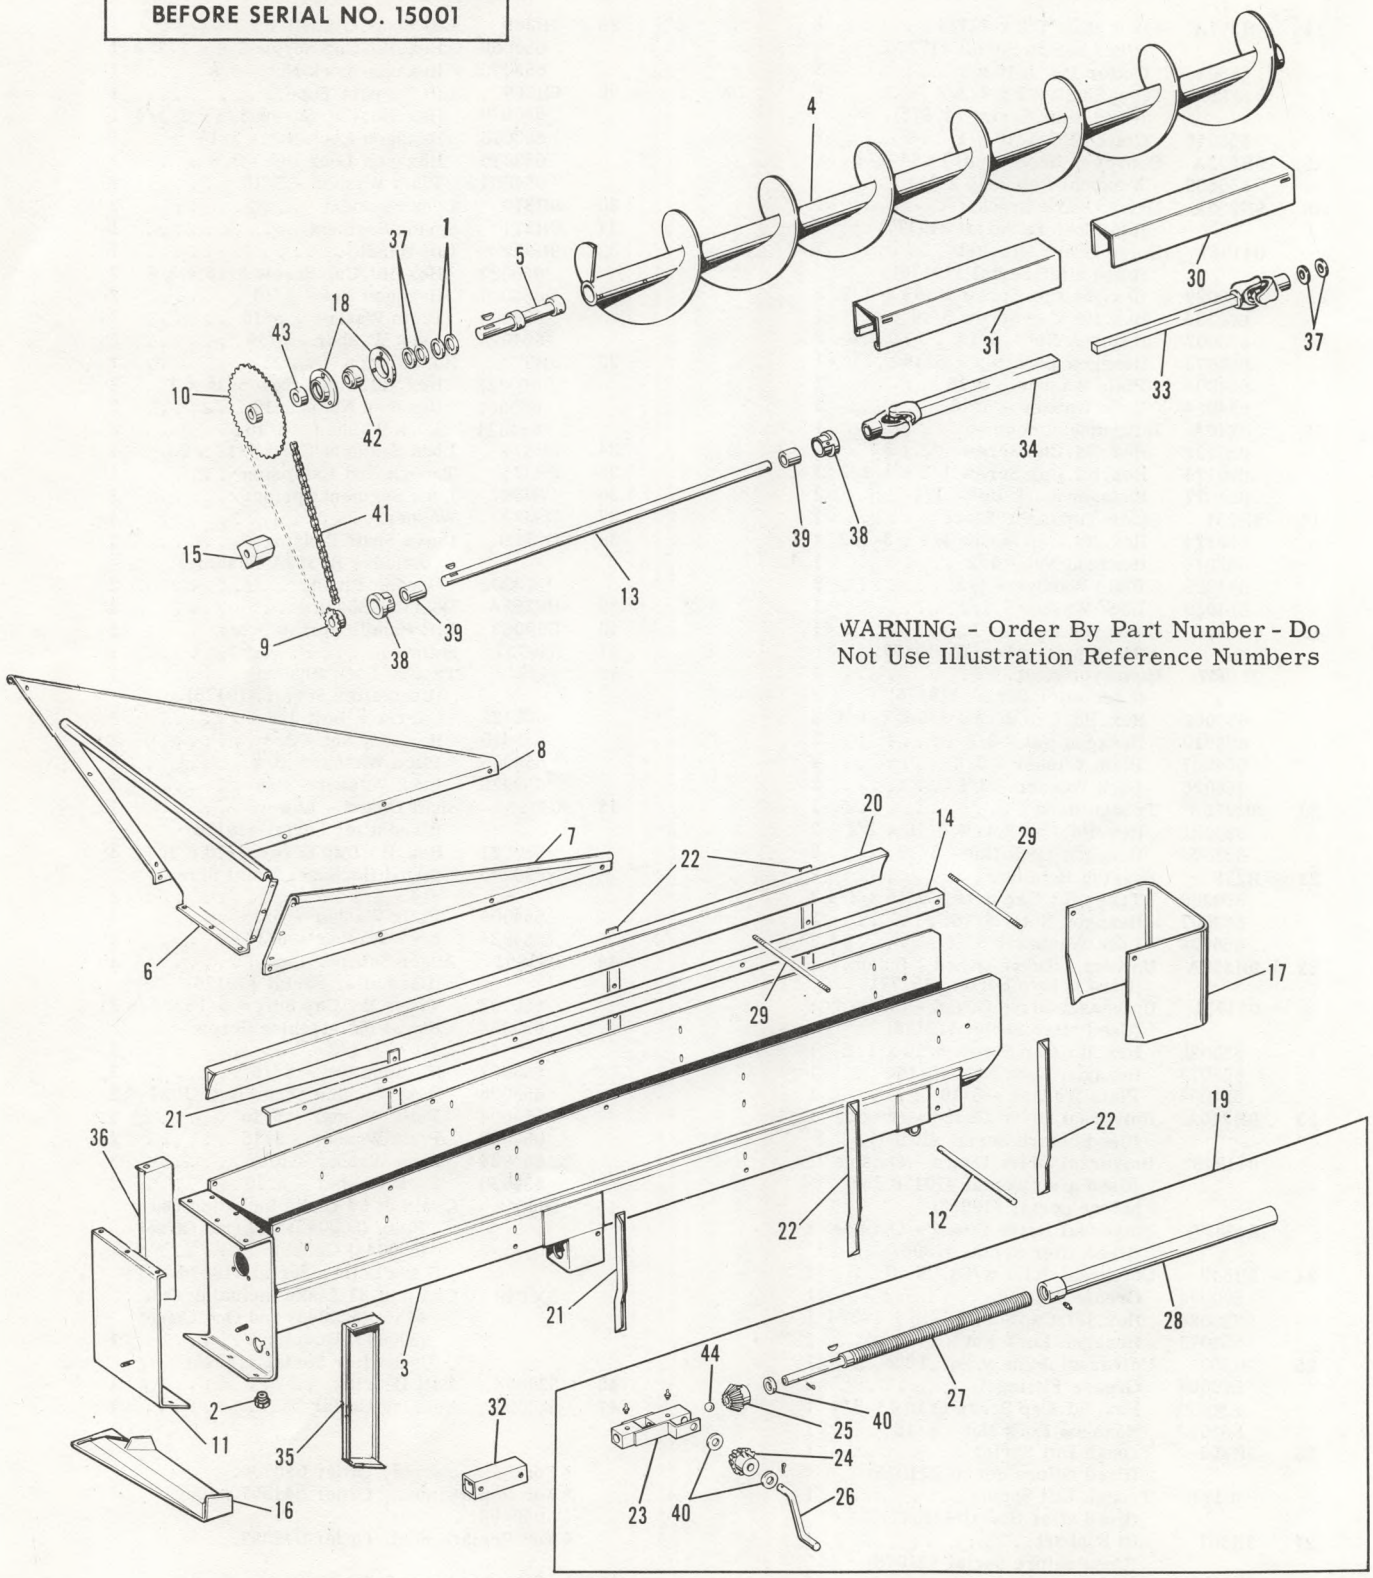

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65SAF - FEEDER TROUGH

Ref. No.	Part No.	Part Name	No. Req.
1	17H140	Shim Washer	2
2	6H183	Drain Plug (Used after Serial #8200)	1
3	9H185C	Conveyor Trough (Used before Serial #6701)	1
	9H185D	Conveyor Trough (Used after Serial #6700)	1
4	9H186A	Conveyor	1
5	9H187A	Conveyor Shaft	1
	655507	Woodruff Key 5/16 x 1	1
6	9H199A	Conveyor Trough End (Used before Serial #7451)	1
	9H199B	Conveyor Trough End (Used after Serial #7450)	1
7	9H200A	Trough Side - Right (Used before Serial #7451)	1
	9H200B	Trough Side - Right (Used after Serial #7450)	1
8	9H201A	Trough Side - Left (Used before Serial #7451)	1
	9H201B	Trough Side - Left (Used after Serial #7450)	1
9	9H202A	Conveyor Drive Sprocket (14 T)	1
	650197	Soc. Hd. Set Screw 1/4 x 3/8	1
10	9H203B	Conveyor Driven Sprocket (58 T)	1
	650197	Soc. Hd. Set Screw 1/4 x 3/8	1
	650204	Self-Locking Soc. Hd. Set Screw 5/16 x 3/8	1
11	9H207B	Conveyor Drive Guard (Used before Serial #6701)	1
	9H207C	Conveyor Drive Guard (Used after Serial #6700)	1
12	9H217	Pivot Shaft 1/2 x 12	1
	655015	Cotter Pin 3/16 x 1	2
13	9H223A	Conveyor Drive Shaft 1 x 34-1/4.	1
	655504	Woodruff Key 3/16 x 1	1
14	9H231A	Conveyor Guide - Right	1
15	9H251A	Chain Tightener Block	1
	650128	Hex. Hd. Cap Screw 1/2 x 4	1
16	9H261B	Conveyor Rest (Used before Serial #6701)	1
	9H261C	Conveyor Rest (Used after Serial #6700)	1
17	9H275	Trough Hood	1
18	H275	Bearing Retainer	2
19	9H288A	Conveyor Jack	1
20	9H292B	Conveyor Guide - Left	1
21	9H293	Trough Reinforcement Angle	2
22	9H293A	Trough Reinforcement Angle	4
23	9H311	Jack Head	1
	570014	Grease Fitting	2
24	9H312	Drive Gear (12 T)	1
	655031	Cotter Pin 1/4 x 2-1/4	1
25	9H313	Driven Gear (12 T)	1
26	9H314	Jack Handle	1
27	9H315	Jack Screw	1
	655505	Woodruff Key 1/4 x 1	1
	655017	Cotter Pin 3/16 x 1-1/4	1
28	9H316	Jack Screw Tube	1
	570002	Grease Fitting	1
29	9H320	Trough Reinforcement Bolt	2
30	9H339	Universal Drive Guard - Inside.	1
31	9H340	Universal Drive Guard - Outside.	1
32	9H345	Lift Jack Extension	1
33	9H349	Universal Joint w/Sq. Shaft	1
	570004	Grease Fitting	1
34	9H350	Universal Joint w/Sq. Tube	1
	570004	Grease Fitting	1
35	9H361	Chain Cover - Right (Used after Serial #6700)	1
36	9H362	Chain Cover - Left (Used after Serial #6700)	1
37	D932A	Washer	4
38	D975B	Drive Shaft Bearing (Includes H8352A Bushing)	2
	570002	Grease Fitting	2
39	H8352A	Bearing Bushing	2
40	B11162	Shim Washer	3
41	500049	Chain of 71 Links Including One Plain (500043) and One Offset (500044) Coupler	1
42	520063	Bearing	1
43	520084	Bearing Collar	1
44	666002	Steel Ball	1

NOTE: See Page 44 for Swinging Auger Feeder Hoppers.

65CF - CRUSHER

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

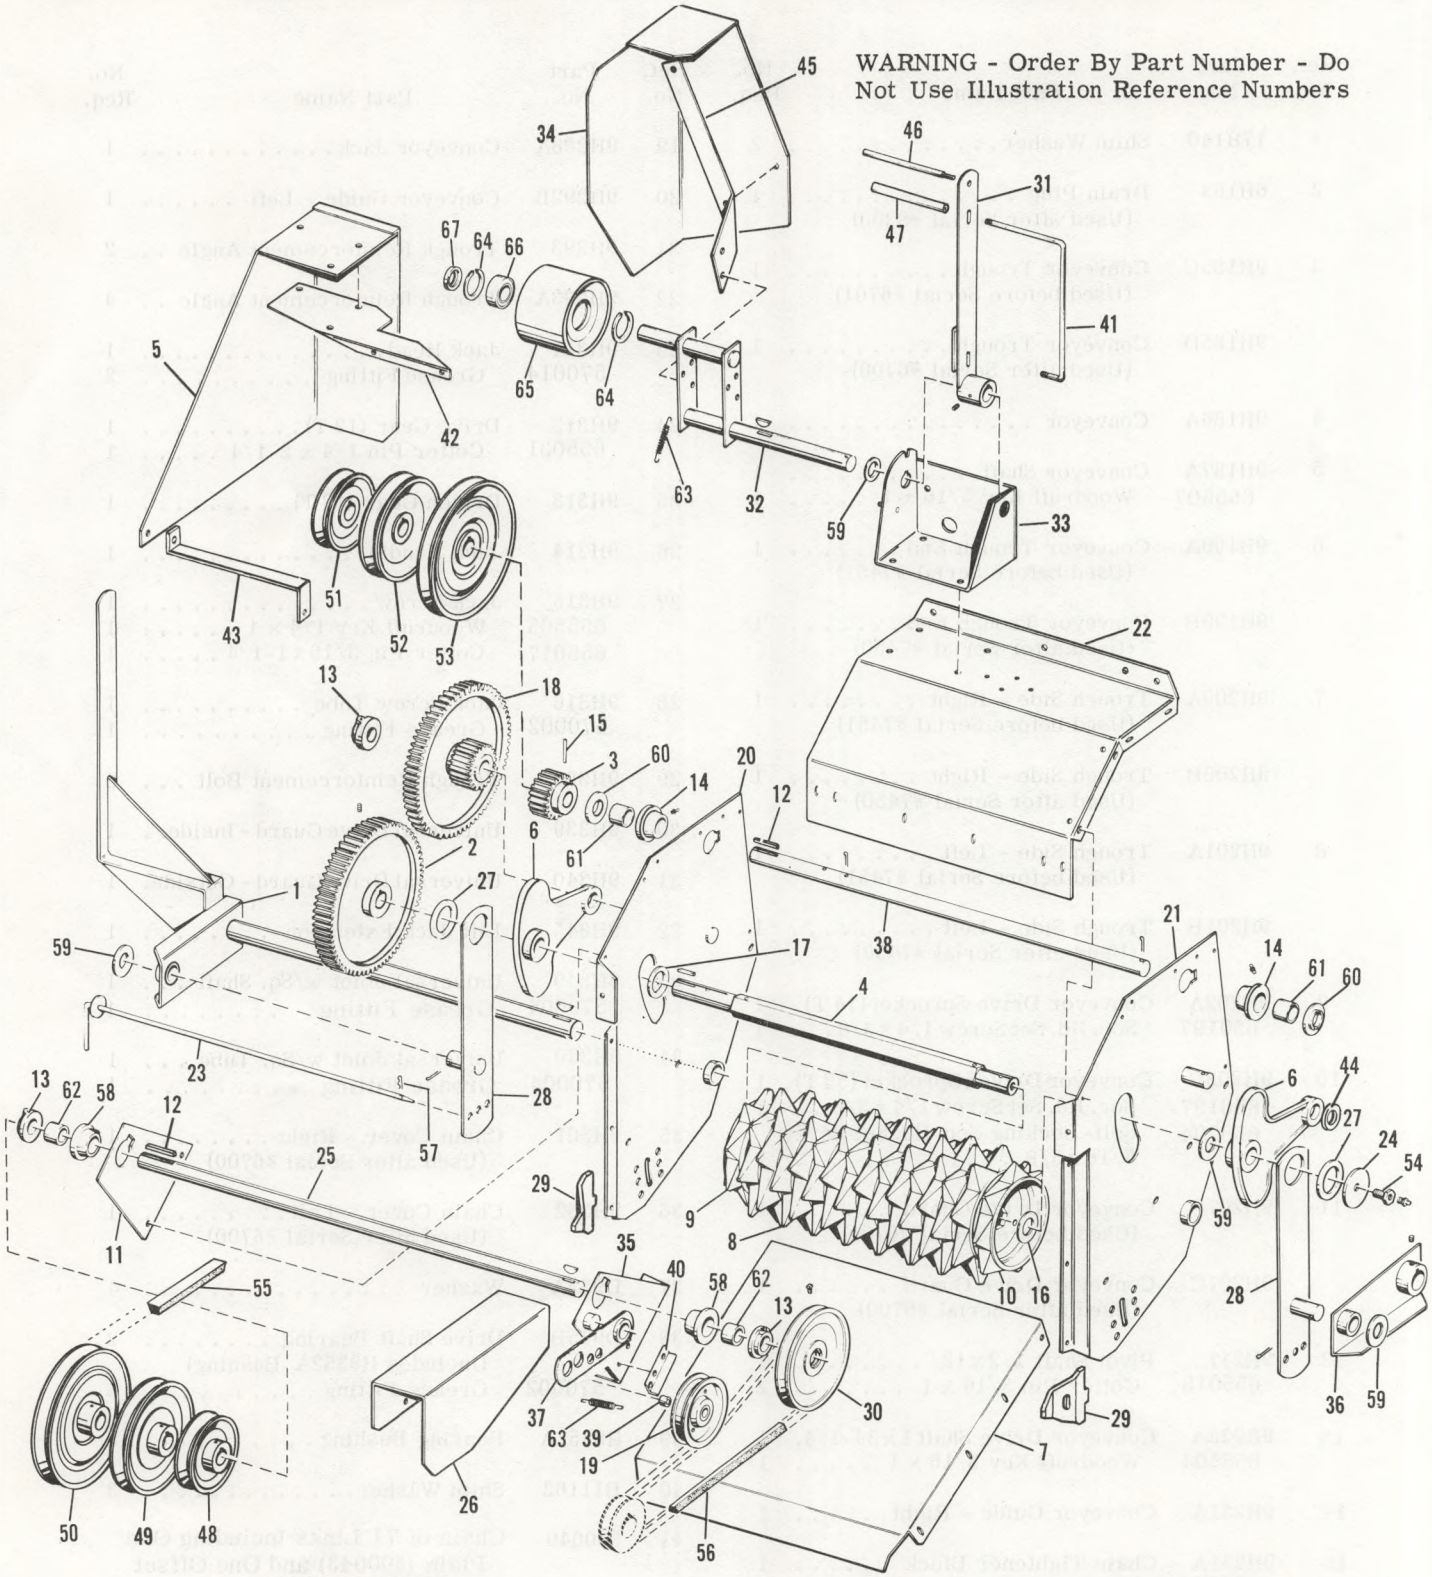

Ref. No.	Part No.	Part Name	No. Req.
1	3E11D	Roughage Roller Lift.	1
	655507	Woodruff Key 5/16 x 1.	1
2	3J12A	Crusher Driven Gear (48 T) . .	1
	650214	Soc. Hd. Set Screw 3/8 x 1/2 . .	1
3	3H13A	Crusher Drive Gear (12 T) . . .	1
4	3E17B	Roller Shaft 1-1/4 Hex. x 20-7/8.	1
	570002	Grease Fitting	1
	655514	Tapered Key 5/16 x 1-1/2. . .	1
	655030	Cotter Pin 1/4 x 2	2
5	3E24B	Gear Guard	1
6	3E25B	Roller Equalizer	2

65CF - CRUSHER

Ref. No.	Part No.	Part Name	No. Req.
7	3E32G	Throat Plate	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	8
	653007	Hexagon Nut - 5/16	8
	654004	Plain Washer - 5/16	6
	654024	Lock Washer - 5/16	8
8	3H33A	Crusher	14
9	3E34	End Crusher - Right	1
	652010	Hex. Hd. Machine Bolt 3/8 x 14-1/2	3
	653075	Hexagon Lock Nut - 3/8	3
	654006	Plain Washer - 3/8	3
10	3E35	End Crusher - Left	1
	654006	Plain Washer - 3/8	3
11	3E37C	Jack Shaft Bearing Support - Right	1
12	3E42A	Roller Drive Key 5/16 sq. x 3	2
13	4H42	Set Collar	3
	650214	Soc. Hd. Set Screw 3/8 x 1/2	3
14	3H50C	Jack Shaft Bearing (Includes H8345 Bushing)	2
	570002	Grease Fitting	2
15	3H53	Crusher Drive Pin 5/16 x 2-15/16	1
16	3H55	Crusher Roller Shim	6
17	3H55A	Crusher Shim Washer	2
18	7H57A	Roller Intermediate Gear	1
	570002	Grease Fitting	1
19	5E77	Drive Belt Tightener Pulley	1
	650122	Hex. Hd. Cap Screw 1/2 x 3-1/4	1
	653018	Hexagon Nut - 1/2	1
	654030	Lock Washer - 1/2	1
20	3E84	Crusher Side - Right	1
21	3E85	Crusher Side - Left	1
	655019	Cotter Pin 3/16 x 1-1/2	1
22	3E88E	Crusher Roller Cover	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	8
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	10
	654004	Plain Washer - 5/16	10
	654024	Lock Washer - 5/16	10
23	3E94B	Roller Adjustment Pin	1
	654008	Plain Washer - 1/2	1
24	3H100	Roller Adjustment Washer	1
25	3E102B	Main Drive Shaft 1 x 27-9/16	1
	655507	Woodruff Key 5/16 x 1	1
26	3E105	Crusher Drive Guard	1
27	3E107	Adjustment Link Washer	2
28	3E108	Roller Adjustment Link	2
	655019	Cotter Pin 3/16 x 1-1/2	2
29	3E124	Throat Plate Filler (Used after Serial #12001)	2
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	2
30	3E126	Crusher Sheave (6.5 Dia.) (For use when Mixer is equipped with 540 R. P. M. Drive)	1
	650206	Soc. Hd. Set Screw 5/16 x 1/2	1
	3E126A	Crusher Sheave (11.0 Dia.) (For use when Mixer is equipped with 1000 R. P. M. Drive)	1
	650206	Soc. Hd. Set Screw 5/16 x 1/2	1
31	3E127	Belt Tightener Shifter	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	1
32	3E128	Belt Tightener Pivot	1
	655507	Woodruff Key 5/16 x 1	1
	655019	Cotter Pin 3/16 x 1-1/2	1
33	3E129	Pivot Bracket	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	653007	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
34	3E130	Crusher Drive Belt Guard	1
35	3E131	Jack Shaft Bearing Support - Left	1
	655019	Cotter Pin 3/16 x 1-1/2	1
	653010	Hexagon Nut - 3/8	2
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	2
36	3E132	Roller Lift Arm - Left	1
	650203	Soc. Hd. Set Screw 5/16 x 3/8	1
37	3E133	Idler Link (Used before Serial #15229)	1
	3E133A	Idler Link (Used after Serial #15228)	1
38	3E135	Jack Shaft 15/16 x 25-1/16	1
	655019	Cotter Pin 3/16 x 1-1/2	2
39	3E136	Tightener Pulley Spacer	1
40	3E137	Spring Bracket	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
41	3E138	Shifter Release Rod	1
	653075	Hexagon Lock Nut - 3/8	2
	654006	Plain Washer - 3/8	2
42	3E139	Gear Guard Bracket - Upper	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	5
	653007	Hexagon Nut - 5/16	5
	654024	Lock Washer - 5/16	5
43	3E140	Gear Guard Bracket - Lower	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	1
	653007	Hexagon Nut - 5/16	1
	654024	Lock Washer - 5/16	1
44	17H140	Washer	1
45	3E141	Drive Belt Guard Bracket	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	653007	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
46	3E142	Shifter Grip	1
	653018	Hexagon Nut - 1/2	1
	654030	Lock Washer - 1/2	1
47	3E143	Shifter Handle	1
48	3E144	Roller Drive Sheave - Left (4.5 Dia.)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
49	3E145	Roller Drive Sheave - Center (6.5 Dia.)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
50	3E146	Roller Drive Sheave - Right (8.0 Dia.)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
51	3E147	Driven Sheave - Right (4.5 Dia.)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
52	3E148	Driven Sheave - Center (6.0 Dia.)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
53	3E149	Driven Sheave - Left (8.0 Dia.)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	2
54	9H240	Adjustment Link Bolt	1
	570011	Grease Fitting	1
	654030	Lock Washer - 1/2	1
55	9H242	Crusher Drive Belt	1
56	17H257C	Crusher Drive Belt (For use when Mixer is equipped with 540 R. P. M. Drive)	1
	3E134A	Crusher Drive Belt (For use when Mixer is equipped with 1000 R. P. M. Drive)	1
57	9H300	Crusher Lock Pin	1
58	D975B	Drive Shaft Bearing (Includes H8352A Bushing)	2
	570002	Grease Fitting	2
59	H8054	Shim Washer	4
60	H8084	Jack Shaft Retainer	2
61	H8345	Bearing Bushing	2
62	H8352A	Bearing Bushing	2
63	U10063	Belt Tightener Spring	2
64	M12141	Retaining Ring	2
65	R13177	Belt Tightener Pulley	1
66	520062	Ball Bearing	1
67	520084	Bearing Collar	1

Note: See Page 44 for Crusher Hoppers.

65MX - FIBERGLASS TANK

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

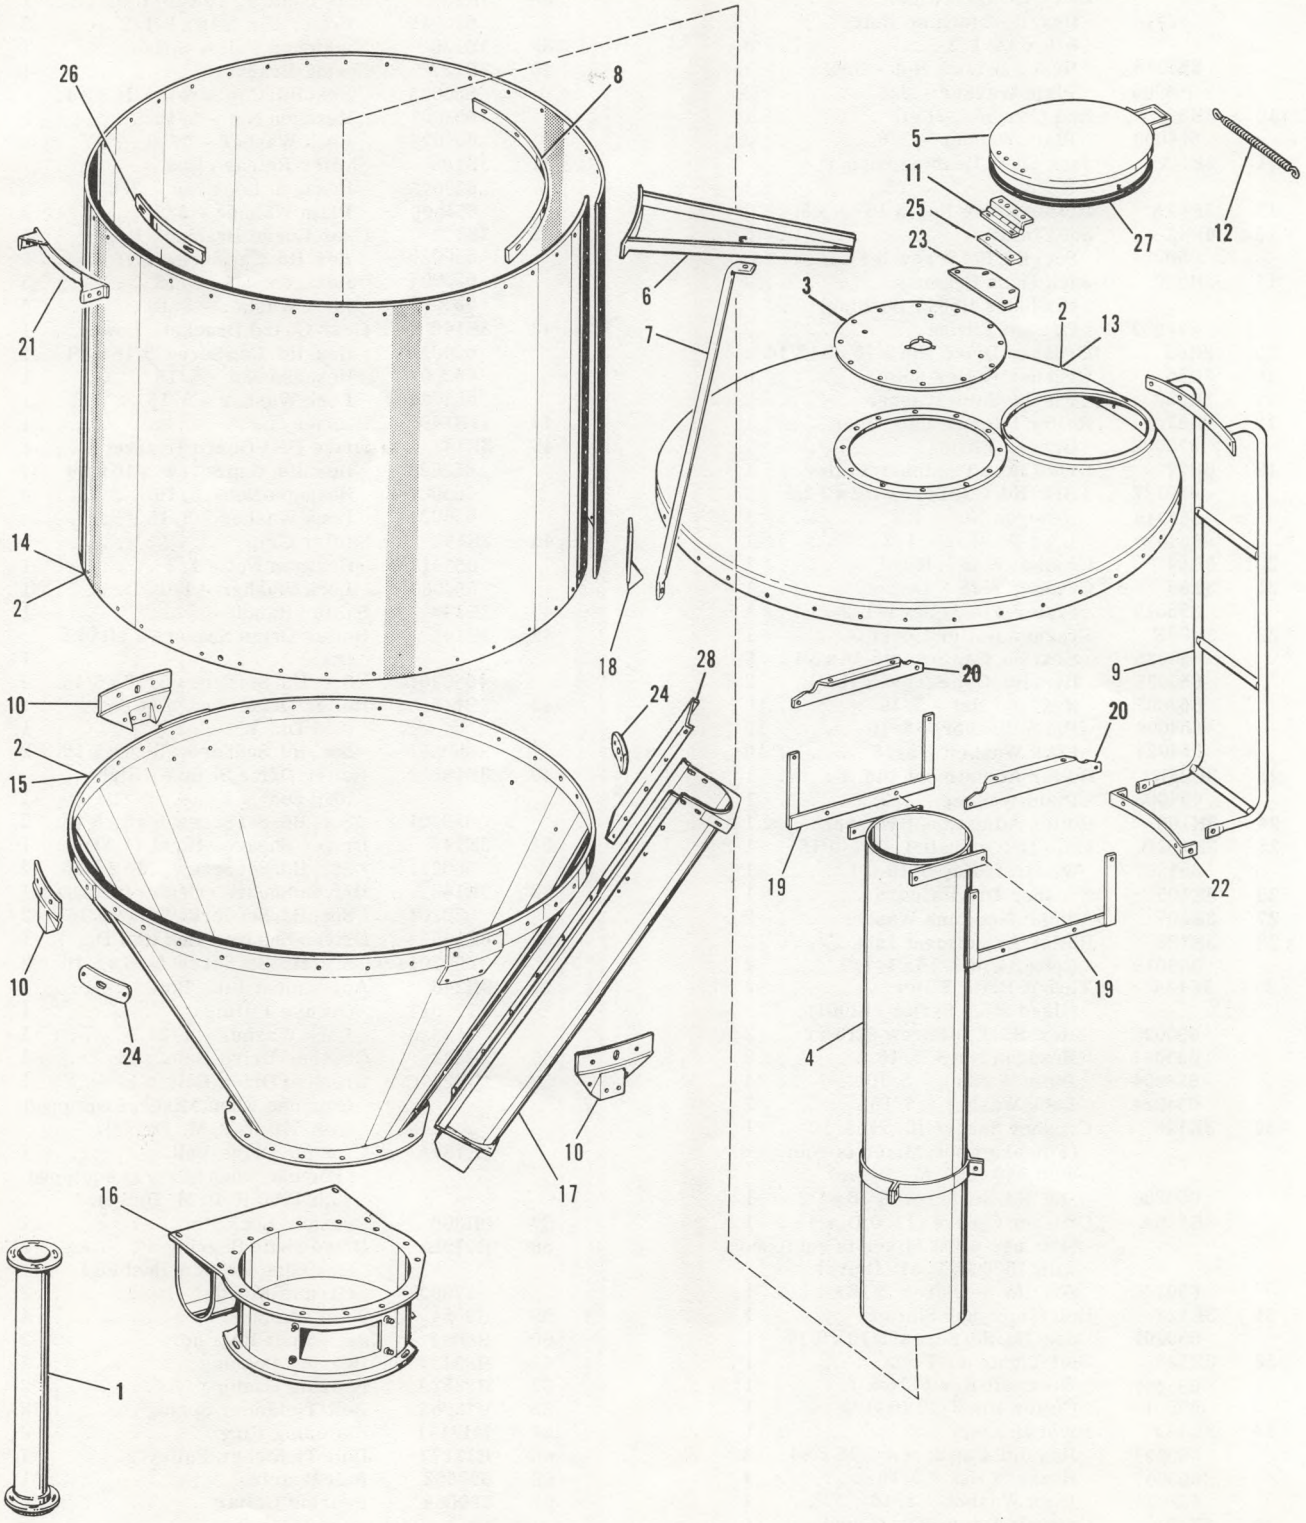

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - FIBERGLASS TANK

Ref. No.	Part No.	Part Name	No. Req.
1	6H90C	Blower Pipe (29 ")	1
2	17H147B	Mixer Tank Assembled	1
	650269	Truss Hd. Screw 5/16 x 3/4	65
	653007	Hexagon Nut - 5/16	65
	654004	Plain Washer - 5/16	65
	654024	Lock Washer - 3/8	25
3	17H151A	Mixer Cover - Center	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	9
	650028	Hex. Hd. Cap Screw 5/16 x 1	3
	653007	Hexagon Nut - 5/16	12
	654024	Lock Washer - 5/16	12
4	17H155A	Mixer Tube	1
5	17H158B	Mixer Cover Lid	1
6	6H177A	Conveyor Hanger Arm	1
		(Used before Serial #35001)	
	042251	Conveyor Hanger Arm	1
		(Used after Serial #35000)	
	650273	Truss Hd. Screw 5/16 x 1-1/4	3
	653007	Hexagon Nut - 5/16	3
	654004	Plain Washer - 5/16	6
	654024	Lock Washer - 5/16	3
7	6H184	Hanger Arm Brace	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	1
	653007	Hexagon Nut - 5/16	1
	654024	Lock Washer - 5/16	1
8	6H185	Hanger Arm Reinforcement	1
		(Used after Serial #21375)	
9	17H342A	Ladder	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	1
	650032	Hex. Hd. Cap Screw 5/16 x 1-1/2	1
	650271	Truss Hd. Screw 5/16 x 1	4
	653007	Hexagon Nut - 5/16	6
	653073	Hexagon Lock Nut - 5/16	1
	654004	Plain Washer - 5/16	6
	654024	Lock Washer - 5/16	6
10	17H364A	Leg Support Bracket	3
	650273	Truss Hd. Screw 5/16 x 1-1/4	12
	653007	Hexagon Nut - 5/16	12
	654004	Plain Washer - 5/16	12
	654024	Lock Washer - 5/16	12
11	17H367	Cover Lid Hinge	1
	650261	Truss Hd. Screw 1/4 x 1/2	4
	653005	Hexagon Nut - 1/4	4
	654022	Lock Washer - 1/4	4
12	17H390	Cover Hold-Down Spring	1
13	17H401	Mixer Tank Cover	1
14	17H402	Mixer Tank Cylinder	1
15	17H403	Mixer Tank Cone	1
16	17H404	Tank Cone Base	1
		(Used before Serial #25132)	
	17H404A	Tank Cone Base	1
		(Used after Serial #25131)	
	650028	Hex. Hd. Cap Screw 5/16 x 1	10
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	5
	650271	Truss Hd. Screw 5/16 x 1	5
	653007	Hexagon Nut - 5/16	15
	653010	Hexagon Nut - 3/8	5
	653093	Wing Nut - 5/16	4
	654004	Lock Washer - 5/16	15
	654006	Plain Washer - 3/8	10
	654024	Lock Washer - 5/16	23
	654026	Lock Washer - 3/8	5
17	17H405	Discharge Conveyor Trough	1
		(Used before Serial #35001)	
	042249	Discharge Conveyor Trough	1
		(Used after Serial #35000)	
	650269	Truss Hd. Screw 5/16 x 3/4	14
	653007	Hexagon Nut - 5/16	14
	654004	Plain Washer - 5/16	14
	654024	Lock Washer - 5/16	14
18	17H406	Slide Adjustment	1
	650273	Truss Hd. Screw 5/16 x 1-1/4	1
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	1
19	17H407	Mixer Tube Support	2
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	654024	Lock Washer - 5/16	4
20	17H408	Mixer Tube Hanger	2
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	653007	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
21	17H409	Dust Collector Support	1
		(Used before Serial #32626)	
	041487	Dust Collector Support	1
		(Used after Serial #32625)	
	650271	Truss Hd. Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	2
22	17H410	Ladder Bracket	1
	650269	Truss Hd. Screw 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
23	17H411	Hinge Bracket	1
	650005	Hex. Hd. Cap Screw 1/4 x 3/4	2
	653005	Hexagon Nut - 1/4	2
	654002	Plain Washer - 1/4	2
	654022	Lock Washer - 1/4	2
24	17H412	Mixer Tube Guide Support	2
25	17H413	Hinge Spacer	1
		(Used before Serial #25132)	
	17H413A	Hinge Spacer	1
		(Used after Serial #25131)	
26	17H414	Dust Collector Reinforcement	1
		(Used after Serial #25131)	
27	17H420	Sealer	1
		(Used after Serial #25131)	
28	042223	Auxiliary Trough Cover	1
		(Used after Serial #35000)	
	650022	Hex. Hd. Cap Screw 5/16 x 5/8	8
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	8

Note: To order complete set of decals for 65 MX with Fiberglass Tank, specify decal Kit #610028 for machines before Serial #25856. Specify Decal Kit #610260 for machines after Serial #25855.

65SH - SUPPORT AND DRIVE

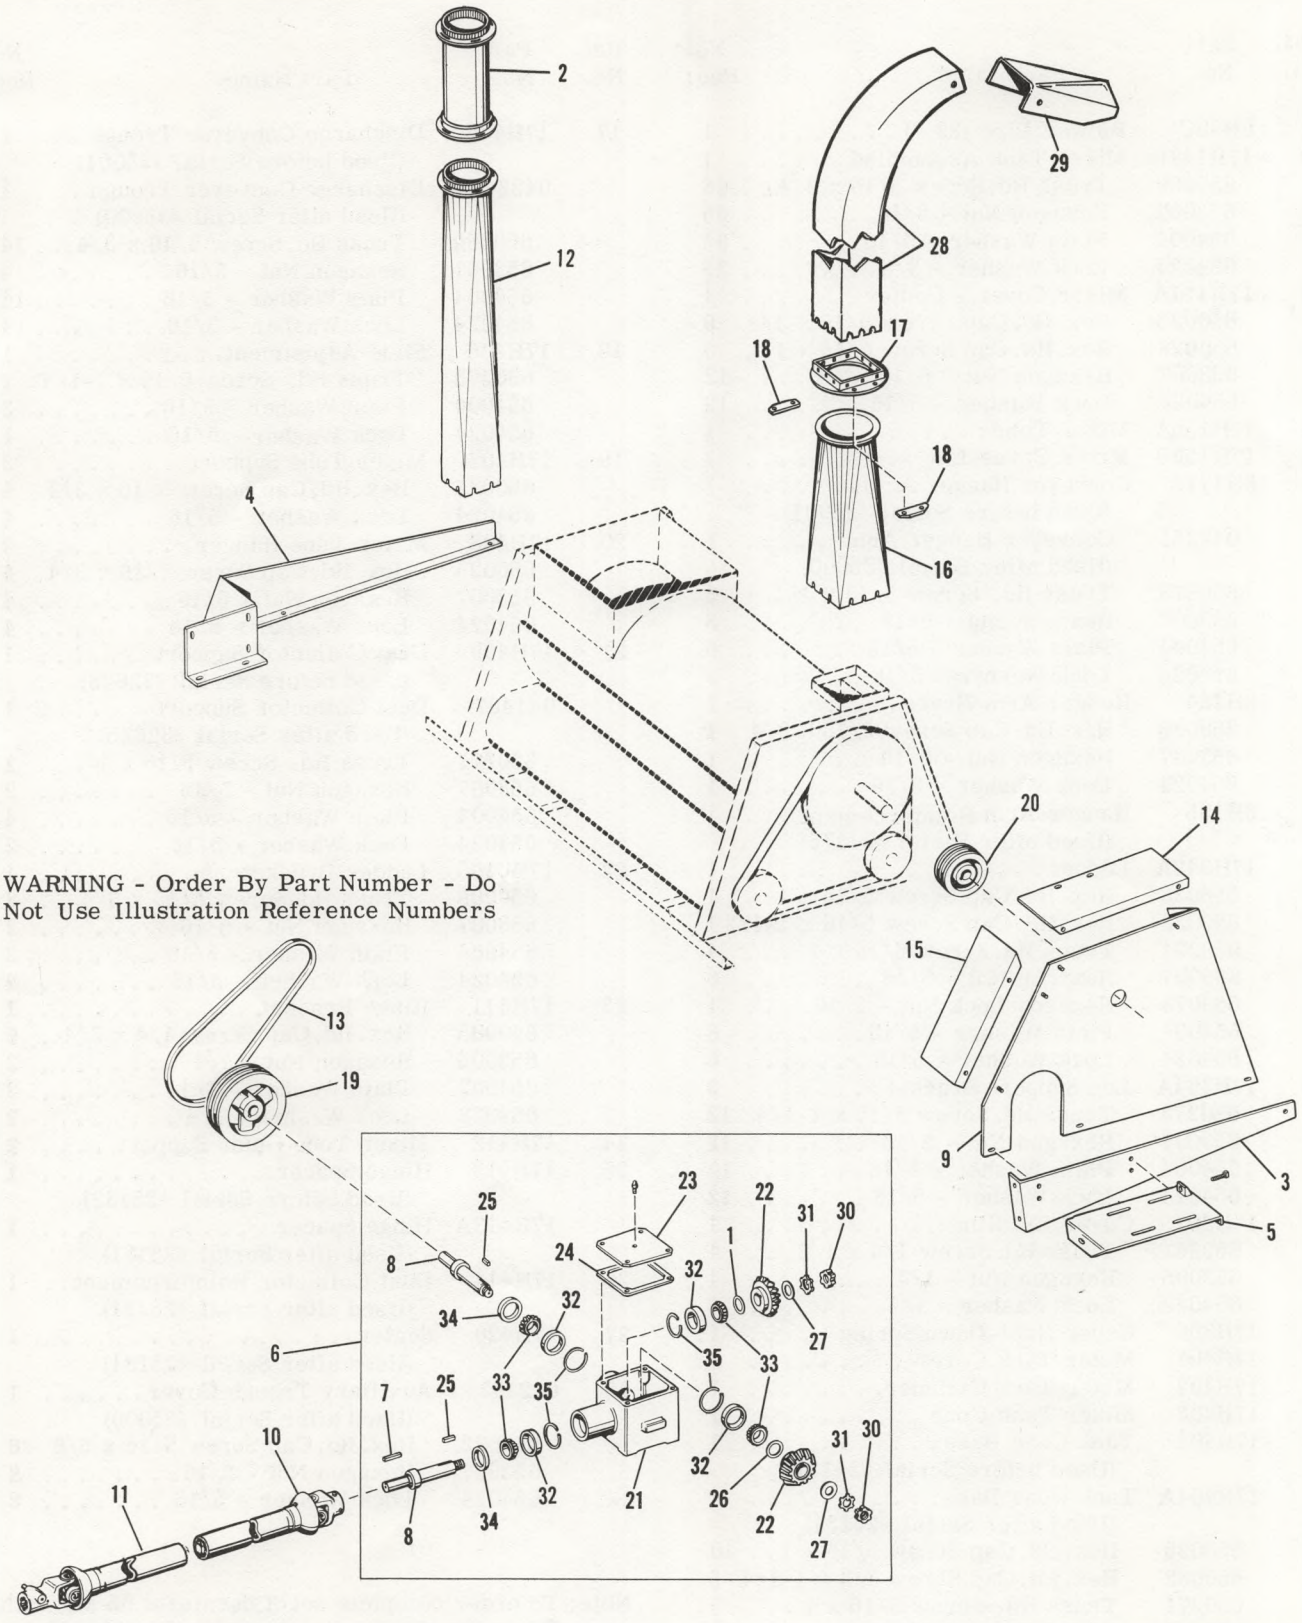

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

Ref. No.	Part No.	Part Name	No. Req.
1	3H55A	Shim Washer . . . . . As req.	
2	6H91B	Standard Pipe - 12"	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8 .	4
	653005	Hexagon Nut - 1/4	4
	654002	Plain Washer - 1/4	8
	654022	Lock Washer - 1/4	4
3	17H204C	Sheller Support - Right	1
	650106	Hex. Hd. Cap Screw 1/2 x 1-1/4	4
	653018	Hexagon Nut - 1/2	4
	654030	Lock Washer - 1/2	4
4	17H205C	Sheller Support - Left . . . . . (Used before Serial #35001)	1
	042380	Sheller Support - Left . . . . . (Used after Serial #35000)	1
	650106	Hex. Hd. Cap Screw 1/2 x 1-1/4	2
	650109	Hex. Hd. Cap Screw 1/2 x 1-1/2	5
	653018	Hexagon Nut - 1/2	7
	654009	Plain Washer - 1/2	8
	654030	Lock Washer - 1/2	7
5	17H206B[A]	Transmission Support . . . . . (Used before Serial #38003)	1
	042384	Transmission Support . . . . . (Used after Serial #38002)	1
	650252	Sq. Hd. Set Screw 1/2 x 4	1
	650060	Hex. Hd. Cap Screw 3/8 x 1 . . .	5
	653010	Hexagon Nut - 3/8	5
	653044	Hexagon Jam Nut - 1/2	1
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	5
6	17H207	Transmission Assembled	1
	650106	Hex. Hd. Cap Screw 1/2 x 1-1/4	4
	654009	Plain Washer - 1/2	4
	654030	Lock Washer - 1/2	4
7	17H208	Universal Joint Key 1/4 x 1/4 x 2	1
8	17H209	Transmission Shaft - 1-3/8 x 8-15/16	2
9	17H210B	Main Drive Guard	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	2
	653007	Hexagon Nut - 5/16	6
	654004	Plain Washer - 5/16	3
	654024	Lock Washer - 5/16	6
10	17H212A[B]	Universal Joint w/Sq. Shaft . . .	1
	570004	Grease Fitting	1
11	17H213A[B]	Universal Joint w/Sq. Tube . . .	1
	570004	Grease Fitting	1
	650087	Hex. Hd. Cap Screw 3/8 x 5 . . .	1
	653010	Hexagon Nut - 3/8	2
12	17H218B	Adapter Pipe	1
13	17H227C	Drive Belt Set (Matched Set of Three 9H242) . . . . . 1 set	
14	17H343	Drive Guard Cover	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	1
	653007	Hexagon Nut - 5/16	1
	654004	Plain Washer - 5/16	1
	654024	Lock Washer - 5/16	1
15	17H344	Belt Guard.	1
16	17H345	Cob Thrower Adapter Pipe	1
17	17H346	Rotating Flange	1
	652020	Carriage Bolt 1/4 x 1/2	9
	650028	Hex. Hd. Cap Screw 5/16 x 1 . .	4
	653005	Hexagon Nut - 1/4	9
	653073	Hexagon Lock Nut - 5/16	4
	654004	Plain Washer - 5/16	8
	654022	Lock Washer - 1/4	9
18	17H347	Hold-Down Clip	2
19	S-367[C]	Drive Sheave (9 O.D.)	1
	650212	Soc. Hd. Set Screw 3/8 x 3/8 . .	1
	650214	Soc. Hd. Set Screw 3/8 x 1/2 . .	1
20	S-368[D]	Driven Sheave (5-1/2 O.D.) . . .	1
	650212	Soc. Hd. Set Screw 3/8 x 3/8 . .	1
	650214	Soc. Hd. Set Screw 3/8 x 1/2 . .	1
21	C14000	Transmission Housing	1
22	C14002	Drive Gear (17 T)	2
23	C14005	Transmission Cover	1
	570016	Relief Fitting	1
	650056	Hex. Hd. Cap Screw 3/8 x 3/4 .	4
	654026	Lock Washer - 3/8	4
24	C14008	Cover Gasket	1
25	C14036	Transmission Key 3/8 x 3/8 x 1-1/4	2
26	C14054A	Shim Washer	2
27	C14095	Transmission Washer	2
28	041861	Cob Stacker Elbow	1
29	041867	Stacket Pipe Deflector	1
30	520000	Lock Nut	2
31	520001	Lock Washer	2
32	520046	Bearing Cup	4
33	520047	Bearing Cone	4
34	530000	Oil Seal	2
35	540002	Retaining Ring	4

[A] For Replacement, Order 042384.
[B] See Page 48 for Universal Drive Service Parts
[C] For Replacement, Order 041865.
[D] For Replacement, Order 041866.

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65SH - DISCHARGE PIPE

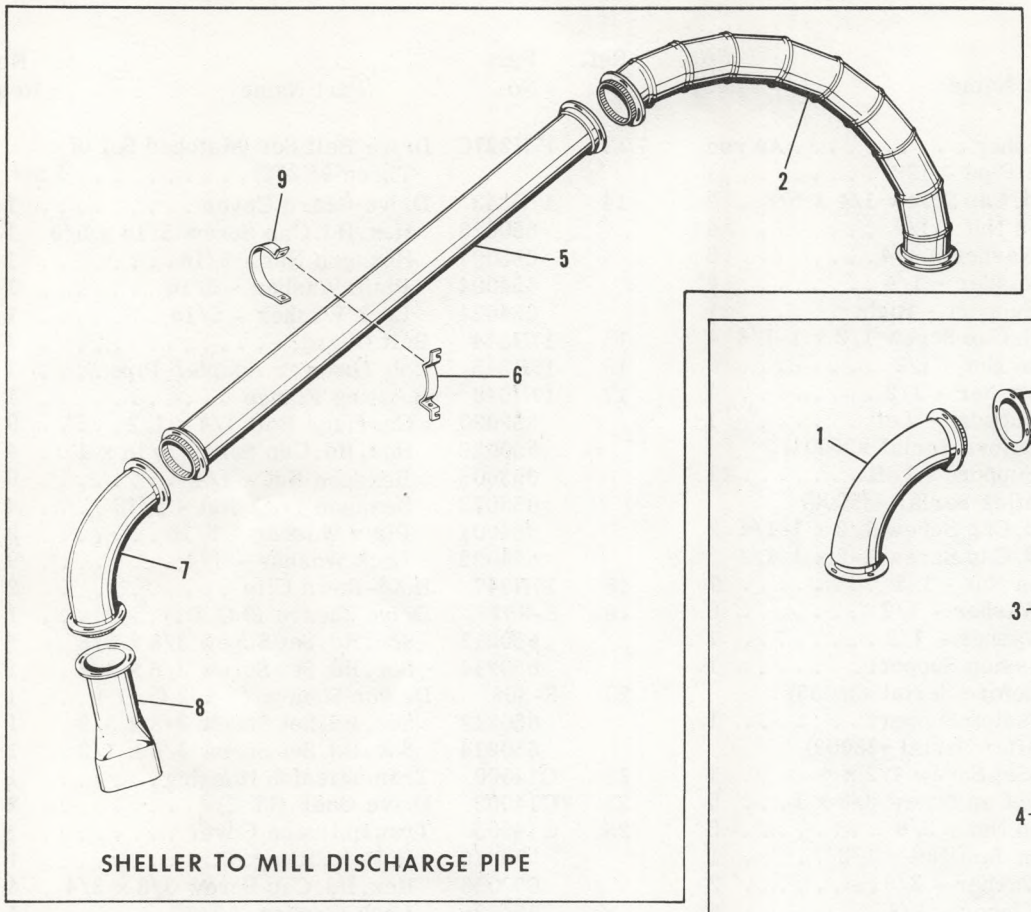

SHELLER TO MILL DISCHARGE PIPE

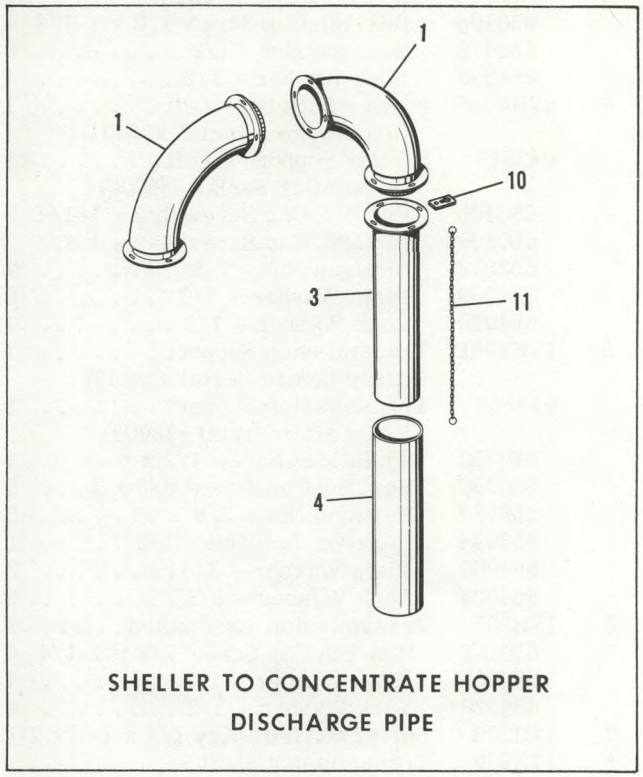

SHELLER TO CONCENTRATE HOPPER DISCHARGE PIPE

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

Ref. No.	Part No.	Part Name	No. Req.
1	6H14D	90 Degree Elbow	2
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	5
	650005	Hex. Hd. Cap Screw 1/4 x 3/4	1
	653071	Hexagon Lock Nut - 1/4	6
	654002	Plain Washer - 1/4	11
2	6H14F	Long Sweep Elbow	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	8
	653005	Hexagon Nut - 1/4	8
	654002	Plain Washer - 1/4	16
	654022	Lock Washer - 1/4	8
3	6H15C	Outlet Pipe	1
4	6H16A	Telescope Pipe	1
	650262	Truss Hd. Screw 1/4 x 5/8	1
	653071	Hexagon Lock Nut - 1/4	1
	654002	Plain Washer - 1/4	1
5	6H17D	Standard Pipe - 56-1/2"	1
6	17H220B	Pipe Clamp Bracket	1
	650264	Truss Hd. Screw 1/4 x 1	2
	653005	Hexagon Nut - 1/4	2
	654022	Lock Washer - 1/4	2
7	17H223A	70 Degree Elbow	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	8
	653005	Hexagon Nut - 1/4	8
	654002	Plain Washer - 1/4	16
	654022	Lock Washer - 1/4	8
8	17H224A	Elbow Outlet Pipe	1
9	17H225B	Pipe Clamp	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
10	17H363	Chain Lock	1
11	H7621B	Telescope Pipe Chain	1

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - MOLASSES PUMP

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

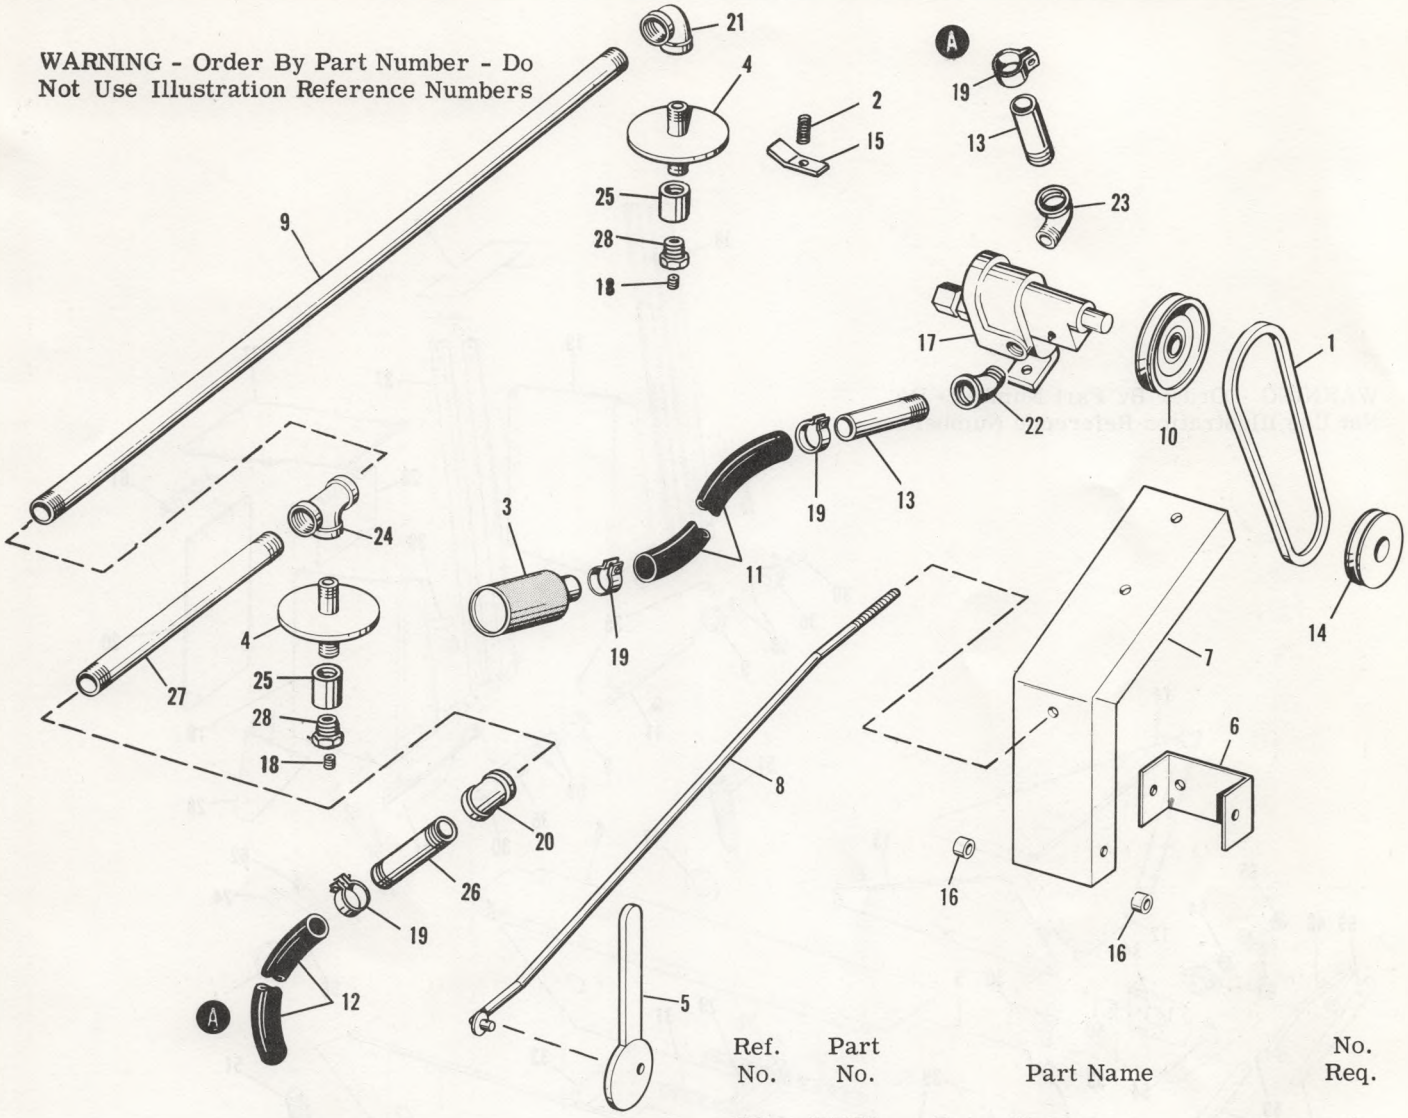

Ref. No.	Part No.	Part Name	No. Req.
1	7H120	Pump Drive Belt	1
2	A162	Spring	1
3	17H260	Strainer	1
4	17H261	Discharge Pipe Base	2
5	17H265A	Shift Lever Tightener	1
6	17H266A	Pivot Arm Bracket	1
	650060	Hex. Hd. Cap Screw 3/8 x 1	2
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	2
	653010	Hexagon Nut - 3/8	4
	654026	Lock Washer - 3/8	4
7	17H267A	Pump Pivot Arm	1
8	17H268A	Shift Lever	1
	655004	Cotter Pin 1/8 x 3/4	1
	653075	Hexagon Lock Nut - 3/8	2
	654006	Plain Washer - 3/8	3
9	17H269	Discharge Pipe	1
10	17H270	Driven Sheave	1
	650206	Soc. Hd. Set Screw 5/16 x 1/2	1
11	17H271	Suction Host (78")	1
12	17H273	Discharge Hose (90")	1
13	A571	Hose Connection	2
14	H5026	Drive Sheave (Used before Serial #25132)	1
	650205	Soc. Hd. Set Screw 5/16 x 7/16	1
	040277	Drive Sheave (Used after Serial #25131)	1
	650201	Soc. Hd. Set Screw 5/16 x 5/16	1
15	H6046	Spring Clip	1
	650040	Hex. Hd. Cap Screw 5/16 x 2-1/2	1
	653007	Hexagon Nut - 5/16	2
16	H6053A	Pivot Arm Bushing	2
17	580065	Molasses Pump	1
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	2
	653010	Hexagon Nut - 3/8	2
	654026	Lock Washer - 3/8	2
18	580066	Spray Nozzle	2
19	620032	Pipe Clamp (1-1/2 I.D.)	4
20	660010	90° Elbow - 3/4	1
21	660014	90° Reducing Elbow - 3/4 x 1/2	1
22	660020	45° Street Elbow - 3/4	1
23	660021	90° Street Elbow - 3/4	1
24	660024	Reducing Tee 3/4 x 3/4 x 1/2	1
25	660027	Pipe Coupling - 1/2	2
26	660040	Pipe Nipple 3/4 x 6	1
27	660041	Pipe Nipple 3/4 x 12	1
28	660045	Reducing Bushing 1/2 x 1/4	2

200 DFA - TRAVELING FEEDER

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

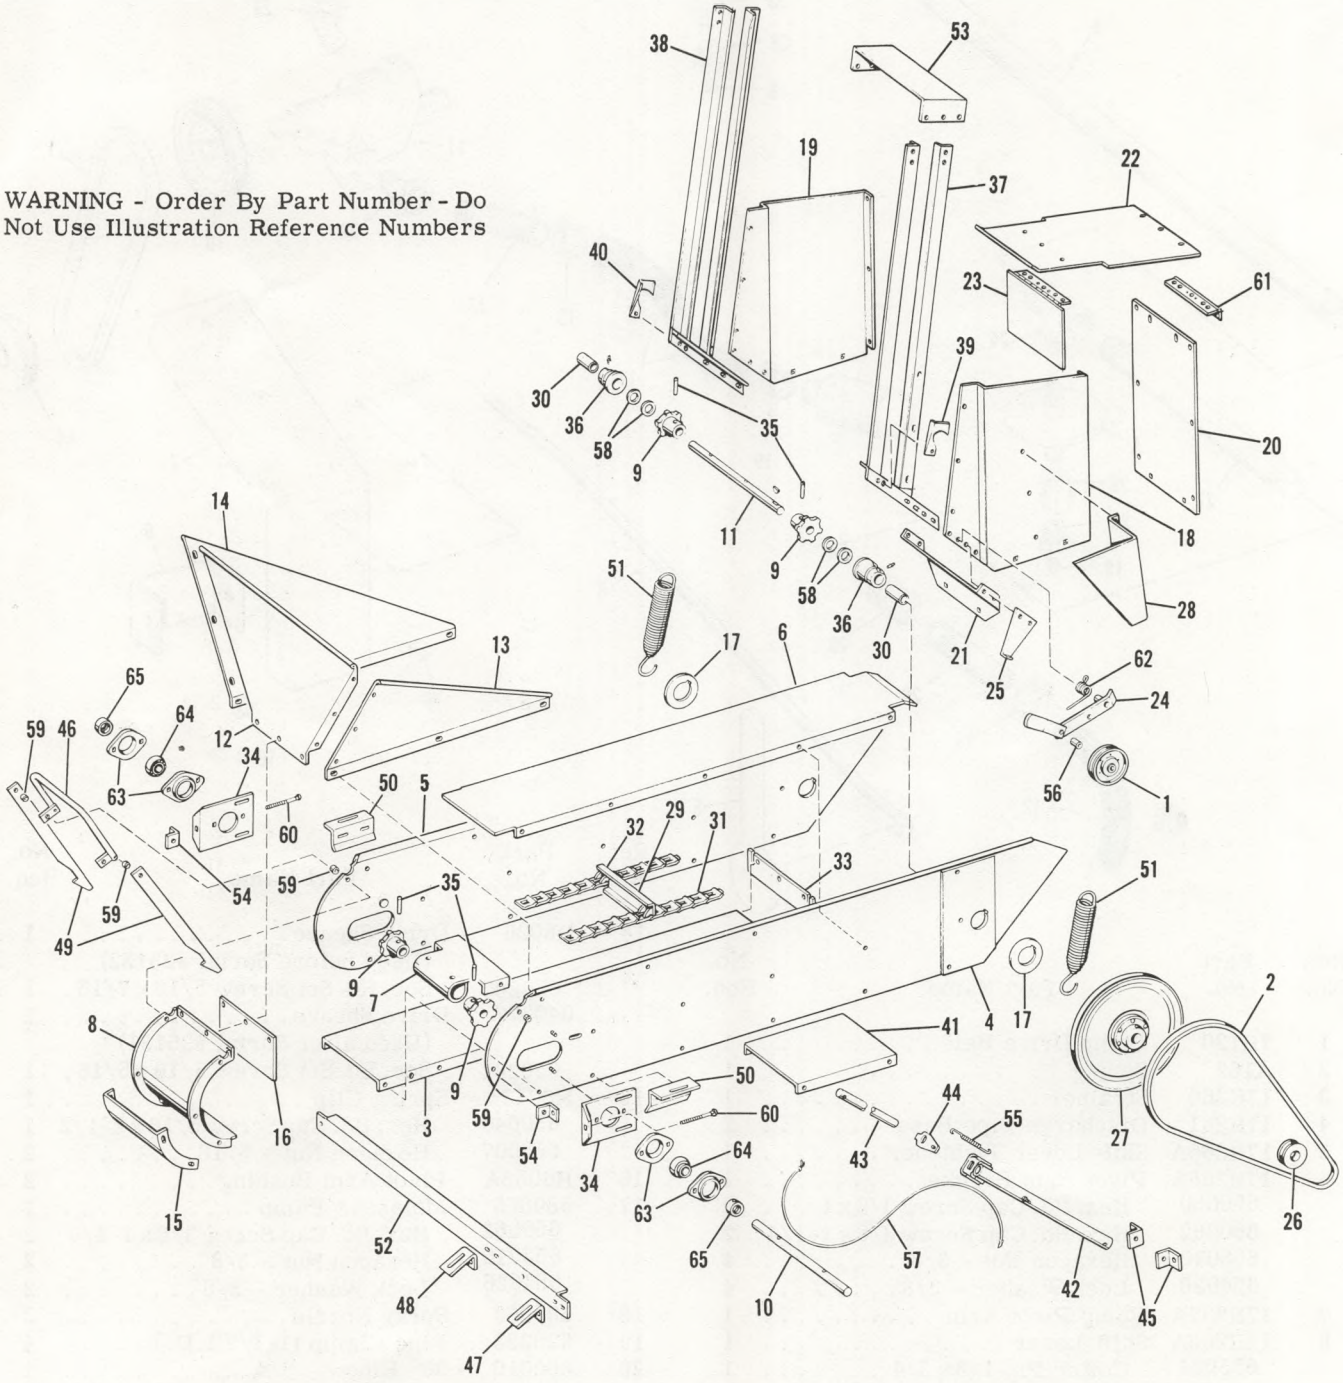

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

Ref. No.	Part No.	Part Name	No. Req.
1	5E77	Idler Pulley	1
	650117	Hex.Hd.Cap Screw 1/2 x 2-1/2	1
	653018	Hexagon Nut - 1/2	1
	654009	Plain Washer - 1/2	3
	654030	Lock Washer - 1/2	1
2	17H257D	Drive Belt	1
3	17H289A	Conveyor Bottom	1
	650301	Truss Hd.Screw 5/16 x 1/2	6
	650267	Truss Hd.Screw 5/16 x 5/8	2
	653007	Hexagon Nut - 5/16	8
	654024	Lock Washer - 5/16	8
4	17H290B	Conveyor Side - Right	1
	650052	Hex.Hd.Cap Screw 5/16 x 6	1
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
5	17H291B	Conveyor Side - Left	1
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
6	17H292A	Conveyor Slide	1
	650301	Truss Hd. Screw 5/16 x 1/2	8
	650267	Truss Hd. Screw 5/16 x 5/8	2
	653007	Hexagon Nut - 5/16	10
	654024	Lock Washer - 5/16	10
7	17H293A	Conveyor Slide Extension	1
	650023	Hex.Hd.Cap Screw 5/16 x 5/8	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
8	17H294A	Conveyor End	1
9	17H295A	Conveyor Sprocket (6 T)	4
10	17H296A	Conveyor Shaft - Front 1 x 13	1
11	17H297B	Conveyor Shaft - Rear 1 x 17-3/8	1
	655507	Woodruff Key 5/16 x 1	1
12	17H298A	Conveyor Trough End	1
	650267	Truss Hd.Screw 5/16 x 5/8	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
13	17H299A	Trough Side - Right	1
	650301	Truss Hd.Screw 5/16 x 1/2	6
	653007	Hexagon Nut - 5/16	6
	654024	Lock Washer - 5/16	6
14	17H300A	Trough Side - Left	1
	650301	Truss Hd.Screw 5/16 x 1/2	6
	653007	Hexagon Nut - 5/16	6
	654024	Lock Washer - 5/16	6
15	17H301B	Conveyor Stand	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	2
	653007	Hex.Hd.Cap Screw 5/16 x 3/4	2
	654004	Plain Washer - 5/16	1
	654024	Lock Washer - 5/16	2
16	17H302A	Conveyor Flat	1
17	17H308A	Conveyor Retainer	2
18	17H309B	Hopper Side - Right	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	3
	652026	Carriage Bolt 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	5
	654004	Plain Washer - 5/16	3
	654024	Lock Washer - 5/16	5
19	17H310B	Hopper Side - Left	1
	650025	Hex.Hd.Cap Screw 5/16 x 3/4	4
	650028	Hex.Hd.Cap Screw 5/16 x 1	1
	652026	Carriage Bolt 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	7
	654004	Plain Washer - 5/16	5
	654024	Lock Washer - 5/16	7
20	17H311A	Hopper Side - Front	1
	650023	Hex.Hd.Cap Screw 5/16 x 5/8	6
	652026	Carriage Bolt 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	8
	654024	Lock Washer - 5/16	8
21	17H312A	Hopper Side - Rear	1
	650028	Hex.Hd.Cap Screw 5/16 x 1	4
	652026	Carriage Bolt 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	6
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	6
22	17H313B	Hopper Cover	1
23	17H314B	Grain Flap	1
	650301	Truss Hd.Screw 5/16 x 1/2	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
24	17H315A	Shifter Arm	1
	650068	Hex.Hd.Cap Screw 3/8 x 2	1
	653075	Hexagon Lock Nut - 3/8	1
	654006	Plain Washer - 3/8	1
25	17H316B	Shifter Stop	1
26	17H318	Drive Sheave (2-1/2 Dia.)	1
	650195	Soc.Hd.Set Screw 1/4 x 1/4	1
27	17H319A	Driven Sheave (13 Dia.)	1
	650206	Soc.Hd.Set Screw 5/16 x 1/2	1
28	17H320B	Belt Guard	1
	650023	Hex.Hd.Cap Screw 5/16 x 5/8	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
29	17H321A	Conveyor Assembled	1
30	17H326	Bearing Bushing	2
31	17H350	Conveyor Chain	2
		Includes:	
	500005	Plain Link	60
	500151	Attachment Link	10
32	17H351	Conveyor Slat	10
	654512	Round Hd. Rivet 1/4 x 1/2	20
33	17H352A	Hopper Flap	1
	650301	Truss Hd.Screw 5/16 x 1/2	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
24	17H353	Conveyor Take-up Bracket	2
35	17H355	Sprocket Pin 5/16 x 1-3/4	4
36	17H368	Trunnion Bearing	2
		(Includes 17H326 Bushing)	
	570014	Grease Fitting	2
37	17H369	Trough Guide - Right	1
38	17H370	Trough Guide - Left	1
39	17H371	Trough Lock Bracket - Right	1
	650023	Hex.Hd.Cap Screw 5/16 x 5/8	1
	653073	Hexagon Lock Nut - 5/16	1
	654004	Plain Washer - 5/16	2

PARTS LIST CONTINUED ON NEXT PAGE

200 DFA - TRAVELING FEEDER

Ref. No.	Part No.	Part Name	No. Req.
40	17H372	Trough Lock Bracket - Left	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8.	1
	653073	Hexagon Lock Nut - 5/16	1
	654004	Plain Washer - 5/16	2
41	17H373	Lift Support Plate	1
	650068	Hex. Hd. Cap Screw 3/8 x 2	1
	650267	Truss Hd. Screw 5/16 x 5/8	2
	653007	Hexagon Nut - 5/16	2
	653075	Hexagon Lock Nut - 3/8	1
	654024	Lock Washer - 5/16	2
42	17H374	Lift Support Tube	1
	650070	Hex. Hd. Cap Screw 3/8 x 2-1/4	1
	653007	Hexagon Nut - 5/16	1
	653075	Hexagon Lock Nut - 3/8	1
	654004	Plain Washer - 5/16	1
43	17H375	Lift Support Shaft 1 x 17-1/2	1
44	17H376	Lift Lock Segment	1
45	17H377	Lift Support Bracket	2
	650060	Hex. Hd. Cap Screw 3/8 x 1	2
	653010	Hexagon Nut - 3/8	2
	654026	Lock Washer - 3/8	2
46	17H378	Transport Lock Handle	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	2
	650034	Hex. Hd. Cap Screw 5/16 x 1-3/4	2
	653007	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
47	17H379	Transport Lock Bracket - Right	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	1
	650029	Hex. Hd. Cap Screw 5/16 x 1-1/4	1
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	2
48	17H380	Transport Lock Bracket - Left	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	2
49	17H381	Transport Lock	2
50	17H382	Transport Lock Guide	2
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	653007	Hexagon Nut - 5/16	4
	654004	Plain Washer - 5/16	4
	654024	Lock Washer - 5/16	4
51	17H383	Lift Spring	2
52	17H384	Sheller Brace	1
	650236	Sq. Hd. Set Screw 3/8 x 3	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	1
	653007	Hexagon Nut - 5/16	1
	653010	Hexagon Nut - 3/8	1
	654004	Plain Washer - 5/16	1
	654024	Lock Washer - 5/16	1
53	17H385	Trough Guide Brace	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	650104	Hex. Hd. Cap Screw 1/2 x 1	2
	653007	Hexagon Nut - 5/16	4
	653018	Hexagon Nut - 1/2	2
	654009	Plain Washer - 1/2	2
	654024	Lock Washer - 5/16	4
	654030	Lock Washer - 1/2	2
54	17H386	Conveyor Take-Up Angle	2
	650028	Hex. Hd. Cap Screw 5/16 x 1.	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
55	17H387	Height Segment Spring	1
56	17H388	Shifter Pivot	1
57	17H389	Lock Cord (4 Ft.)	1
58	D932A	Shim Washer	4
59	H6053	Lock Handle Pivot Bushing	4
60	H7100	Conveyor Take-Up Bolt	2
	653010	Hexagon Nut - 3/8	4
61	H8228	Hopper Cover Hinge	1
	650301	Truss Hd. Screw 5/16 x 1/2	5
	653007	Hexagon Nut - 5/16	5
	654024	Lock Washer - 5/16	5
62	U10014C	Shifter Lever Spring	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	1
	653073	Hexagon Lock Nut - 5/16	1
63	B11335	Bearing Retainer	4
	652026	Carriage Bolt 5/16 x 3/4	4
	653007	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
64	520063	Bearing	2
65	520084	Bearing Collar	2

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

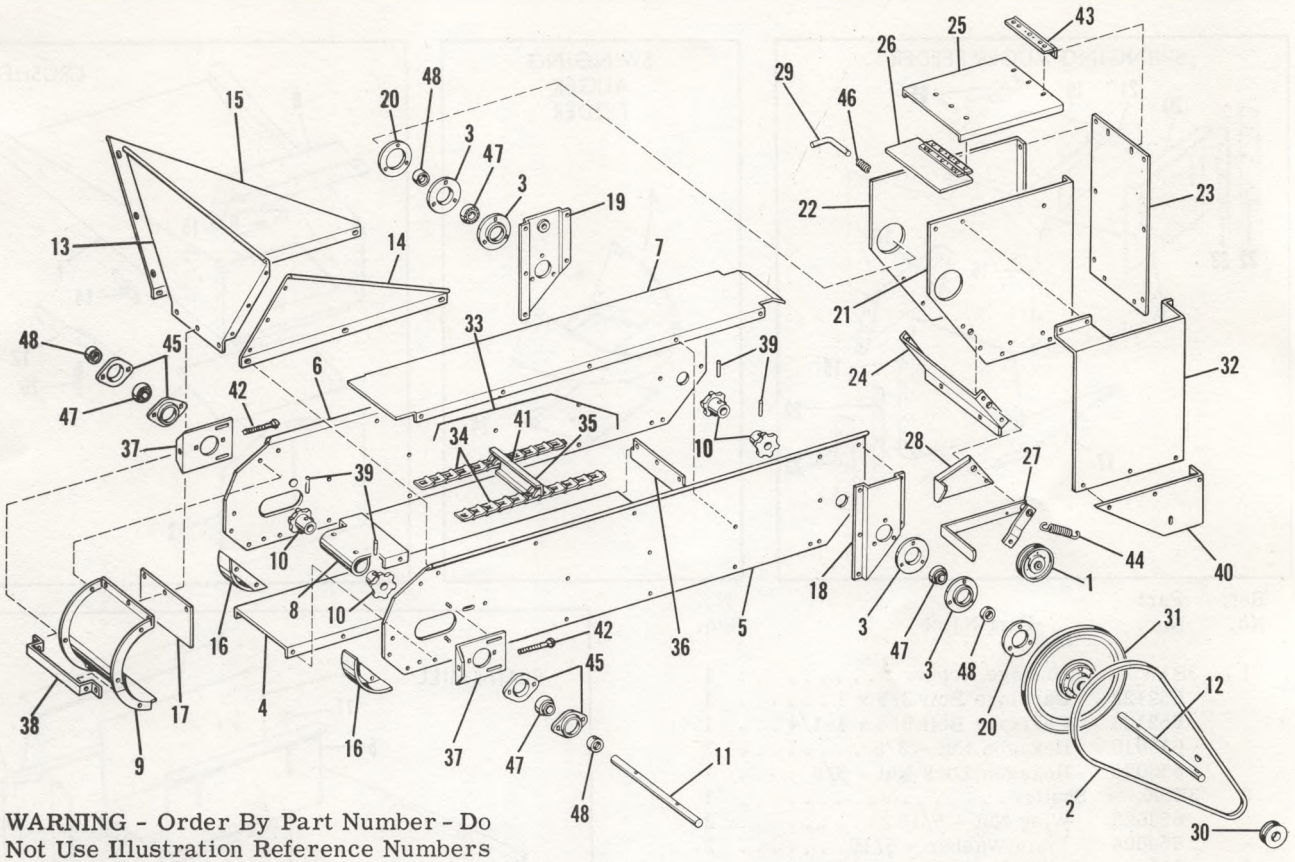

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

Ref. No.	Part No.	Part Name	No. Req.
1	5E77	Idler Pulley	1
	650112	Hex. Hd. Cap Screw 1/2 x 2	1
2	17H257D	Drive Belt	1
3	H275	Bearing Retainer	4
4	17H289A	Conveyor Bottom	1
5	17H290A	Conveyor Side - Right	1
6	17H291A	Conveyor Side - Left	1
7	17H292A	Conveyor Slide	1
8	17H293A	Conveyor Slide Extension	1
9	17H294A	Conveyor End	1
10	17H295A	Conveyor Sprocket (6 T)	4
11	17H296A	Conveyor Shaft - Front 1 x 13	1
12	17H297A	Conveyor Shaft - Rear 1 x 16-7/8	1
	655507	Woodruff Key 5/16 x 1	1
13	17H298A	Conveyor Trough End	1
14	17H299A	Trough Side -Right	1
15	17H300A	Trough Side - Left	1
16	17H301A	Conveyor Stand	2
17	17H302A	Conveyor Flap	1
18	17H306A	Pivot Bracket - Right	1
19	17H307A	Pivot Bracket - Left	1
20	17H308	Conveyor Retainer	2
21	17H309A	Hopper Side - Right	1
22	17H310A	Hopper Side - Left	1
23	17H311A	Hopper Side - Front	1
24	17H312	Hopper Side - Rear	1
25	17H313A	Hopper Cover	1
26	17H314A	Grain Flap	1
27	17H315	Idler Arm	1
28	17H316A	Shifter Stop	1
29	17H317	Lock Pin	1
	655005	Cotter Pin 1/8 x 1	1
30	17H318	Drive Sheave	1
	650199	Soc. Hd. Set Screw 1/4 x 1/2	1
31	17H319A	Driven Sheave	1
	650206	Soc. Hd. Set Screw 5/16 x 1/2	1
32	17H320A	Driven Sheave Guard	1
33	17H321A	Conveyor Assembled	1
34	17H350	Conveyor Chain	2
		Includes:	
	500005	Plain Link	60
	500151	Attachment Link	10
35	17H351	Conveyor Slat	10
	654512	Round Hd. Rivet 1/4 x 1/2	20
36	17H352	Hopper Flap	1
37	17H353	Conveyor Take-Up Bracket	2
38	17H354	Conveyor Lift Handle	1
39	17H355	Sprocket Pin 5/16 x 1-3/4	4
40	17H356	Drive Sheave Guard	1
41	17H357	Conveyor Slat Assembled	10
42	H7100	Conveyor Take-up Bolt	2
43	H8228	Hopper Cover Hinge	1
44	U10063	Belt Tightener Spring	1
45	B11335	Bearing Retainer	4
46	R13138	Transport Lock Spring	1
47	520063	Bearing	4
48	520084	Bearing Collar	4

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - HOPPER

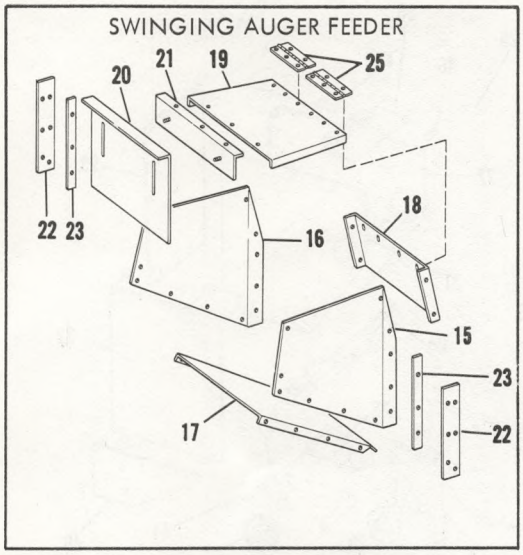

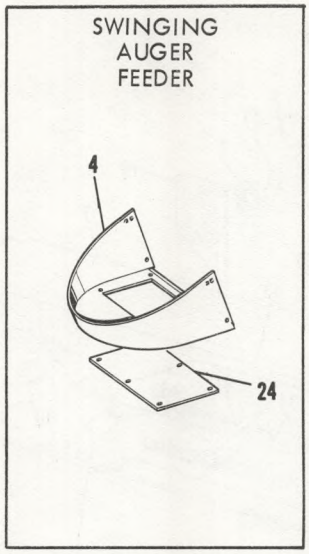

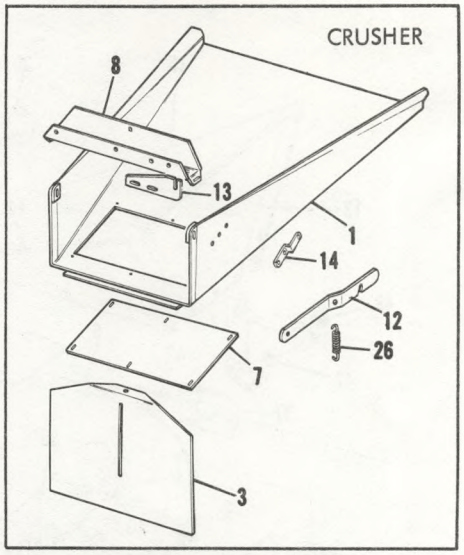

Ref. No.	Part No.	Part Name	No. Req.
1	3E1W	Roughage Hopper	1
	652122	Carriage Bolt 3/8 x 1	1
	652123	Carriage Bolt 3/8 x 1-1/4	1
	653010	Hexagon Nut - 3/8	2
	653075	Hexagon Lock Nut - 3/8	1
2	3E5K	Shutter	1
	653093	Wing Nut - 5/16	2
	654004	Plain Washer - 5/16	2
3	3E5L	Shutter	1
4	9E18D	Hopper	1
	650314	Truss Head Screw 3/8 x 1	2
	653010	Hexagon Nut - 3/8	4
5	3E69F	Grain Shutter	1
6	3E82A	Corn Shutter	1
7	3E116A	Magnet Hole Cover	1
	650263	Truss Head Screw 1/4 x 3/4	6
	653005	Hexagon Nut - 1/4	6
	654022	Lock Washer - 1/4	6
8	3E120	Roller Cover Extension	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	6
	652122	Carriage Bolt 3/8 x 1	1
	653007	Hexagon Nut - 5/16	6
	653098	Wing Nut - 3/8	1
	654004	Plain Washer - 5/16	4
	654006	Plain Washer - 3/8	1
	654024	Lock Washer - 5/16	6
	654026	Lock Washer - 3/8	1
9	3E121	Hopper	1
	652081	Carriage Bolt 1/2 x 1-1/4	2
	653018	Hexagon Nut - 1/2	2
	654009	Plain Washer - 1/2	2
10	3E122A	Hopper Inlet	1
11	3E123	Pivot Bushing	2
12	3E152	Hopper Support Arm	1
	650032	Hex. Hd. Cap Screw 5/16 x 1-1/2	1
	653073	Hexagon Lock Nut - 5/16	1
	654004	Plain Washer - 5/16	1
13	3E153	Support Arm Guide	1
14	3E154	Hopper Stop Support	1
	650068	Hex. Hd. Cap Screw 3/8 x 2	1
	650269	Truss Head Screw 5/16 x 3/4	2
	653007	Hexagon Nut - 5/16	2
	653075	Hexagon Lock Nut - 3/8	1
	654024	Lock Washer - 5/16	2
15	9E212B	Hopper Side - Right	1
16	9E213A	Hopper Side - Left	1

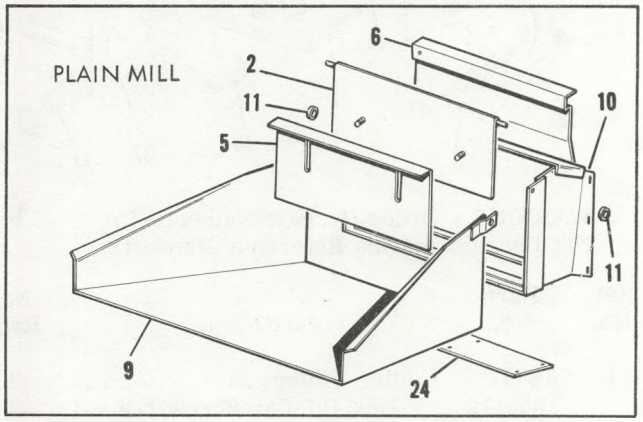

Ref. No.	Part No.	Part Name	No. Req.
17	9E214D	Hopper Bottom	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	8
	653007	Hexagon Nut - 5/16	8
	654024	Lock Washer - 5/16	8
18	9E215B	Hopper End - Rear	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	4
	653007	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
19	9E216B	Hopper Cover	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	3
	653007	Hexagon Nut - 5/16	3
	654024	Lock Washer - 5/16	3
20	9E274A	Hopper Cover Slide	1
21	9E279	Hopper End - Front	1
	653095	Wing Nut - 3/8	2
	654006	Plain Washer - 3/8	2
22	9H281	Mounting Bracket	2
23	9E282	Hopper Side Spacer	2
	650269	Truss Head Screw 5/16 x 3/4	6
	653007	Hexagon Nut - 5/16	6
	654024	Lock Washer - 5/16	6
24	9E306	Magnet Hole Cover	1
	650263	Truss Head Screw 1/4 x 3/4	6
	653005	Hexagon Nut - 1/4	6
	654022	Lock Washer - 1/4	6
25	17H333	Hopper Cover Hinge	2
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	10
	653007	Hexagon Nut - 5/16	10
	654024	Lock Washer - 5/16	10
26	U10063	Support Arm Spring	1

Note: See page 51 for Hopper Magnets.

65MX - MIXER DIRECT DRIVE

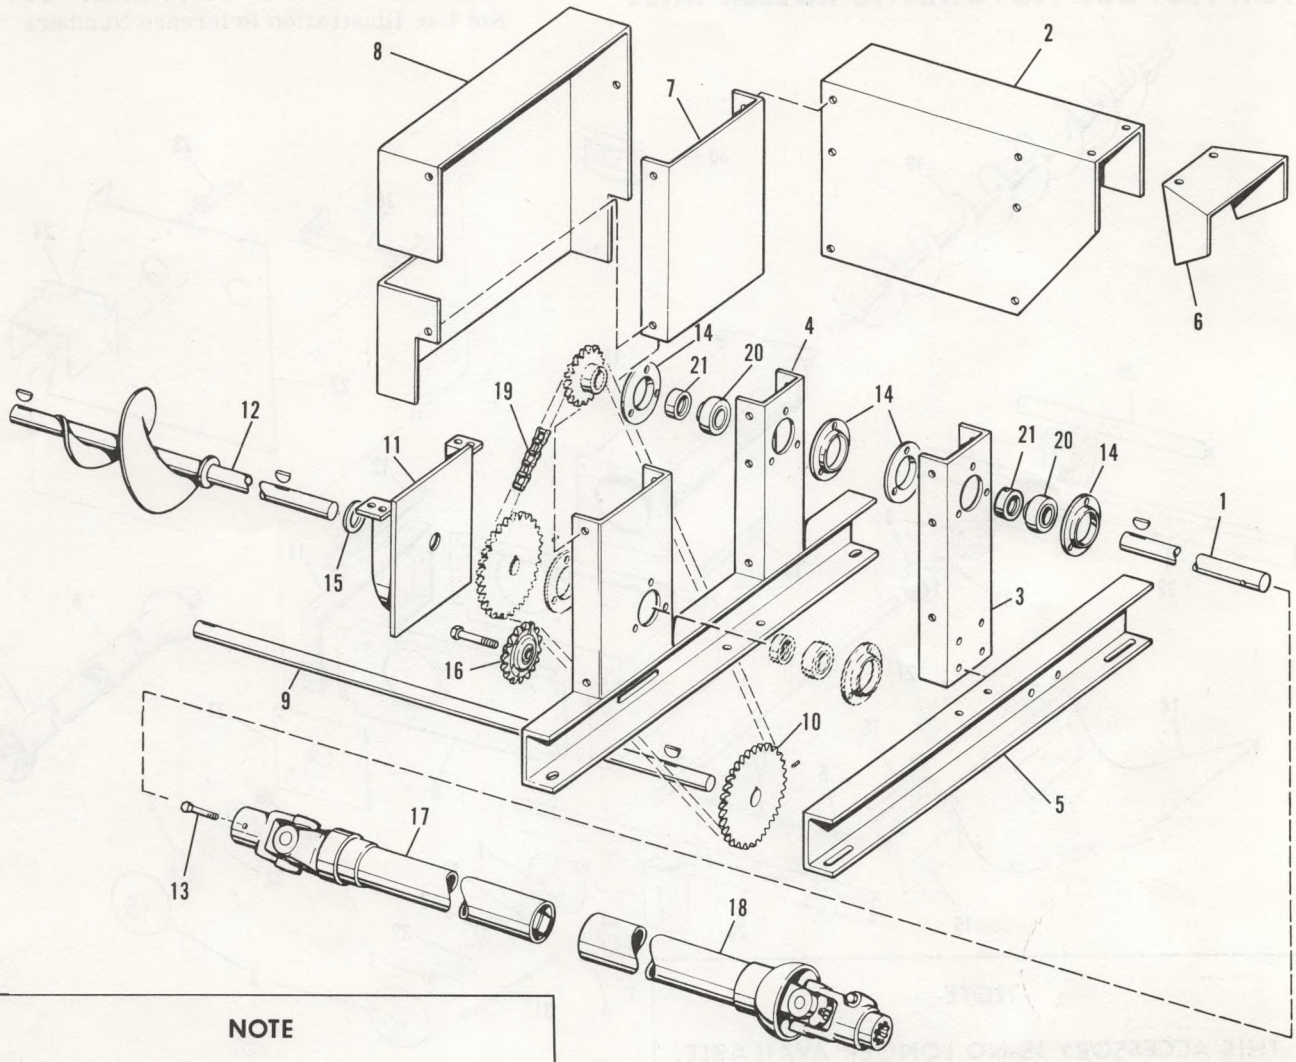

NOTE

THIS ACCESSORY IS NO LONGER AVAILABLE. USE ILLUSTRATION AND PARTS LIST ONLY FOR ORDERING SERVICE PARTS.

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

Ref. No.	Part No.	Part Name	No. Req.
1	13H3C	P. T. O. Drive Shaft 1 x 17-1/2	1
	655507	Woodruff Key 5/16 x 1	1
2	13H9C	P. T. O. Shaft Guard	1
3	13H40	Bearing Support - Front	1
4	13H41A	Bearing Support - Rear	1
5	13H42	Bearing Support Base	1
6	13H46	Joint Guard	1
7	13H69	Guard - Front	1
8	13H70	Drive Guard	1
9	17H175G	Mixer Drive Shaft 1 x 28	1
	655507	Woodruff Key 5/16 x 1	2
10	17H186A	Mixer Driven Sprocket (29 T)	1
	650212	Soc. Hd. Set Screw 3/8 x 3/8	1
11	17H240A	Intake Cover	1
12	17H322A	Intake Conveyor	1
	655507	Woodruff Key 5/16 x 1	2

Ref. No.	Part No.	Part Name	No. Req.
13	H263D	Universal Joint Bolt	1
14	H275	Bearing Retainer	4
15	D974A	Thrust Washer	1
16	D9130	Chain Tightener Sprocket (17 T).	1
	650115	Hex. Hd. Cap Screw 1/2 x 2-1/4.	1
17	B11023B	Universal Joint w/Sq. Shaft	1
18	B11024B	Universal Joint w/Sq. Tube	1
19	500085	Chain of 86 Links Including One Plain (500057) Coupler	1
20	520063	Ball Bearing	2
21	520084	Bearing Collar	2

NOTE: See Page 48 for Universal Drive Service Parts.

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

65MX - ROLLER MILL MOUNTING

FOR NO. 600 AUTOMATIC ROLLER MILL

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

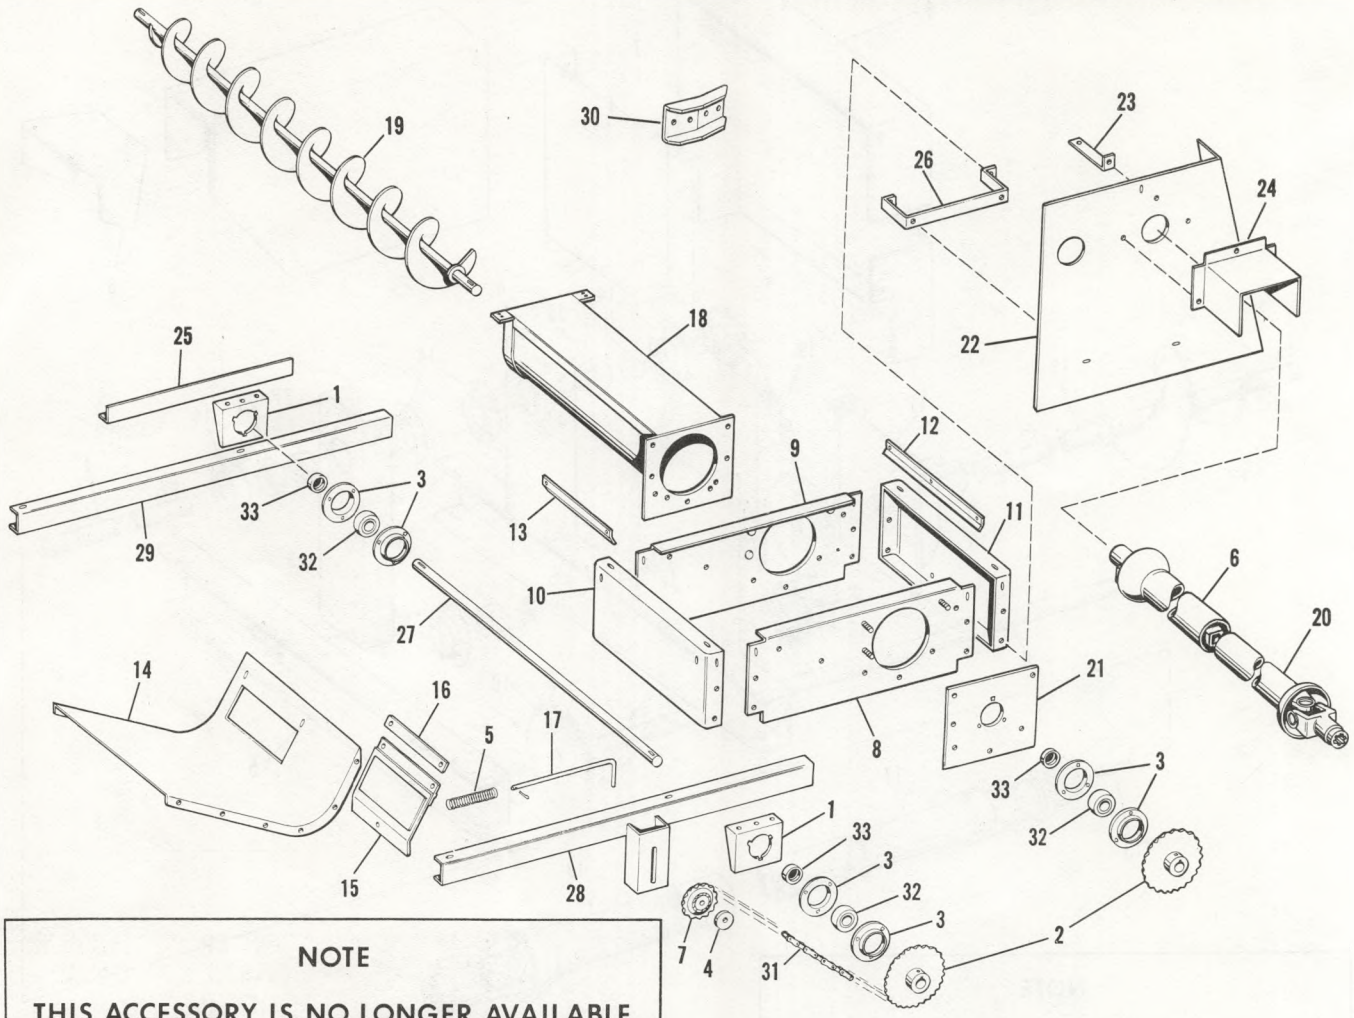

NOTE

THIS ACCESSORY IS NO LONGER AVAILABLE. USE ILLUSTRATION AND PARTS LIST ONLY FOR ORDERING SERVICE PARTS.

Ref. No.	Part No.	Part Name	No. Req.
1	17H184	Bearing Bracket	2
2	17H186	Drive Sprocket (32 T)	2
	650212	Soc. Hd. Set Screw 3/8 x 3/8	2
	650214	Soc. Hd. Set Screw 3/8 x 1/2	2
3	H275	Bearing Retainer	6
4	D932A	Washer	1
5	H7549	Inspection Door Spring	1
6	D9061C	Universal Joint w/Sq. Tube	1
7	D9130	Chain Tightener Sprocket (17 T)	1
	650112	HexHd. Cap Screw 1/2 x 2	1
8	23H1B	Mill Support - Right	1
9	23H2B	Mill Support - Left	1
10	23H3B	Mill Support - Front	1
11	23H4B	Mill Support - Rear	1
12	23H7	Mill Filler Piece - Front	1
13	23H8	Mill Filler Piece - Rear	1
14	23H9	Conveyor Trough	1
15	23H10	Inspection Door	1
16	23H11	Hinge Spacer	1
17	23H12	Inspection Door Handle	1
	655004	Cotter Pin 1/8 x 3/4	1
18	23H15A	Conveyor Tube	1
19	23H16B	Conveyor	1
	655507	Woodruff Key 5/16 x 1	2
20	13H18B	Universal Joint w/Sq. Shaft	1
21	23H18A	Conveyor Bearing Bracket	1
22	23H19B	Drive Guard	1
23	23H20B	Guard Bracket - Upper	1
24	23H21A	Universal Joint Guard	1
25	23H28A	Bearing Bracket Support	1
26	23H29	Guard Bracket - Lower	1
27	23H30	Main Drive Shaft 1 x 40-1/2	1
	655507	Woodruff Key 5/16 x 1	2
28	23H31	Hopper Support - Right	1
29	23H32	Hopper Support - Left	1
30	23H33	Leg Bracket	1
31	500166	Chain of 91 Links Including One Plain (500057) and One Offset (500058) Coupler	1
32	520063	Bearing	3
33	520084	Bearing Collar	3

NOTE: See Page 48 for Universal Drive Service Parts.

65MX - ROLLER MILL MOUNTING

FOR NO. F20 S6 PEERLESS ROLLER MILL

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

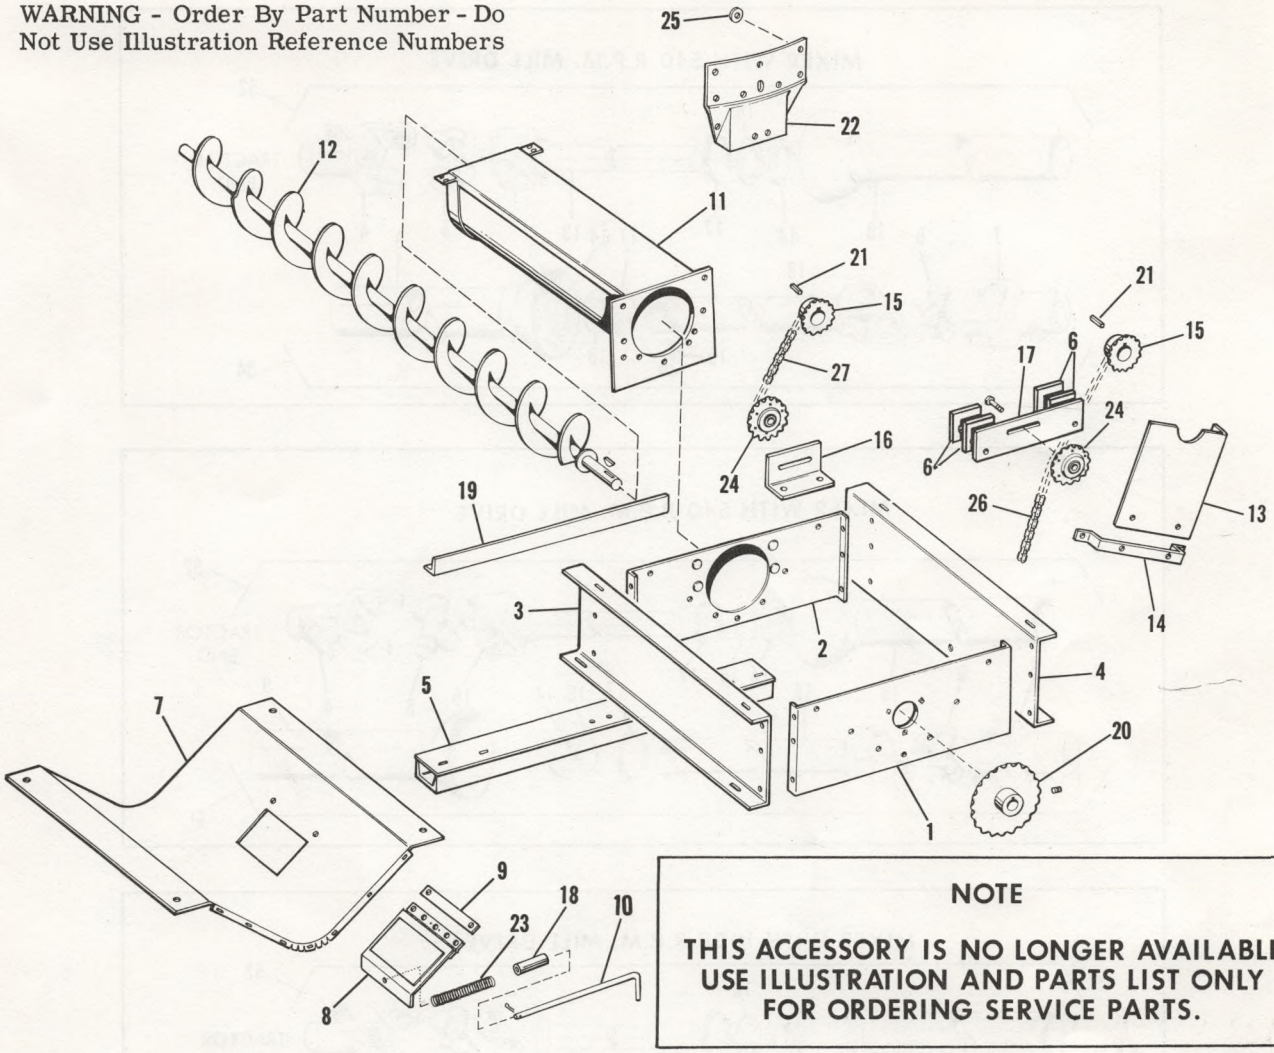

NOTE

THIS ACCESSORY IS NO LONGER AVAILABLE. USE ILLUSTRATION AND PARTS LIST ONLY FOR ORDERING SERVICE PARTS.

Ref. No.	Part No.	Part Name	No. Req.
1	23H1C	Mill Support - Right	1
2	23H2C	Mill Support - Left	1
3	23H3C	Mill Support - Front	1
4	23H4C	Mill Support - Rear	1
5	23H5B	Hopper Support	2
6	23H6A	Mill Support Spacer	4
7	23H9A	Conveyor Trough	1
8	23H10	Inspection Door	1
9	23H11	Hinge Spacer	1
10	23H12A	Inspection Door Handle	1
	655004	Cotter Pin 1/8 x 3/4	1
11	23H15A	Conveyor Tube	1
12	23H16C	Conveyor	1
	655507	Woodruff Key 5/16 x 1	2
13	23H19A	Drive Guard	1
14	23H20A	Drive Guard Bracket	1
15	23H24	Main Drive Sprocket (16 T)	2
	650212	Soc. Hd. Set Screw 3/8 x 3/8	2
16	23H25A	Chain Tightener Bracket	1
17	23H26	Chain Tightener Bracket	1
18	23H27	Inspection Handle Spacer	1
19	23H28A	Bearing Bracket Support	1
20	17H186	Driven Sprocket (32 T)	1
	650212	Soc. Hd. Set Screw 3/8 x 3/8	2
21	17H208	Drive Sprocket Key 1/4 x 1/4 x 2	2
22	17H364	Leg Bracket	1
23	H7549	Inspection Door Spring	1
24	D9130	Chain Tightener Sprocket	2
	650114	Hex. Hd. Cap Screw 1/2 x 2-1/4	2
25	B11296	Washer	9
26	500078	Chain of 59 Links Including One Plain (500057) and One Offset (500058) Coupler	1
27	500168	Chain of 79 Links Including One Plain (500057) and One Offset (500058) Coupler	1

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

MIXER WITH 540 R.P.M. MILL DRIVE

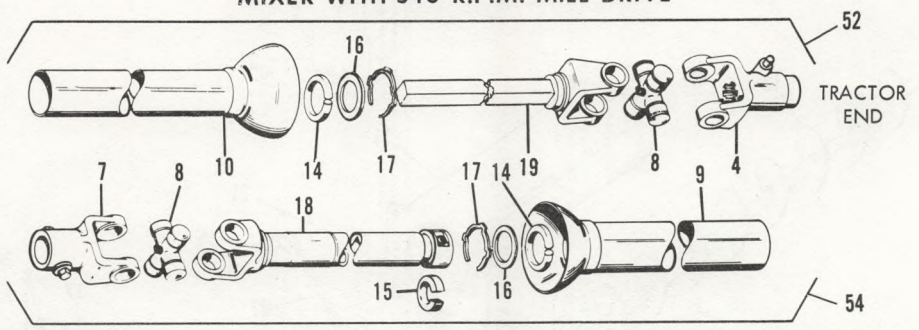

MIXER WITH 540 R.P.M. MILL DRIVE

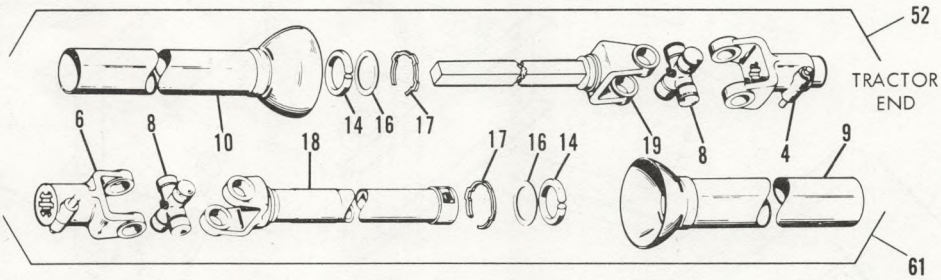

MIXER WITH 1000 R.P.M. MILL DRIVE

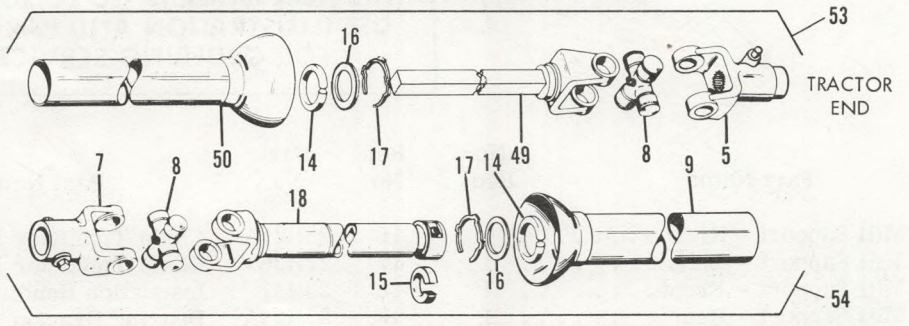

MIXER WITH 1000 R.P.M. MILL DRIVE

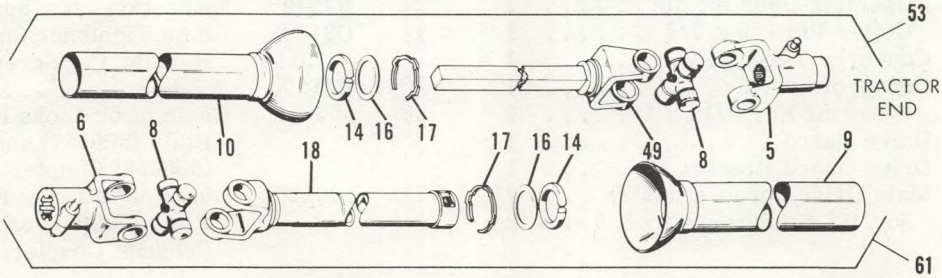

NO. 200 SHELLER-HUSKER DRIVE

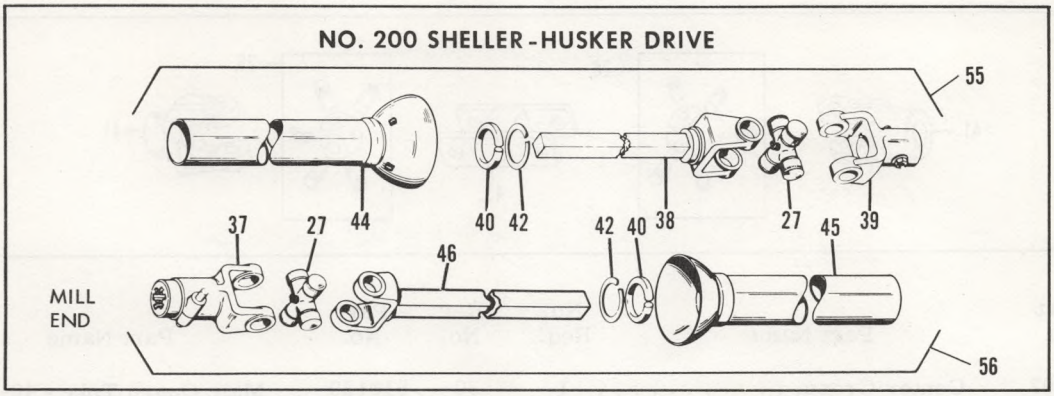

MIXER WITH ROLLER MILL DRIVE

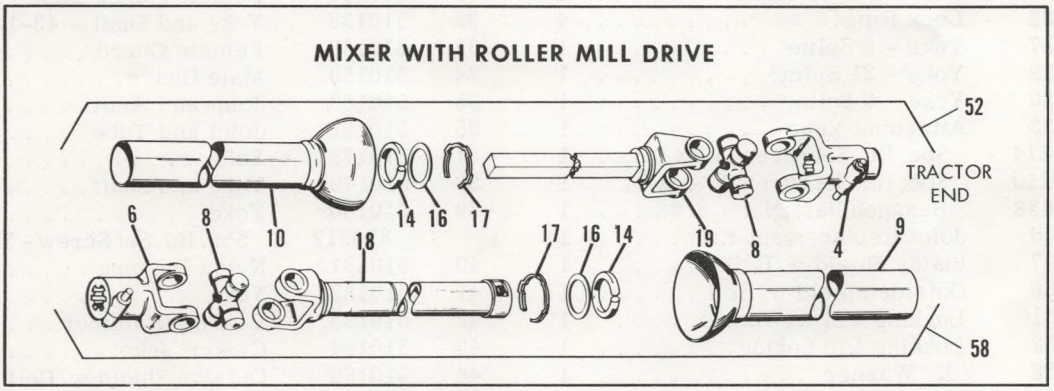

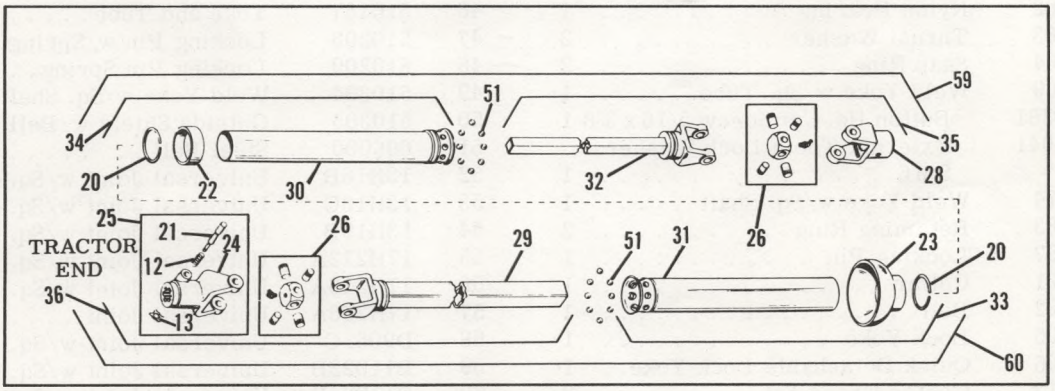

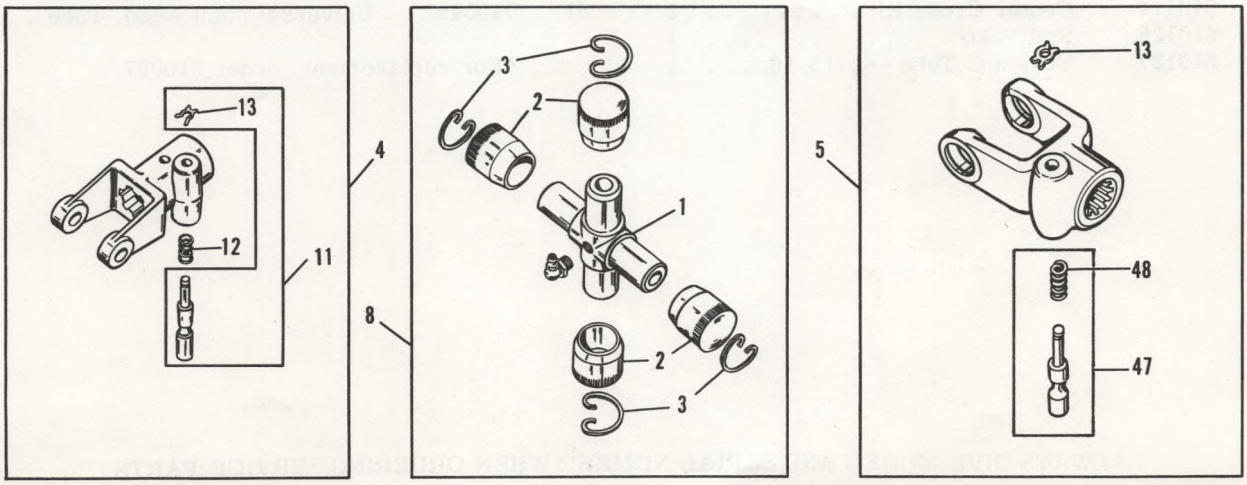

PARTS LIST STARTS ON NEXT PAGE

65MX - UNIVERSAL DRIVES

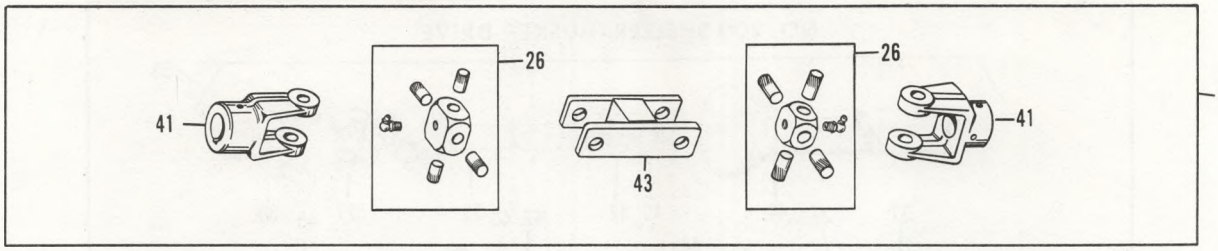

Ref. No.	Part No.	Part Name	No. Req.
1	510002	Center Cross	1
2	510003	Bushing w/Needles	4
3	510022	Lock Ring	4
4	510027	Yoke - 6 Spline	1
5	510029	Yoke - 21 Spline	1
6	510030	Yoke - 6 Spline	1
7	510033	Attaching Yoke	1
	650214	Soc. Hd. Set Screw 3/8 x 1/2	1
	650219	Soc. Hd. Set Screw 3/8 x 1	1
	653038	Hexagon Jam Nut - 3/8	1
8	510036	Joint Replacement Kit	1
9	510037	Inside Shield w/Bell	1
10	510038	Outside Shield w/Bell	1
11	510051[A]	Locking Pin w/Washer	1
12	510052	Locking Pin Spring	1
13	510058	"X" Washer	1
14	510061	Bearing	2
15	510062	Nylon Bearing	1
16	510063	Thrust Washer	2
17	510064	Snap Ring	2
18	510069	Weld Yoke w/Sq. Tube	1
	650281	Button Hd. Cap Screw 5/16 x 3/8	1
	654041	External Tooth Lock Washer - 5/16	1
19	510074	Weld Yoke w/Sq. Shaft	1
20	510083	Retaining Ring	2
21	510097	Locking Pin	1
22	510101	Collar	1
23	510102	Bell	1
24	510105	Lock Yoke	1
25	510106	Quick Detachable Lock Yoke	1
26	510113	Center Cross Kit	2
27	510114	Center Cross Kit	2
28	510125	End Yoke	1
29	510127	Yoke and Tube - 42-15/16	1
30	510129	Male Guard Tube - 40-1/2	1
31	510130	Female Guard Tube - 39-1/2	1
32	510138	Yoke and Shaft - 43-1/2	1
33	510158	Female Guard	1
34	510159	Male Guard	1
35	510160	Joint and Shaft	1
36	510161	Joint and Tube	1
37	510178	Yoke	1
38	510179	Yoke and Shaft	1
39	510180	Yoke	1
	650212	Soc. Hd. Set Screw - 3/8 x 3/8	2
40	510181	Nylon Bearing	2
41	510182	Yoke	2
42	510183	Bearing Retainer	2
43	510184	Center Yoke	1
44	510185	Outside Shield w/Bell	1
45	510186	Inside Shield w/Bell	1
46	510187	Yoke and Tube	1
47	510208	Locking Pin w/Spring	1
48	510209	Locking Pin Spring	1
49	510304	Weld Yoke w/Sq. Shaft	1
50	510305	Outside Shield w/Bell	1
51	666000	Steel Ball	16
52	13H18B	Universal Joint w/Sq. Shaft	1
53	13H18C	Universal Joint w/Sq. Shaft	1
54	13H19B	Universal Joint w/Sq. Tube	1
55	17H212A	Universal Joint w/Sq. Shaft	1
56	17H213A	Universal Joint w/Sq. Tube	1
57	17H236A	Universal Joint	1
58	D9061C	Universal Joint w/Sq. Tube	1
59	B11023B	Universal Joint w/Sq. Shaft	1
60	B11024B	Universal Joint w/Sq. Tube	1
61	040549	Universal Joint w/Sq. Tube	1

[A]For replacement, order 510097.

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

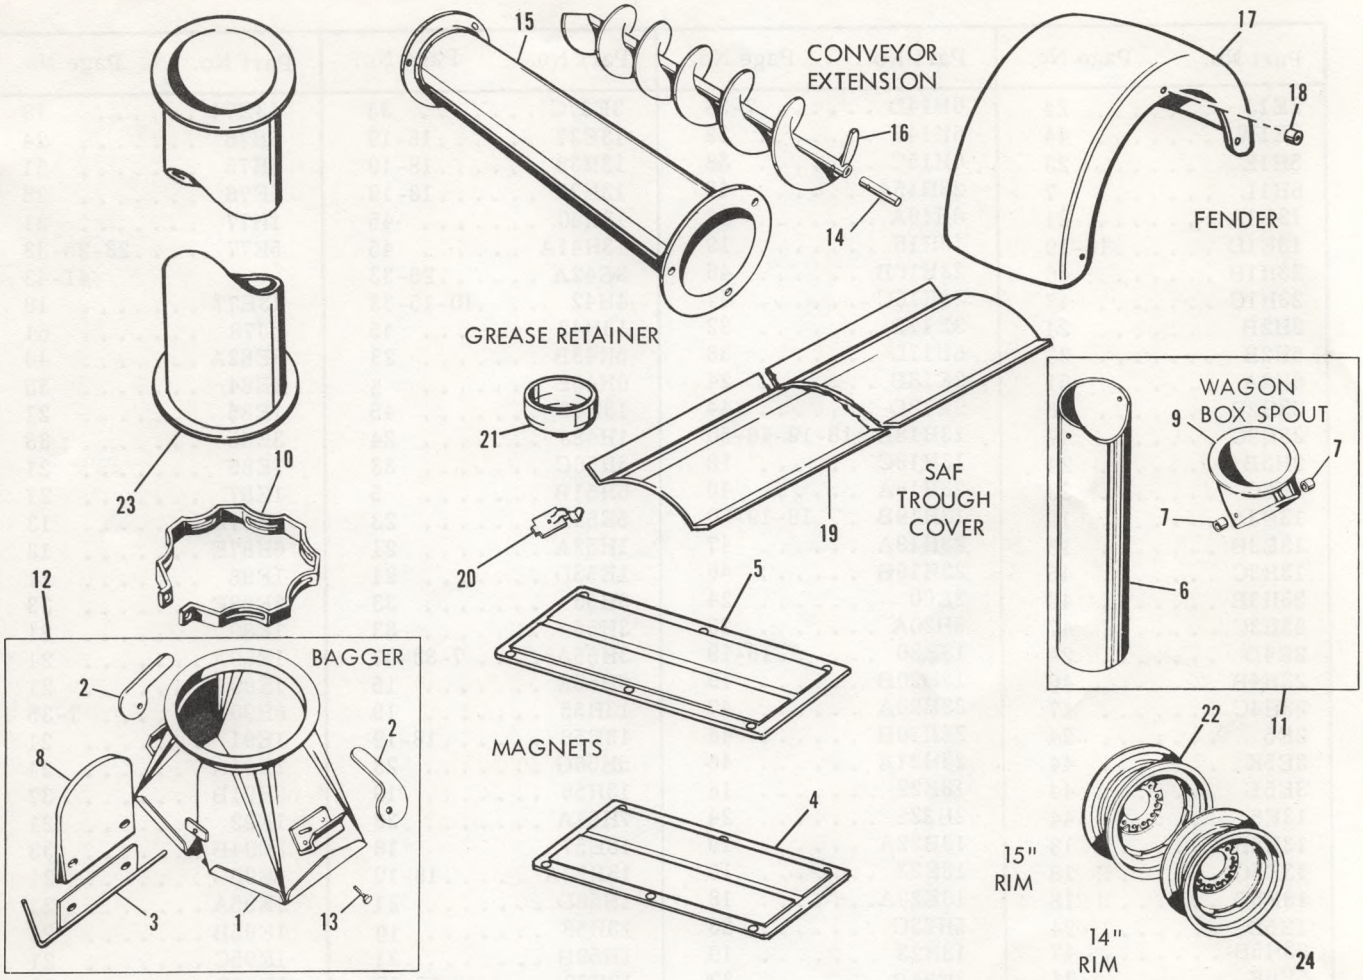

Ref. No.	Part No.	Part Name	No. Req.
1	6H2A[A]	Bagger	1
	650005	Hex.Hd.Cap Screw 1/4 x 3/4	2
	653005	Hexagon Nut - 1/4	2
	654022	Lock Washer - 1/4	2
2	6H9	Bag Lock	2
3	6E27	Bagger Shutter Support	1
4	3E60	Hopper Magnet - 14" (Used before September, 1967)	1
	042186	Hopper Magnet - 14" (Used after August, 1967)	1
5	3E60B[B]	Hopper Magnet - 16" (Used before September, 1967)	1
	042187	Hopper Magnet - 16" (Used after August, 1967)	1
6	6H75	Wagon Box Spout	1
	650056	Hex.Hd.Cap Screw 3/8 x 3/4	2
	653010	Hexagon Nut - 3/8	2
	654006	Plain Washer - 3/8	4
7	6J78	Wagon Box Spout Pivot	2
8	6H108A	Bagger Shutter	1
	650001	Hex.Hd.Cap Screw 1/4 x 1/2	2
	653005	Hexagon Nut - 1/4	2
	654022	Lock Washer - 1/4	2
9	6H128	Wagon Box Spout Inlet	1
10	6H129	Attachment Clamp	1
	650036	Hex.Hd.Cap Screw 5/16 x 2	1
	653007	Hexagon Nut - 5/16	2
11	6H133	Wagon Box Spout Assembled	1
12	6H134A	Bagger Assembled	1

Ref. No.	Part No.	Part Name	No. Req.
13	6H140	Bagger Bolt 5/16 x 1-1/4	2
	653007	Hexagon Nut - 5/16	6
	654004	Plain Washer - 5/16	4
14	6H148	Conveyor Coupling	1
	650032	Hex.Hd.Cap Screw 5/16 x 1-1/2	2
	653007	Hexagon Nut - 5/16	2
	654024	Lock Washer - 5/16	2
15	6H150	Conveyor Housing Extension	1
	650056	Hex.Hd.Cap Screw 3/8 x 3/4	3
	653010	Hexagon Nut - 3/8	3
	654026	Lock Washer - 3/8	3
16	6H151	Conveyor Extension	1
17	17H286A	Fender	2
	650028	Hex.Hd.Cap Screw 5/16 x 1	4
	650029	Hex.Hd.Cap Screw 5/16 x 1-1/4	2
	653007	Hexagon Nut - 5/16	6
	654004	Plain Washer - 5/16	18
	654024	Lock Washer - 5/16	6
18	H8010	Fender Spacer	2
19	040859	Trough Cover	1
20	040860	Trough Cover Clip	4
21	042005	Transmission Grease Retainer	1
22	042237	Drop Center Wheel (For 11.00 x 15 Flotation Tires)	2
23	043658	Bagger Extension Pipe	1
24	550070	Drop Center Wheel (For 14" tires Tires)	2

[A]For Replacement, Order 6H134A.
[B]For Replacement, Order 042187.

65MX - NUMERICAL INDEX

Part No.	Page No.
2E1J	24
3E1W	44
5H1E	23
6H1L	7
12E1A	21
13E1D	18-19
23H1B	46
23H1C	47
2H2B	24
5H2H	23
6H2A	51
23H2B	46
23H2C	47
2H3B	24
5H3G	23
13E3A	19
13E3B	18
13H3C	45
23H3B	46
23H3C	47
2E4D	24
23H4B	46
23H4C	47
2E5	24
3E5K	44
3E5L	44
13E5	44
13E5B	18
13E5C	18
13E5D	18
1H5D	24
23H5B	47
5E6E	21
2H6D	24
2H6E	24
23H6A	47
23H7	46
13E8	18-19
23H8	46
6H9	51
13H9C	45
23H9	46
23H9A	47
5H10E	23
13E10	19
13E10A	18
23H10	46-47
3E11D	32
13E11	18-19
5H11B	23
23H11	46-47
2E12A	24
3J12A	32
5H12E	23
23H12	46
23H12A	47
2E13A	24
3H13A	32
13H13	27
13E13A	18-19
13E13B	18
6H14D	7-38
6H14F	38
6H15C	38
23H15A	46
6H16A	38
13H16	19
23H16B	46
23H16C	47
3E17B	32
6H17D	38
2E18B	24
9E18D	44
13H18B	18-19-46-50
13H18C	18
23H18A	46
13H19B	18-19-50
23H19A	47
23H19B	46
2E60	24
5H20A	23
13E20	18-19
13H20B	19
23H20A	47
23H20B	46
23H21A	46
13E22	18
2H22S	24
13H22A	19
13E23	18
13E23A	18
5H23C	23
13H23	19
3E24B	32
13E24	18
13H24	18-19
23H24	47
3E25B	32
13H25	19
23H25A	47
23H26	47
1E27J	21
6E27	51
19E27	28
23H27	47
13E28	18-19
23H28A	46
13E29	18
13H29	19-25
23H29	46
23H30	46
23E31A	46
23H31	46
3E32G	33
13H32	18
13H32B	18-19
23H32	46
2E33	24
3H33A	33
23H33	46
3E34	33
3E35	33
3E37C	33
13E37	18-19
13H38	18-19
13E39	18-19
13H40	45
13H41A	45
3E42A	25-33
4H42	10-15-33
13H42	45
5H43B	23
6H46E	5
13H46	45
1H48J	24
3H50C	33
6H51B	5
5E52A	23
1H52A	21
1E53D	21
3H53	33
3H55	33
3H55A	7-33-37
6H55E	15
13H55	19
13E56	18-19
5H56G	23
13H56	19
7H57A	33
13E57	18
13H57A	18-19
1H58D	21
13H58	19
1H59B	21
13H59	18-19
1H60B	21
3E60	51
3E60B	51
13E60	24
13E61	18-19
5E62	23
13E62	18-19
5H63	18-19
13E63	18-19
13E64	19
13E64A	18
13E65	18-19
13E66	18-19
13E67A	19
5E68	23
3E69F	44
13H69	45
5H70	23
13H70	45
5H71B	23
13E71	18
5H72	23
6H72E	15
1E73B	21
5H73	23
7H73	10-15
7K73	7
5H74	23
13E74	18
5H75	24
6H75	51
5E76	23
1H77	21
5E77	23-25-33 41-43
13E77	18
6J78	51
3E82A	44
3E84	33
1E85	21
3E85	33
1E86	21
1E87	21
6H87D	13
6H87E	13
1E88	21
3E88E	33
1E89	21
1E89A	21
1E90A	21
6H90C	7-35
1E91	21
1E91A	21
6H91B	37
1E92	21
3E94B	33
1E95	21
1E95A	21
1E95B	21
1E95C	21
1E95D	21
1E95E	21
1E95F	21
1E95G	21
1E95H	21
1E95J	21
1E95K	21
1E95L	21
1E95M	21
1E95N	21
1E95P	21
1E95R	21
100	
1E100	24
3H100	33
3E102B	33
3E105	33
3E107	33
3E108	33
6H108A	51
6H109C	13
6H110C	13
6H112	13
6H113A	13
6H114D	15
6H115A	13
3E116A	44
3E120	44

Part No.	Page No.
6H120D	15
6H120E	15
7H120	39
3E121	44
6H121D	15
6H121E	15
3E122A	44
3E123	44
3E124	33
3E126	33
3E126A	33
3E127	33
3E128	33
6H128	51
3E129	33
6H129	7-51
3E130	33
6H130	15-23
3E131	33
3E132	33
6H132C	13
6H132D	13
3E133	33
3E133A	33
6H133	51
3E134A	33
6H134A	51
3E135	33
6H135A	15
6H135B	15
3E136	15
17H136A	5
3E137	33
6H137B	13
17H137B	10
3E138	33
17H138A	10
3E139	33
17H139	10
3E140	33
6H140	51
17H140	28-33
3E141	33
17H141B	10
3E142	33
6H142A	13
17H142A	10
3E143	33
6H143C	25
17H143A	10
3E144	33
6H144B	13
17H144	10
3E145	33
17H145	10
3E146	25-33
17H146	10
3E147	33
6H147	13
17H147A	7
17H147B	35
17H147C	7
3E148	33
6H148	13-51
17H148B	7
3E149	33
6H149	13
6H150	51
17H150	7
6H151	51
17H151	7
17H151A	35
3E152	44
17H152	7
17H152A	7
3E153	44
17H153B	7
17H153C	7
3E154	44
6H154A	13
17H154A	7
6H155	13
17H155	7
17H155A	35
17H156	7
6H157	13
17H157B	7
6H158	13
17H158A	7
17H158B	7-35
6H159	13
6H159A	5
6H160	13
9H160A	25
9H160B	27
17H160A	5
17H161	7
A162	39
17H162	7
17H162A	7
17H163A	7
6H164	13
17H164A	7
6H165A	13
17H165B	12
17H166	15
17H168A	15
6H169	15
17H169C	15
6H170	15
17H170B	15
6H171	15
17H171	15
6H172	15
17H172	15
6H173	5
17H173	15
6H174	13
17H174	15
6H175	5
17H175E	12
17H175F	12
17H175G	45
17H175H	12
6H176	5
6H177	7
6H177A	35
17H177A	7
6H178	13
17H178A	7
17H178B	7
6H179	5
17H179A	7
17H180A	7
6H181	15
17H181A	7
6H183	13-28-31
17H183	25
6H184	35
17H184	12-46
17H184A	12
6H185	35
9H185C	31
9H185D	31
9H185E	28
17H185	12-15
6H186	13
9H186A	26-31
17H186	28-46-47
17H186A	12-45
9H187A	28-31
17H187A	8
17H187B	7-8
9H188A	25
9H188B	25
9H188C	26
17H188	8
17H189	8
17H189A	8
17H190	8
17H190A	8
9H191A	26
17H191A	8
9H192A	26
9H193C	28
17H195	15
17H196	15
9H199A	31
9H199B	31
9H199C	28
200	
9H200A	31
9H200B	31
9H200C	28
9H201A	31
9H201B	31
9H201C	28
9H202A	28-31
17H202	13
9H203B	28-31
17H203A	15
17H204C	37
17H205C	37
17H206B	37
9H207B	31
9H207C	31
9H207D	28
17H207	37
17H208	37-47
17H209	37
17H210B	37
9E212B	44
17H212A	37-50
9E213A	44
17H213A	44
9E214D	44
9E215B	44
9E216B	44
H217	15
9H217	31
9H217A	29
17H218B	37
17H220B	38
9H222B	26
9H223A	31
17H223A	38
17H224A	38
17H225B	38
17H227C	37
9H228A	26
9H228B	26
9H229A	26
9H229B	26
9H231A	31
9H233A	29
17H236A	12-50
17H238	10-26
9H240	33
17H240A	45
9H242	33
9H242B	26
17H244A	8
17H244B	8
17H245	8
9H246A	29
9H247	15
9H248A	26
9H251	15-29
9H251A	31
17H257C	33
17H257D	41
9H260B	26
9H260C	26
17H260	39
9H261B	31
9H261C	31
9H261D	29
17H261	39
A262	15
H263D	45
9H265B	26
17H265A	39
17H266A	39

65MX - NUMERICAL INDEX

Part No.	Page No.
17H267A	39
17H268A	39
17H269	39
9H270A	26
9H270B	26
17H270	39
17H271	39
H273	26
17H273	39
9E274A	44
17H274	8
17H274A	8
H275	8-12-15-23 31-45-46
9H275	31
9H275A	29
17H275A	5
9E279	44
9H281	44
17H281	18
9E282	44
17H282	19
17H284	26
9H285A	26
9H285B	26
9H285C	26
17H286A	51
9H288A	31
17H289A	41-43
17H290A	43
17H290B	41
17H291A	43
17H291B	41
9H292B	31
17H292A	41-43
9H293	31
9H293A	31
17H293A	41-43
17H294A	41-43
17H295A	41-43
17H296A	41-43
17H297A	43
17H297B	41
17H298A	41-43
17H299A	41-43
300	
9H300	33
17H300A	41-43
17H301A	43
17H301B	41
17H302A	41-43
9E306	44
17H306A	43
17H307A	43
17H308	43
17H308A	41
17H309A	43
17H309B	41
17H310B	41
9H311	31
17H311A	41-43
9H312	31
17H312	43
17H312A	41
9H313	31
17H313A	43
17H313B	41
9H314	31
17H314A	43
17H314B	41
9H315	31
17H315	43
17H315A	41
9H316	31
17H316A	43
17H316B	41
17H317	43
17H318	41-43
9H319A	26
17H319A	41-43
9H320	31
17H320A	43
17H320B	41
9H321	26
17H321A	41-43
9H322	26
17H322	12
17H322A	45
9H323	26
17H323	8
9H324	26
17H324	18
9H325	26
17H325	12
9H326	26
17H326	41
9H327	26
17H327	8
9H328	26
17H328	8
9H329	26
17H329	8
17H329A	8
9H330	26
9H331	26
17H331	5
9H332	26
17H332	5
9H333	26
9H333A	26
17H333	8-44
9H334	26
9H334A	26
17H334	12
9H335	26
17H335	18
9H336	26
9H336A	26
17H337	8
9H338	27
9H338A	27
17H338	8
9H339	31
9H339A	29
9H340	31
9H340A	29
17H340	5
17H340A	5
9H341	27
17H341	5
9H342	27
9H342A	27
17H342	8
17H342A	35
9H343	27
17H343	37
9H344	27
17H344	37
9H345	31
17H345	37
9H346	27
17H346	27
9H347	27
17H347	27
17H348	8
9H349	31
17H349	18
9H350	31
17H350	41-43
9H351	27
17H351	41-43
9H352	27
17H352	43
17H352A	41
9H353	27
9H353A	27
17H353	41-43
K354	18-19
9H354	27
17H354	43
17H355	41-43
17H356	43
9H357	27
17H357	43
9H358	27
9H359	27
9H360	27
9H361	31
9H362	31
17H362	5
9H363	27
17H363	38
9H364	27
17H364	47
17H364A	35
9H365	27
9H366	29
S-327	37
9H367	29
17H367	8-35
S-368	29
17H368	41
9H369	29
17H369	41
9H370	29
17H370	41
9H371	29
17H371	41
9H372	29
17H372	42
9H373	29
17H373	42
9H374	29
9H375	29
17H375	42
17H376	42
17H377	42
17H378	42
17H379	42
17H380	42
17H381	42
17H382	42
17H383	42
17H384	42
17H385	42
17H386	42
17H387	29-42
17H388	42
17H389	42
17H390	8-35
17H392	5
17H394	8
400	
17H401	35
17H402	35
17H403	35
17H404	35
17H404A	35
17H405	35
17H406	35
17H407	35
17H408	35
17H409	35
17H410	35
17H411	35
17H412	35
17H413	35
17H413A	35
17H414	35
17H416	8
17H417	8
17H418	8
17H419	8
17H420	35
17H421	8
17H422	12
H474	8
500	
A571	39
700	
H714B	12

Part No.	Page No.
900	
D932A	10-13-15 27-31-42
D936	15
D937	15
D974A	45
D975B	33
5000	
H5026	39
6000	
H6046	39
H6053	16-42
H6053A	39
7000	
H7100	18-42-43
H7126	15
H7163	13
H7549	46-47
H7621B	38
H7838	18
8000	
H8010	51
H8048	27
H8054	33
H8084	33
H8225	12
H8228	42-43
H8254	12
H8315	15-27-29
H8345	33
H8352A	15-33
9000	
D9048	13
D9048A	15-27
D9048C	15-27
D9061C	46-50
D9117	5
D9130	45-46-47
D9139	15-27
D9139A	15-27
10000	
U10014C	42
U10023	13
U10063	29-43-44
U10102	13
U10104	13
B11023B	45-50
B11024B	45-50
B11029A	16-27
B11156	16
B11162	13-31
B11221	27
B11296	47
B11335	16-27-42-43
M12074	16
M12141	33
R13027	16
R13033D	5
R13138	43
R13139A	5
R13140A	5
R13177	33
R13227	12
C14000	37
C14002	37
C14005	37
C14008	37
C14036	18-37
C14054A	37
C14095	37
Y15075	8
040000	
040003	18
040016	16
040026	23
040148	21
040171	28
040174	29
040212	16
040214	16
040245	13
040246	13
040273	16
040277	39
040278	13
040316	7
040431	16
040547	18
040549	18-50
040603	16
040733	29
040736	29
040859	51
040860	51
040874	27
040886	8
040887	8
041129	10
041131	10
041132	10
041207	8
041487	35
041867	37
041912	29
041947	29
041948	29
041951	29
041954	28
041955	29
041957	29
041961	29
042005	51
042064	5
042066	5
042068	8
042070	8
042072	8
042083	13
042097	29
042118	16
042121	16
042123	15
042129	23
042171	23
042172	23
042185	23
042186	51
042187	51
042211	7
042212	15
042213	15
042214	16
042215	5
042217	5
042218	7
042221	5
042222	16
042223	8-35
042225	8
042226	15
042233	7
042237	51
042239	15
042249	35
042251	35
042258	27
042259	26
042380	37
042451	8
042630	15
042826	5
042901	23
042902	23
042903	23
043658	51
043883	10
044110	10
044255	29
044257	27
044396	13
044397	7
044413	5
044500	10
044508	7
044594	10
044596	10
044645	10
044651	16
044652	16
044673	8
044674	8
500000	
500005	41
500048	29
500049	31
500058	18
500075	12
500078	47
500085	18-45
500151	41
500153	18
500166	46
500168	47
500211	18
500212	18
510002	50
510003	50
510022	50
510027	50
510029	50
510030	50
510033	50
510036	50
510037	50
510038	50
510051	50
510052	50
510058	50
510061	50
510062	50
510063	50
510064	50
510069	50
510074	50
510083	50
510097	50
510101	50
510102	50
510105	50
510106	50
510113	50
510114	50
510125	50
510127	50
510129	50
510130	50
510138	50
510158	50
510159	50
510160	50
510161	50
510178	50
510179	50
510180	50
510181	50
510182	50
510183	50
510184	50
510185	50
510186	50
510187	50
510208	50
510209	50
510304	51
510305	51
520000	10-37
520001	10-37

65MX - NUMERICAL INDEX

Part No.	Page No.
520002	24
520009	27
520025	5
520027	5
520028	5
520032	10
520033	10
520046	37
520047	37
520062	10-33
520063	8-12-23-27 31-42-45-46
520064	10
520065	12-18
520084	8-10-12-23 31-33-42-45-46
520085	10-12-18
520098	18-19
520099	18-19
520111	19
520117	24
520146	27
520184	18-19
520188	18
530000	37
530008	10
540000	10
540001	10
540002	37
540007	18-19
540023	27
540024	27
540035	18
550002	5
550018	5
550022	5
550033	5
550041	5
550070	51
570002	13-15-24 26-31-32-33
570004	12-13 15-18-37
570005	25-26-27
570006	5-13
570011	15
570012	15-24
570014	26-31-41
570015	13
570016	10-37
570023	26
580066	39
580073	5-10
600000	
620005	5
620028	5
620032	39
650001	18-27
650003	7-10 21-37-38
650005	5-13-23 35-38-51
650008	18-19
650021	21
650023	7-8-10 37-41-42-44
650025	7-10-12-13 16-18-21-23-26 27-35-41-42-44
650028	5-7-8-15 16-18-21-27-33 35-37-38-41-42-51
650029	8-16-21 26-42-51
650031	5-8-13 32-35-44-51
650034	26-42
650040	39
650045	26
650047	13
650051	23
650052	41
650056	8-21-37-51
650060	5-8-13-15 18-21-24 26-37-39-42
650062	5-7-13-16 18-26-35-39
650064	13
650066	16
650068	41-42-44
650070	42
650087	37
650104	42
650106	5-37
650109	37
650112	46
650115	45-47
650117	23-41
650119	5
650122	5-25-26-33
650124	15
650128	31
650150	12
650190	21
650195	27-41
650196	13-15-26
650197	24-27-31
650198	27
650201	16-23-25 26-27-33-39
650202	15
650203	18-19 25-27-33
650204	13-26-31
650205	39
650206	12-18-19-25 26-27-33-39-41
650207	18-24
650210	15
650212	12-21-37 45-46-47
650214	15-18 32-37-46
650216	10
650217	19
650227	24
650236	42
650240	23
650252	37
650261	8-35
650262	38
650263	44
650264	38
650266	7-21 27-41-42
650269	8-23-35-44
650271	35
650273	35
650301	21-41-42
650314	21-44
652010	33
652012	10
652020	37
652024	23
652026	8-12-15-16 23-26-41-42
652027	27
652089	16
652046	12
652047	18-27
652048	12
652081	44
652122	44
652123	44
653005	7-8-18-21 23-27-35 37-38-44-51
653007	5-7-8-12 13-15-16-18-21 23-26-27-33-35 37-38-39-41-42
653010	5-7-12-13 15-16-18-21-26-27 35-37-39-42-44-51
653018	5-7-10-15 18-21-23-25 33-37-41-42-44
653021	12
653026	18-19
653034	24
653037	27
653044	21
653053	26
653071	13-38
653073	5-7-8-13 15-18-35-37-41-42
653075	24-33-39 41-42-44
653077	5-26
653083	26
653090	5
653093	7-18-35
653094	7-27
653098	44
654002	7-8-18-23 27-35-37-38
654004	5-7-8-12-13 16-18-21-26-33 35-37-41-42-44
654006	5-7-8-15-16 18-21-26-27-33 35-37-39-41-44-51
654009	5-10-15 23-25-26-27 33-37-41-42-44
654012	12-26
654014	26
654015	5
654022	7-8-10-18 21-23-27-35 37-38-44-51
654024	5-7-8-10-12 13-15-16-21-18 23-26-27-33-35 37-38-41-42-44-51
654025	5-7-8-12-13 15-16-18-21-23-26 35-37-39-42-44-51
654030	5-7-10-15 23-25-33-37-41-42
654032	12
654512	41
654519	23
655004	24-39-46
655005	27
655007	10-11-26
655008	7
655009	26
655013	5
655015	27-31
655017	24-31
655019	10-15 18-26-33
655020	7
655021	10
655030	32
655031	31
655504	21-31-47
655505	23-31
655507	7-10-12-13 15-18-19-26-31 32-33-41-45-46-47
655510	19
655522	24
660001	10
660010	39
660014	39
660020	39
660021	39
660024	39
660027	39
660031	13
660033	5
660040	39
660041	39
660045	39
666000	50
666002	31

Where Quality is a Family Tradition

GEHL COMPANY WEST BEND, WISCONSIN 53095 U.S.A.

Form No. 2132G/3M1P1068

Printed in U.S.A.